




HP Omni 10 Camera Replacement

How to remove and replace the web-camera

Written By: Alex Miller

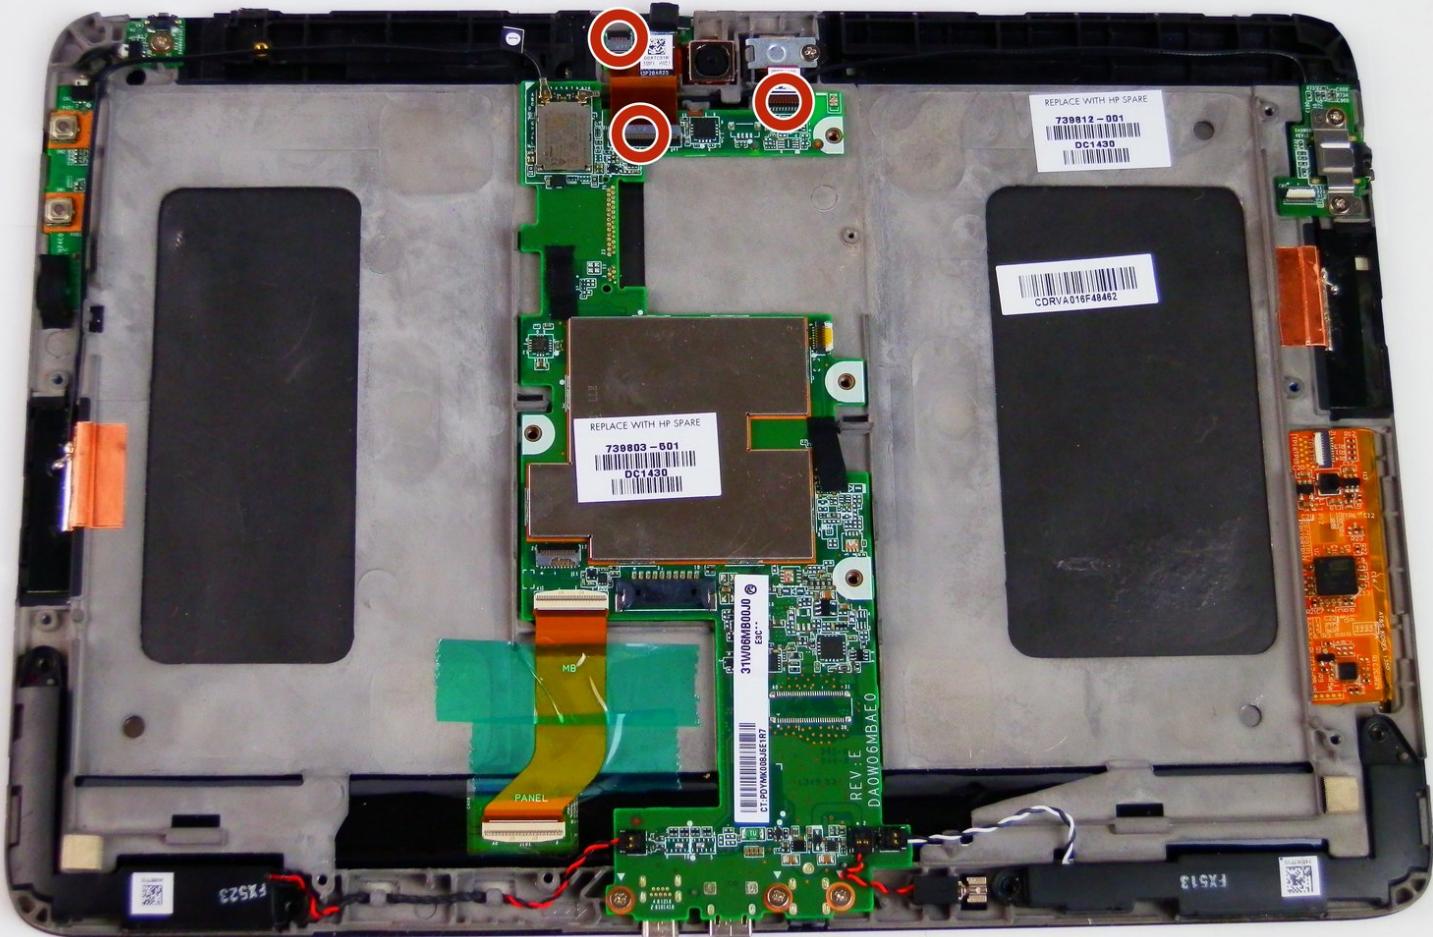

INTRODUCTION

Using a pair of tweezers and a 00 Phillips head screwdriver, this guide will show how to remove a web camera from an HP Omni 10 tablet in roughly 3 to 4 minutes.

TOOLS:


- [Tweezers \(1\)](#)

Step 1 — Camera




- Pull the black plastic security tabs into an upward position.

Step 2

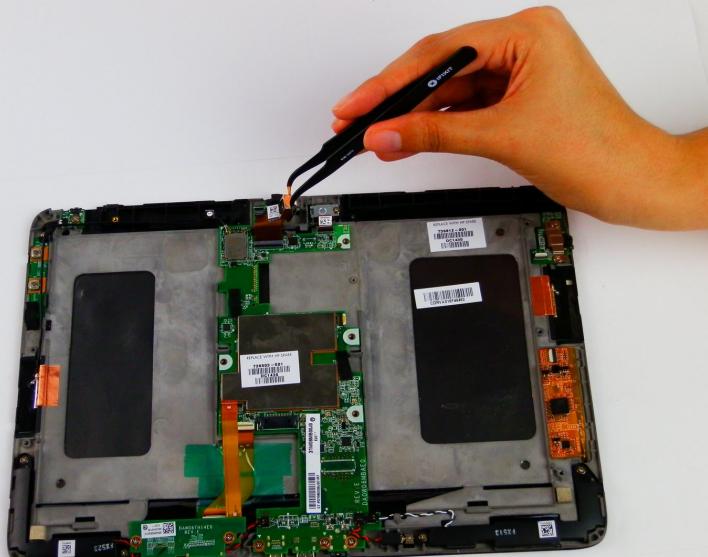

- With a pair of tweezers, grab the camera and pull it out of the socket it is in.

Step 3

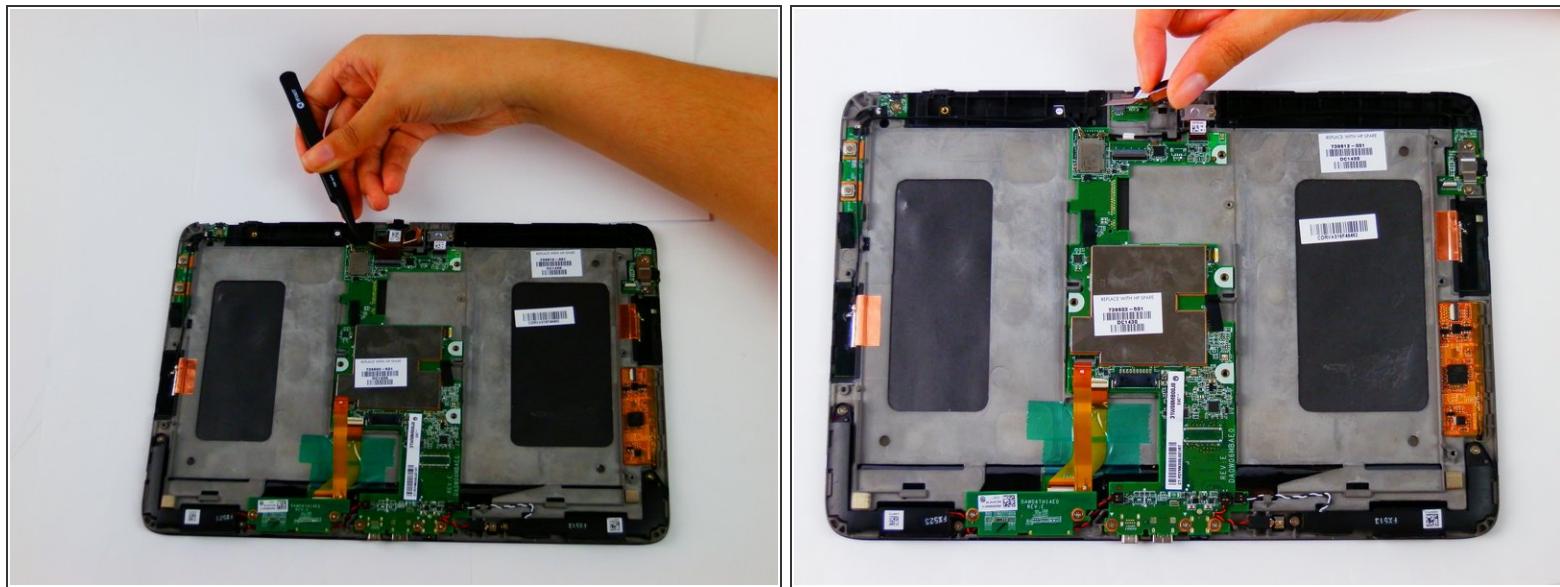

- Pull the film connector out and lift the camera and film out.
- ⓘ The film will be attached to the tablet via adhesive, so it may stick.

To reassemble your device, follow these instructions in reverse order.