



HP Omni 10 Micro Card Reader Board Replacement

How to remove and replace a micro card reader board.

Written By: Alex Miller



INTRODUCTION

Using a spudger and a 00 Phillips head screwdriver, this guide will show how to remove a web camera from an HP Omni 10 tablet in roughly 2 to 4 minutes.

TOOLS:

- 64 Bit Driver Kit (1)


Step 1 — Battery



- Remove the back cover from the tablet.

(i) The cover is securely fastened to the device and may be difficult to remove.

Step 2

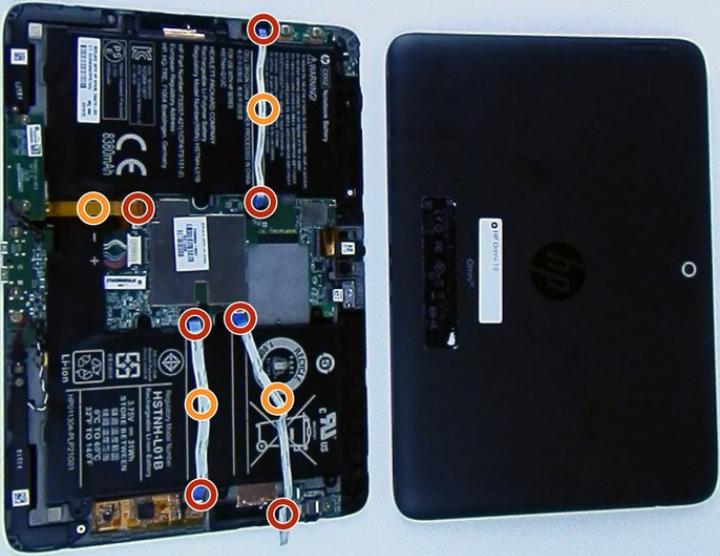

- Push the black plastic security flaps into an upward position.

- Lift the small tab on the security strips up and peel them across the battery. They will be attached via adhesive.

- Lift the tab on the strip up and pull it across the battery.

(i) The orange strip does not fully detach from the tablet like the other three. It will only detach from one side.

Step 3




- Unscrew the ten 3.3 mm screws securing the battery using a 00 Phillip's head screwdriver.

Step 4



- Unhook the cord from the edge of the battery.
- Pull the wire circuit out and down.

Step 5

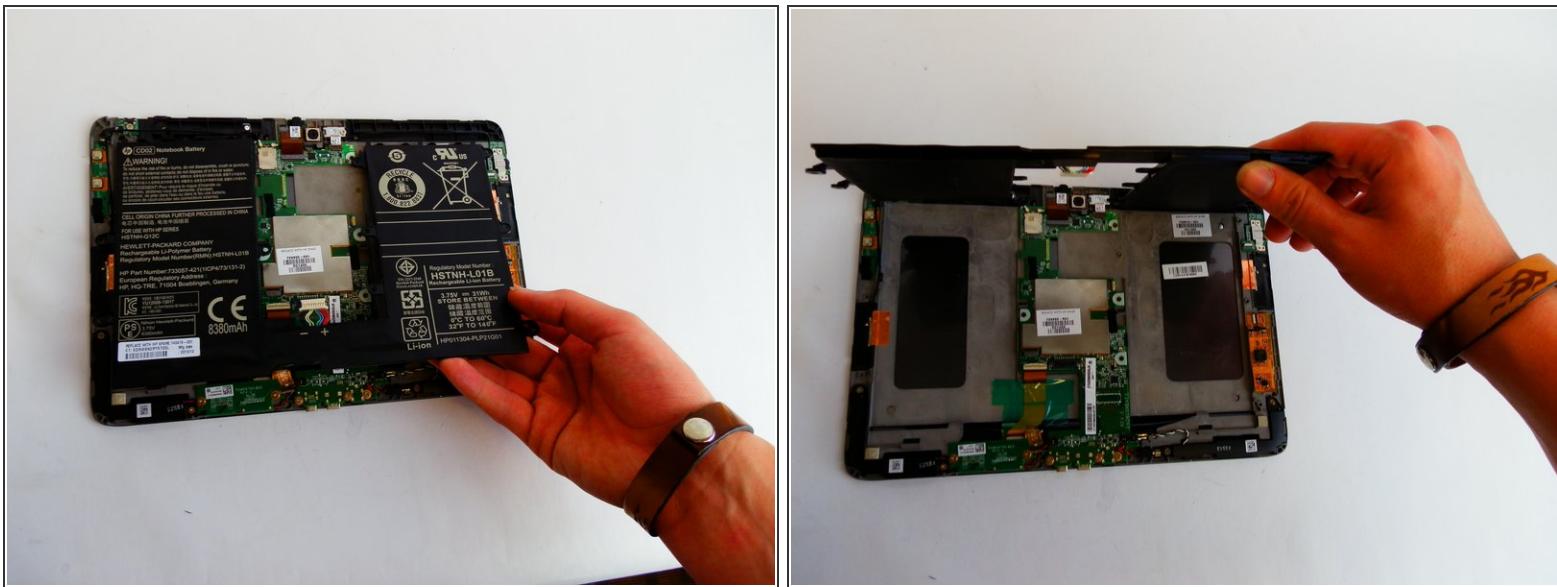

- Lift the battery up by its edges and remove it carefully. There will be adhesive holding the battery down.

Step 6 — Micro Card Reader



- Unscrew the two 3.3 mm screws using a 00 Phillip's head screwdriver.

Step 7



- Lift and remove micro card reader board.

To reassemble your device, follow these instructions in reverse order.