



# HP PSC 2410 Photosmart All In One Printer Scanner Tray Replacement

This guide covers the steps to remove the scanner tray from the printer body.

Written By: Cody Long



## INTRODUCTION

The scanner tray is the part of the printer that houses the entire scanner. It is connected to the printer by two hinges, 3 white strip wires, and 1 orange brown red and black wire. After the tray is removed the feed rollers can be cleaned, and printer carriage can be replaced.

### TOOLS:

- [T10 Torx Security Bit Screwdriver](#) (1)

## Step 1 — Remove Back Panel




- Remove the back panel by inserting your fingers into the indentations next to the tabs. Press the tabs inward towards each other while pulling the back panel toward you.

## Step 2 — Remove Inner Back Panel




- Using the T10 Torx Security Bit Screwdriver, unscrew the screws on the upper left and right corners of the inner panel to remove the inner back panel.

## Step 3 — Remove Upper Portion

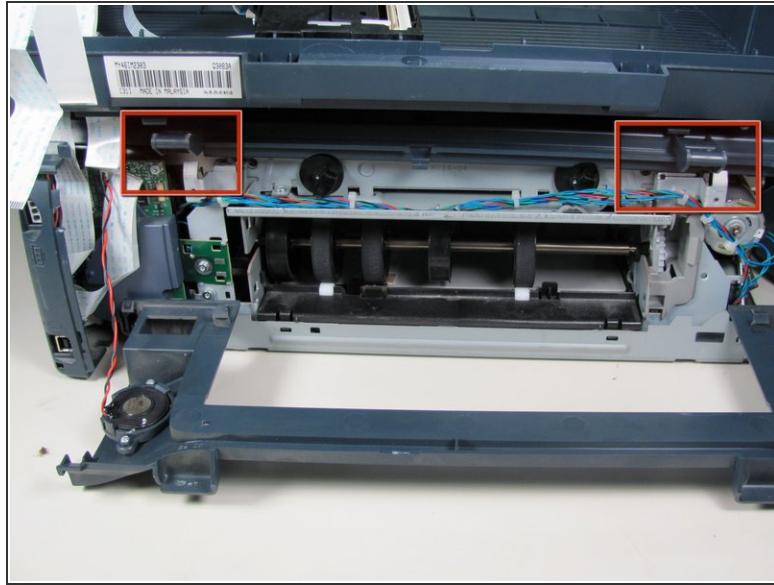

- Press down on the two plastic hinges to remove the upper portion of printer.

## Step 4 — Unplug Speaker Wire

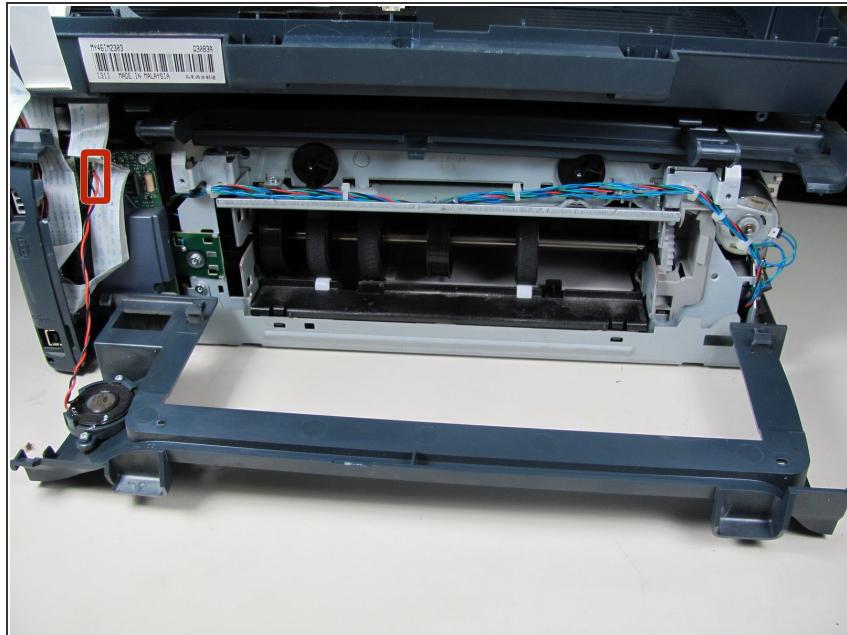

- To unplug the speaker wire, grasp the plastic plug on the end of the speaker wire then gently pull the


plug away from the printer until removed.

## Step 5 — Removing Scanner Tray



- Rotate the printer so the paper tray is facing towards you.
- Gently lift the scanner tray up and away from the printer.
- Press the gray plastic tabs inward toward to release the tabs from the printer.


## Step 6 — Removing Scanner Tray - cont.

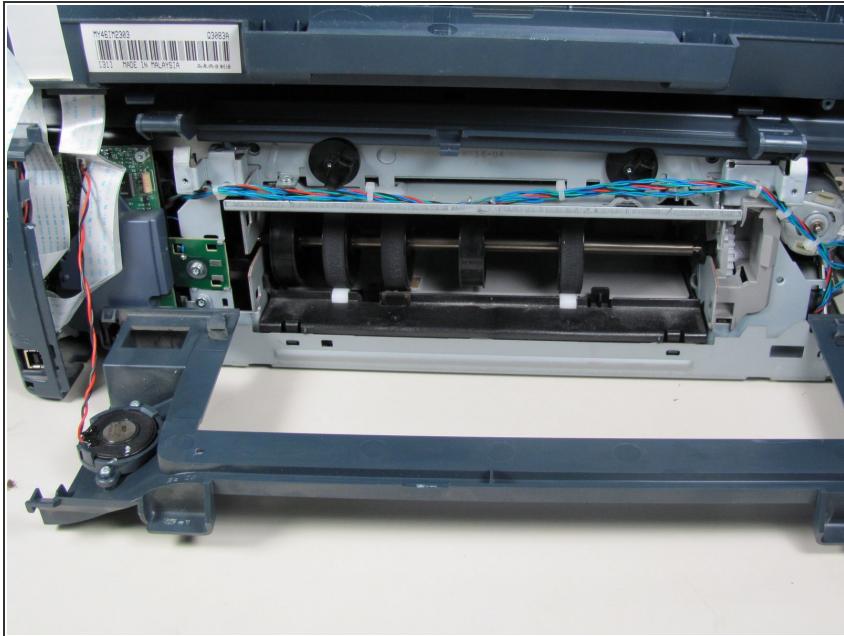

- Returning to the back of the printer, remove the scanner from the back hinges.

***i*** With pressure applied, the scanner will detach easily.


## Step 7

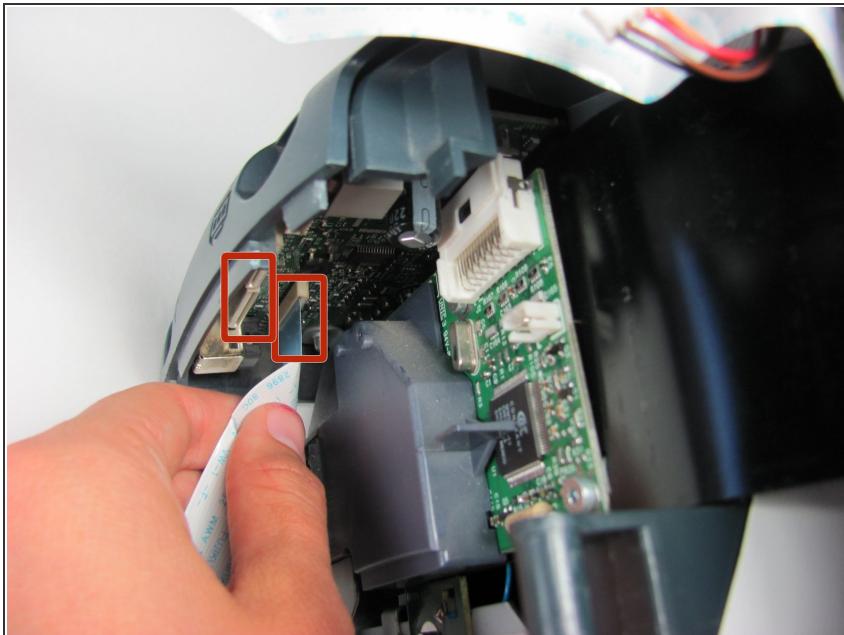

- Gently grasp and unplug the two white ribbon cables from the printer body.

***i*** Be sure to grasp the cable at the connector and not to pull on the wires themselves.

## Step 8

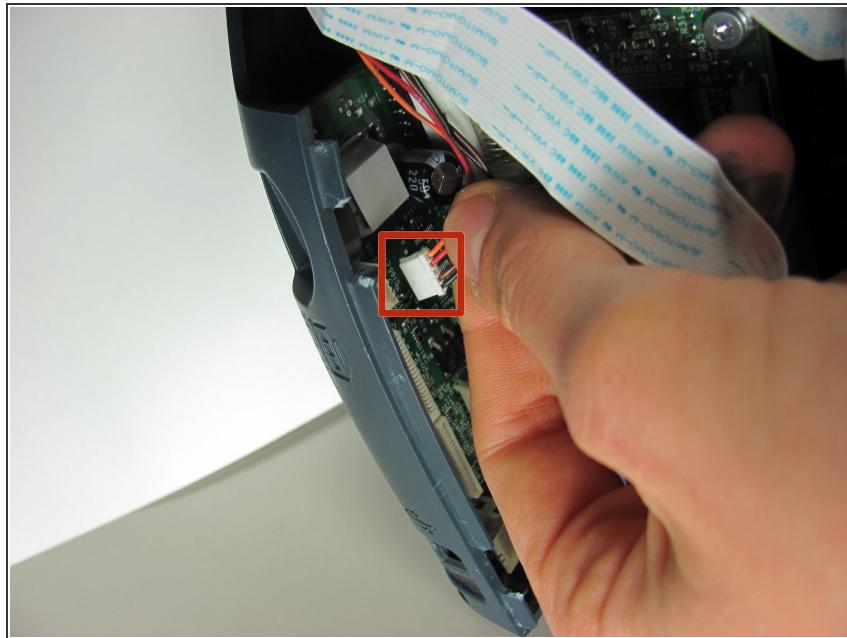

- Unplug the white plastic multi-wire connector with the orange, black, red, and brown wires from its port.
  - i* Be sure to grasp the white connector and not to pull on the wires themselves.

## Step 9 — Detaching the Scanner Tray



- Detach the scanner tray from the printer by lifting the scanner tray off the printer body.

To reassemble your device, follow these instructions in reverse order.