



HP Pavilion 15-AB153NR CD/DVD Drive Replacement

This guide will teach you to remove and replace the CD/DVD drive in your HP Pavilion 15-AB153NR.

Written By: Nicole Vachon



This document was generated on 2020-01-14 12:24:18 AM (MST).

 **TOOLS:**

- Phillips #000 Screwdriver (1)


Step 1 — CD/DVD Drive



! Make sure computer is powered off and unplugged.

- Flip computer over so that the bottom is facing the ceiling and the hinges are farthest from you.

Step 2

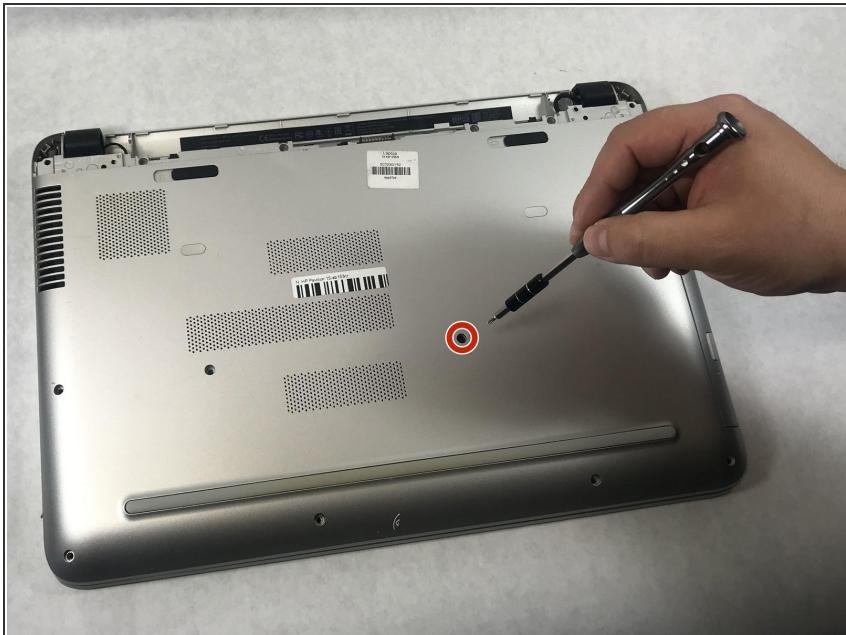

- Using the Phillips #000 screwdriver, remove the 7 mm screw on the middle right.

i There is an icon that looks like a CD stamped into the back panel near this screw.

Step 3



- Slide the drive out from the right side of the device.

To reassemble your device, follow these instructions in reverse order.