




HP Pavilion 15-AB153NR RAM Replacement

This guide will teach you to remove and replace the RAM in your HP Pavilion 15-AB153NR.

Written By: Nicole Vachon

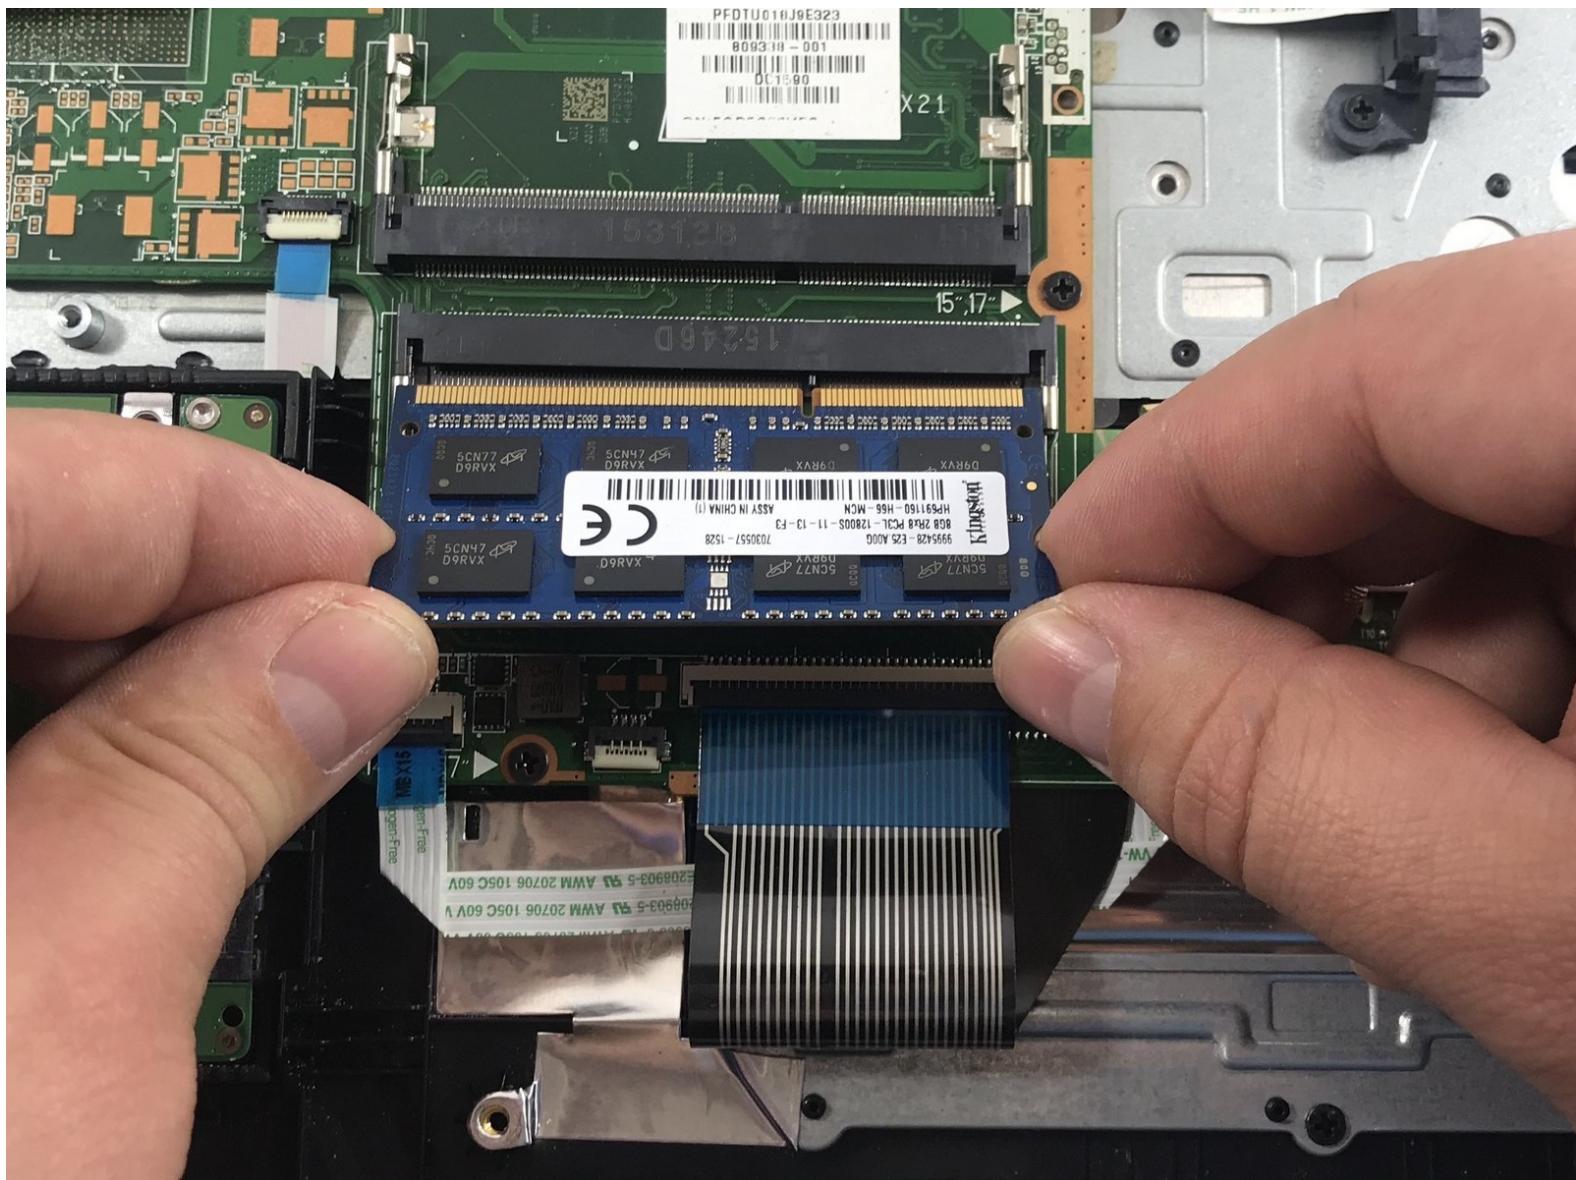

INTRODUCTION

This replacement will require the use of prying tools and screwdrivers. It can be completed with moderate difficulty. Make sure you have a moderate chunk of time to complete this task. You will need a clear work surface. Replacing the RAM can often solve problems including, but not limited to; slow performance and system freezing.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



ⓘ Ensure computer is turned off and unplugged.


- Slide the battery lock latch on the left to unlock. Slide from left to right to unlock.

Step 2



- Slide the battery release latch on the right with continuous force from right to left.
- Once battery pops, you may release latch.

Step 3

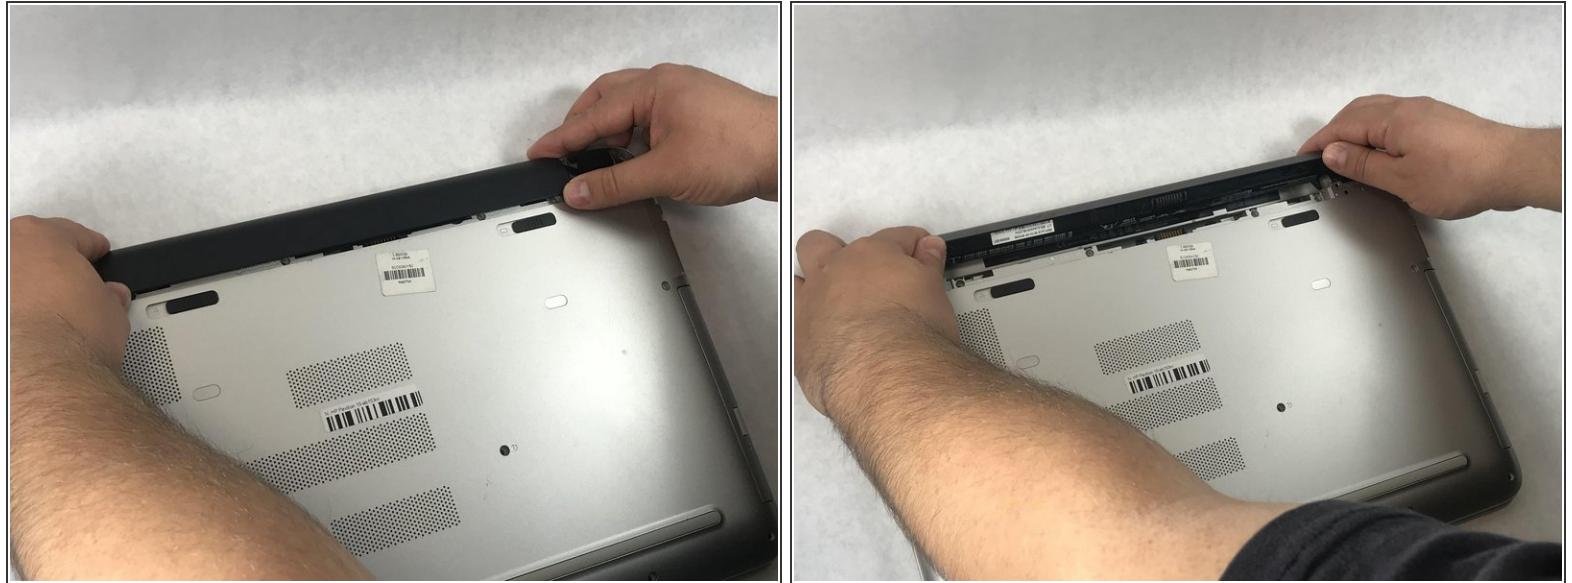

- Grab the battery, rotating upwards and away from you. This will remove the battery.


Step 4 — CD/DVD Drive



 Make sure computer is powered off and unplugged.

- Flip computer over so that the bottom is facing the ceiling and the hinges are farthest from you.

Step 5

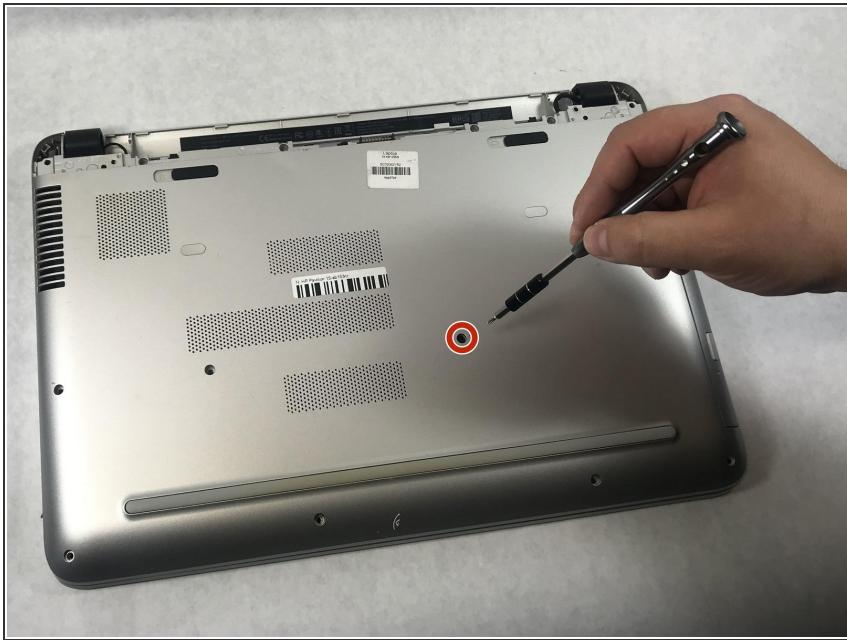

- Using the Phillips #000 screwdriver, remove the 7 mm screw on the middle right.


(i) There is an icon that looks like a CD stamped into the back panel near this screw.

Step 6




- Slide the drive out from the right side of the device.

Step 7 — Bottom Case Cover

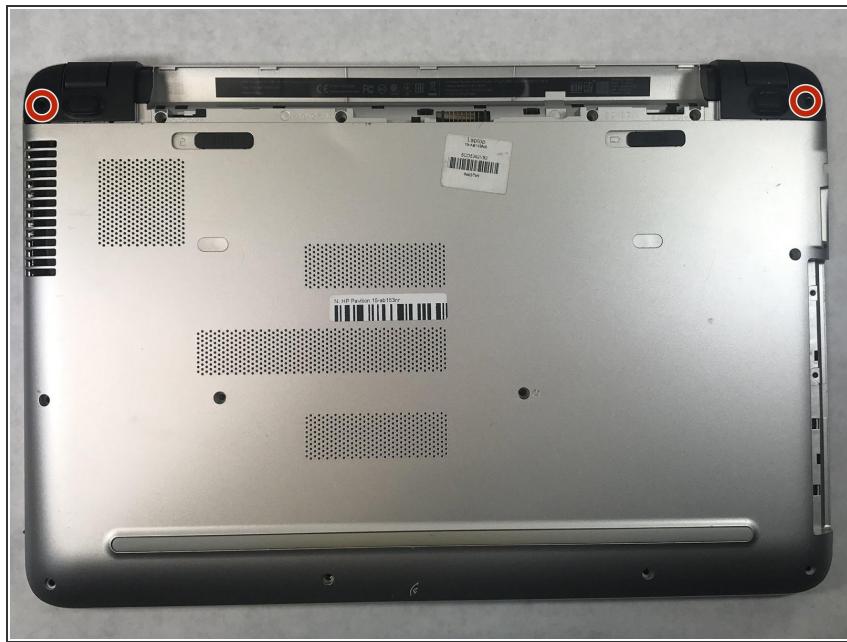

- Using the Phillips #1 screwdriver, remove the two 12mm screws located on the hinge covers.

Step 8

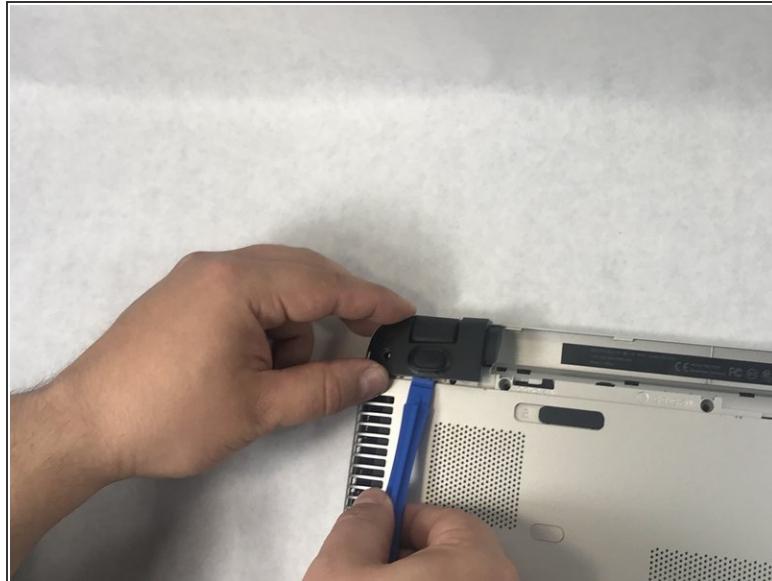

- Lift the corner covers off of the computer using a prying tool.

Step 9



- Remove the six 6.5mm screws using a Phillips #1 screwdriver that are located near the top of the laptop.

Step 10



- Remove the remaining seven 6.5mm screws using a Phillips #1 screwdriver that are securing the back cover.

Step 11



- Use the Phillips #0 screwdriver to remove the two 2mm screws.

Step 12



- Use prying tools to pry the covers off of the screwholes.
- Using the Phillips #1 screwdriver, remove the two 6.5mm screws.


Step 13



⚠ Be mindful of sharp edges on computer while using prying tools.


- Flip computer over and open so that the screen is facing you.
- Starting at the bottom right corner, insert the prying tool and lift upwards to loosen the back panel.
- Continue down all sides and corners of the device.

Step 14

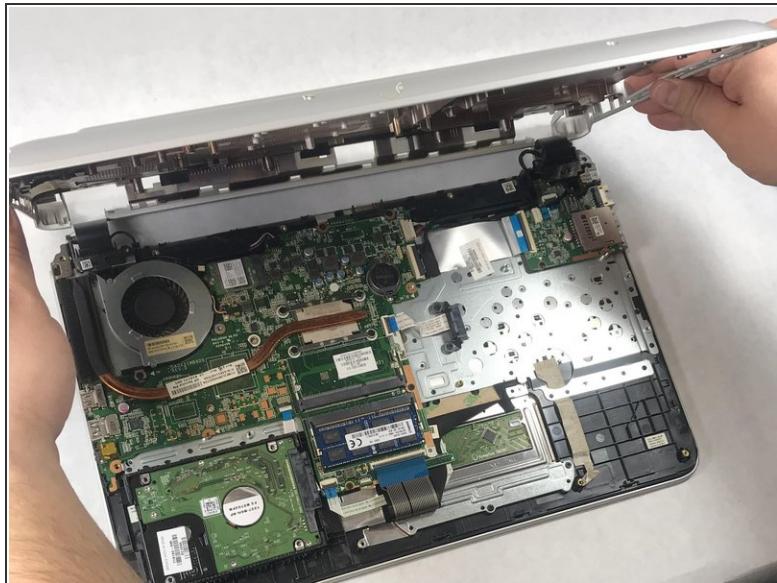

- Flip laptop back over so that the bottom is facing up
- After all sides are loosened, remove the back panel from the device.

Step 15 — RAM

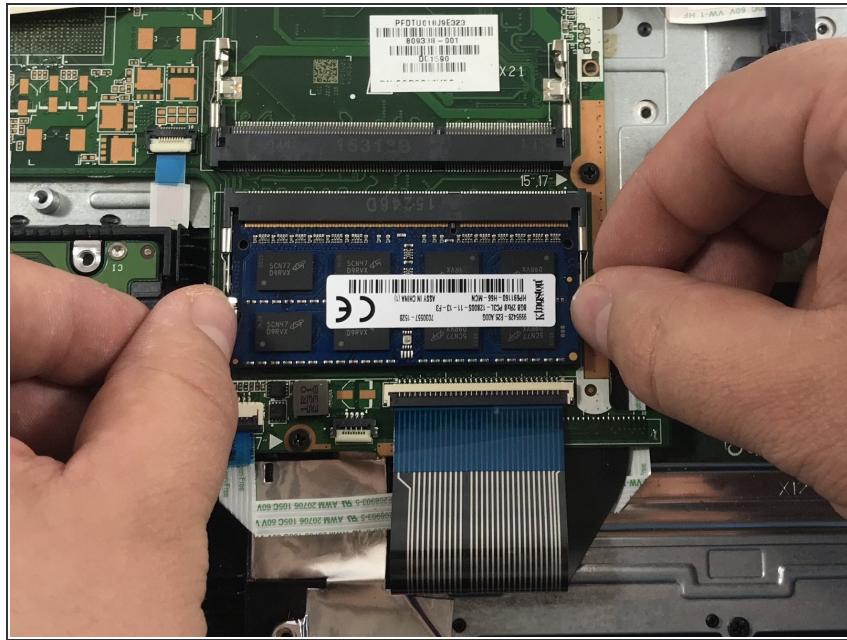

- Spread retaining tabs on each side of the RAM slot to release.

- *(i)* RAM should automatically tilt up.

Step 16



- Remove the RAM by pulling it away from the slot at an angle.

To reassemble your device, follow these instructions in reverse order.