



# HP Pavilion 15-ab243cl RAM Stick Replacement

This guide will demonstrate how to replace the RAM Stick. Useful for upgrading or replacing a failed RAM Stick.

Written By: Alexander Bicigo




## INTRODUCTION

This guide will show you how to access your RAM and replace/upgrade the RAM. There are two slots allowing for an easy RAM expansion upgrade. The replacement of the current RAM is covered in this guide.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Prying and Opening Tool Assortment](#) (1)

## Step 1 — Battery

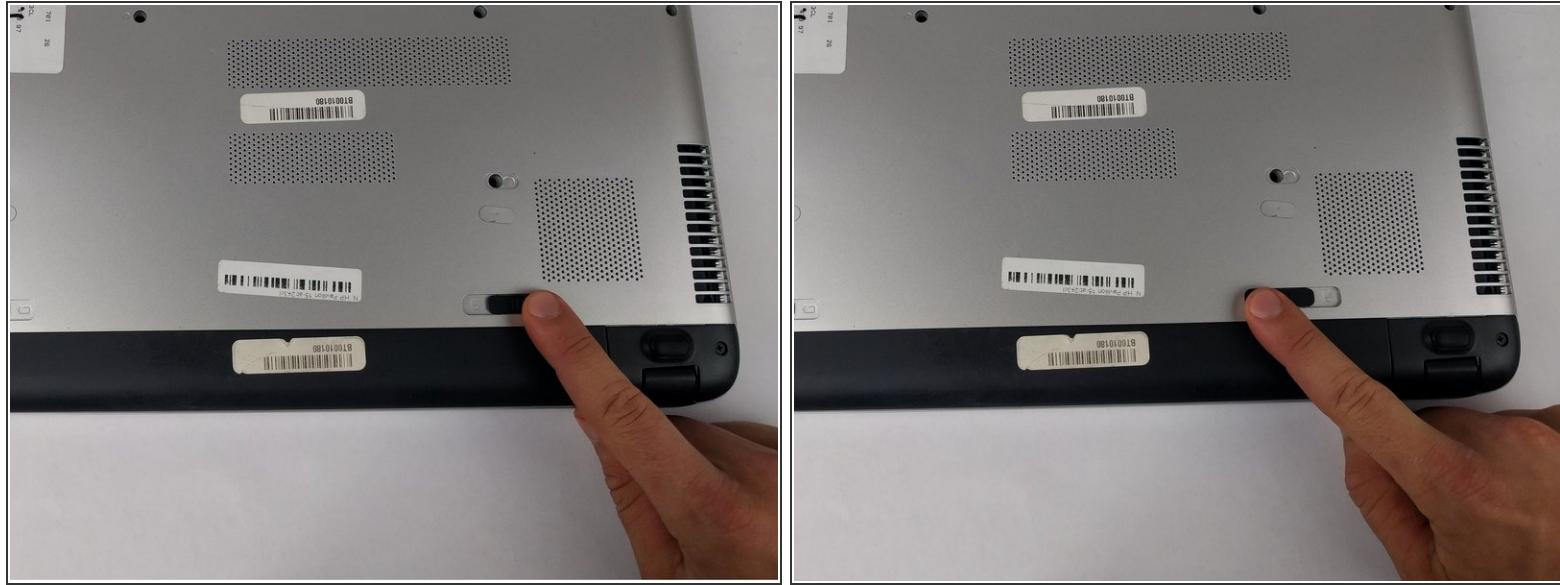

- Slide the battery lock tab toward the center of the battery to the unlock position.

## Step 2



- Slide the battery release switch to the right until the battery pops out.

## Step 3



- Grabbing the top edge of the battery, rotate it toward you and then lift upward to relieve the battery from its slot.

## Step 4 — Laptop Case



- With the battery removed, remove both black plastic covers with a plastic opening tool. Unscrew both 7.5 mm screws from the tabs, using a PH1 screw driver. Using a plastic opening tool, pry off both covers.

## Step 5



- Remove all 16 of the 3.5 mm screws with a PH1 screwdriver and pry/slide the CD drive out of laptop.

## Step 6



- With the CD drive removed, unscrew the two 2mm silver screws with a PH00.

⚠ These can strip easily, so take your time removing.

## Step 7



- Using a plastic opening tool, begin to pry edge of case away from the laptop. Work around the edges until all sides, except back, are open.

## Step 8




- On the back side of the laptop, where the battery is, there are 12 black plastic clips. Use a plastic opening tool and pry all of these clips, unlatching them from the case.
- Once clips are free, open the laptop. Rotating the case off, around the hinges, works best to remove the case.

## Step 9 — RAM Stick



- Locate the RAM stick, will be next to hard drive. Unclip the two silver retainers on each side.

## Step 10

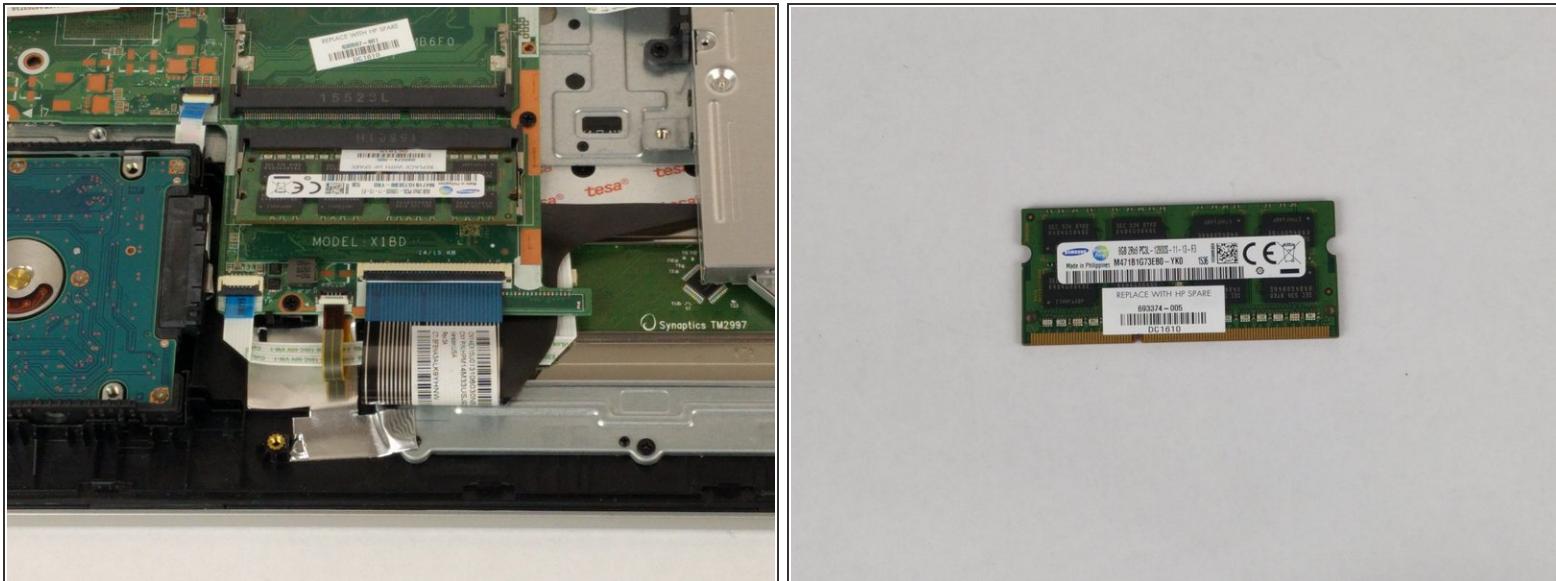

- The card will pop up when silver retainers are released. The card is ready to remove, pull straight out.

To reassemble your device, follow these instructions in reverse order.