



# HP Pavilion 15-n232nr RAM Replacement

This guide will go over the necessary steps required to remove the RAM in the HP Pavilion 15-n232nr.

Written By: Dalton Bowen



## INTRODUCTION

This guide will include the steps required in removing the RAM in the HP Pavilion 15-n232nr. This process will require the following tools: screwdriver and iFixit opening tools. This process does not require much expertise, but is rather tedious.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery



- Flip the laptop over.

## Step 2



- Slide the battery locks towards the center of the laptop. The battery will detach automatically.
- Remove the battery by sliding it away from the laptop housing.


## Step 3 — RAM



- Loosen the two 6 mm Phillips #1 screws on the back panel.


*(i)* These screws do not detach from back panel.

## Step 4

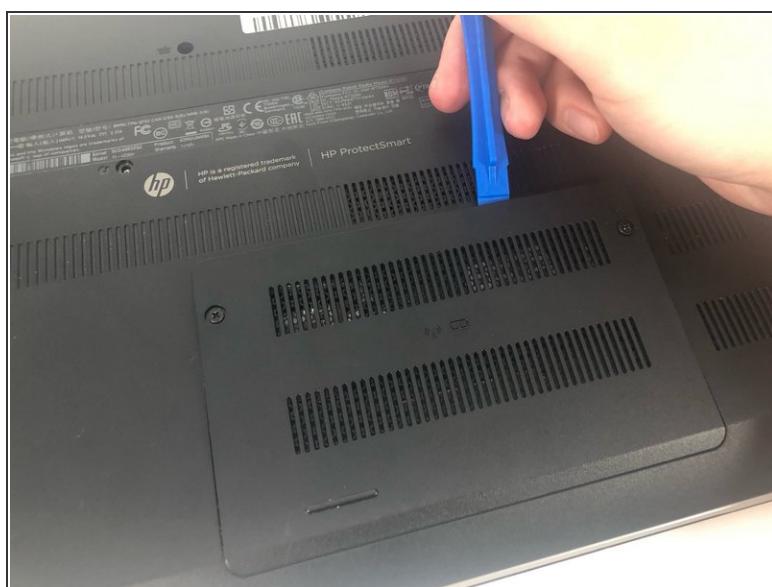

- Use the iFixit opening tool to remove the back panel.

## Step 5

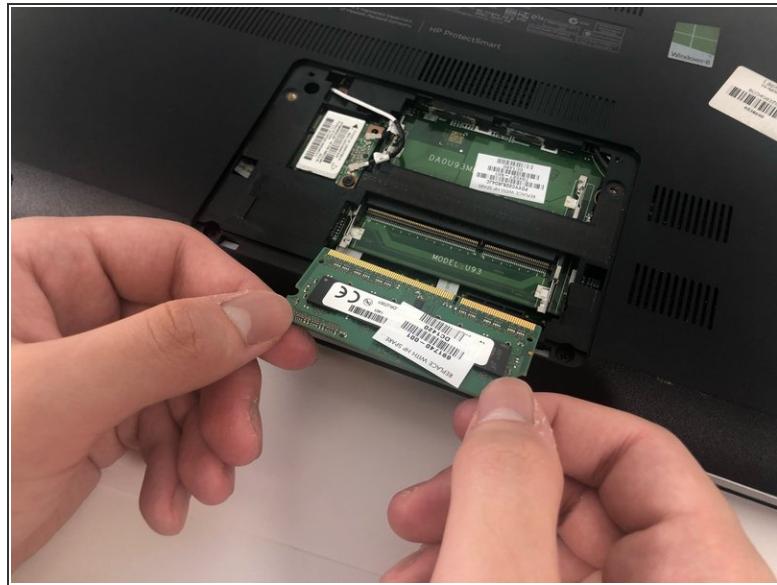

- Release the clips securing the RAM by slightly bending them until the RAM is free.

To reassemble your device, follow these instructions in reverse order.