



HP Pavilion 17-f004dx CD Drive Replacement

This guide will show you how to replace your device's CD drive, also known as an optical drive.

Written By: Allan Soria




INTRODUCTION

Use this guide to remove and replace your CD drive. It is also a prerequisite to removing your [front panel](#).

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Metal Spudger](#) (1)


Step 1 — Battery

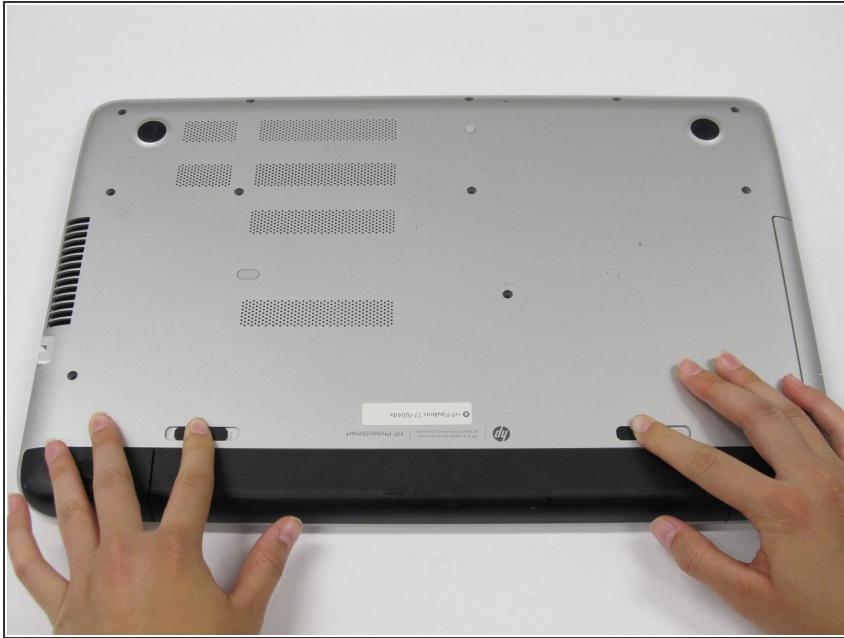

⚠ Before you remove the battery, make sure the laptop is powered off.

- Slide the black battery latches inward to remove the battery.

Step 2

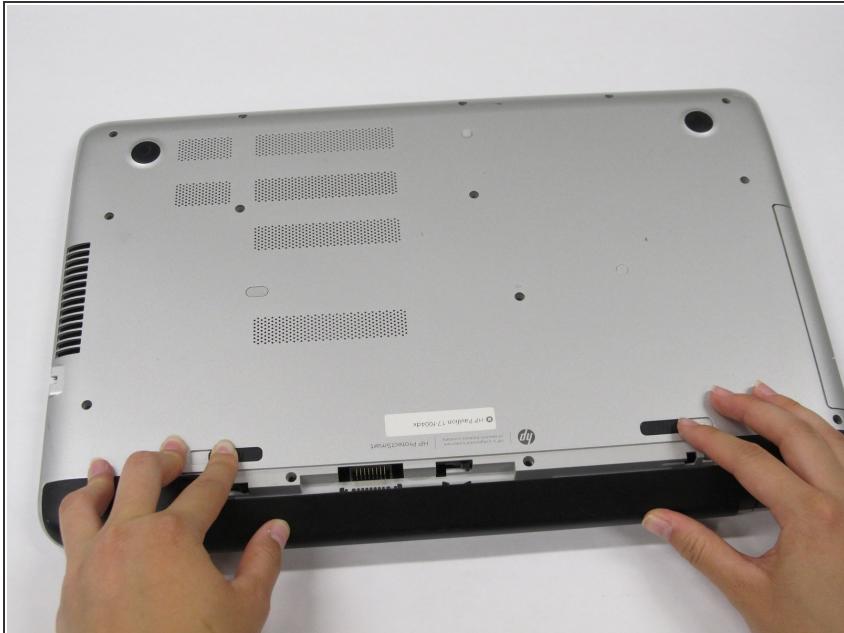


- Pull the battery out towards you while your fingers are still holding the latches in place.

Step 3 — CD Drive



- Remove one 7 mm screw with a Phillips #1 screwdriver.

Step 4

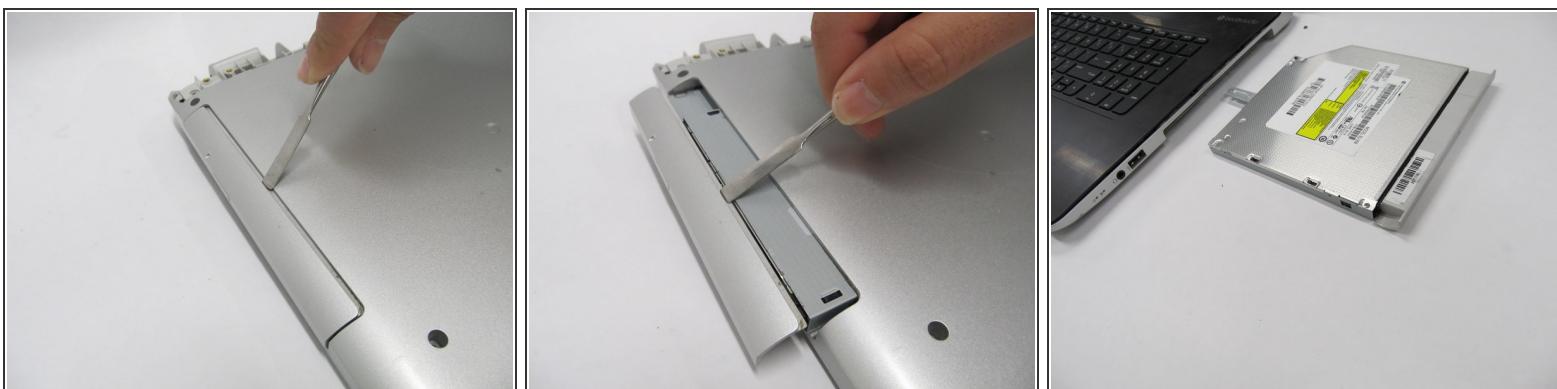

- Use a metal spudger to push the CD drive out of its slot for removal.

To reassemble your device, follow these instructions in reverse order.