




# HP Pavilion 17-f127ds Speakers Replacement

This guide will walk through locating and replacing the speakers.

Written By: Stephen Brown

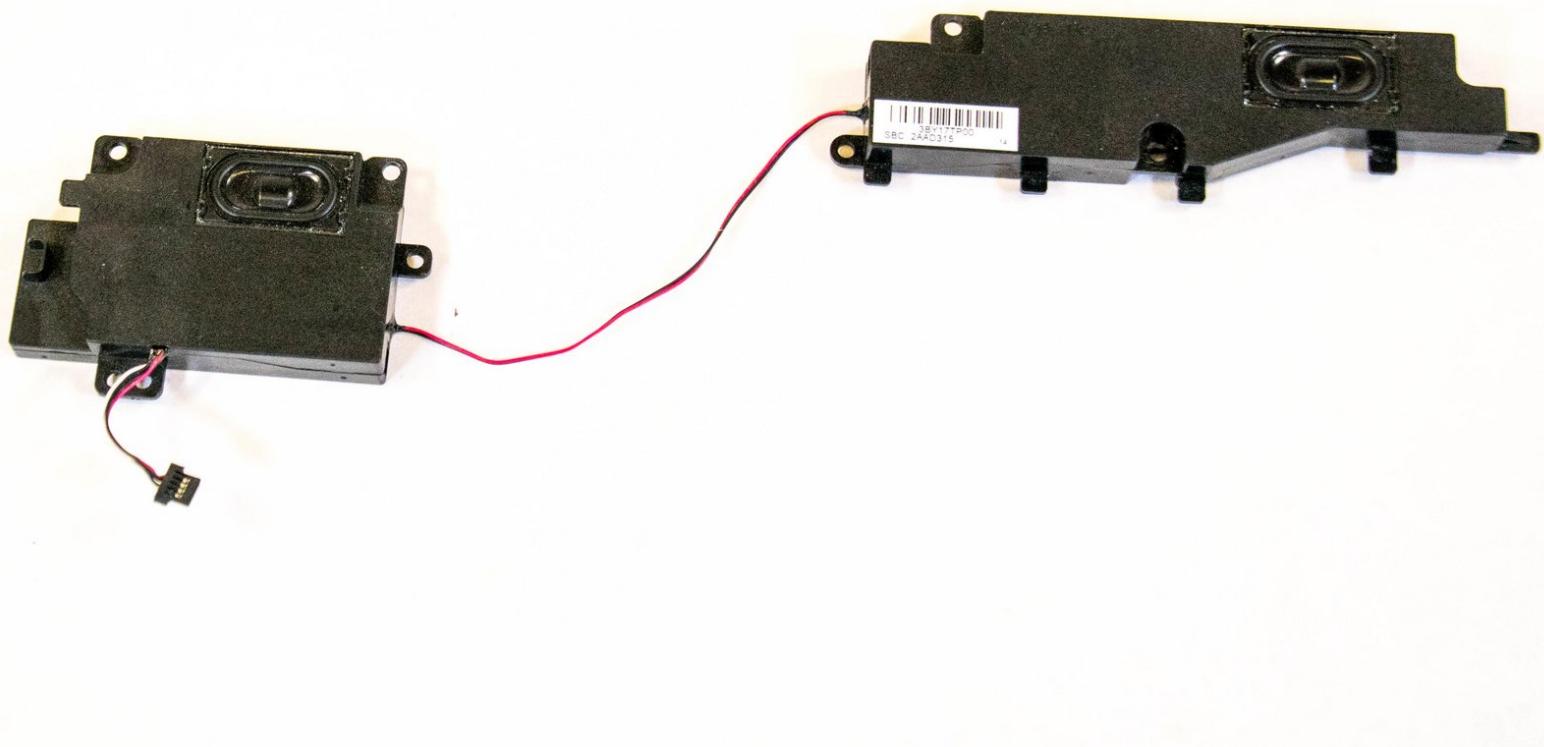

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Battery



*(i)* Before starting, please turn off your laptop.

- Slide the battery lock latch, the latch on the left, inwards.
- Slide the battery release latch on the right inwards to release the battery.

*(i)* The latch may require significant force to slide.


- Lift the battery up and remove it from computer.

## Step 2 — Keyboard



- Flip your laptop over on a firm surface.
- Using a Phillips #1 screwdriver, remove the thirteen screws on the back of your laptop.
- Flip your laptop back over.

## Step 3

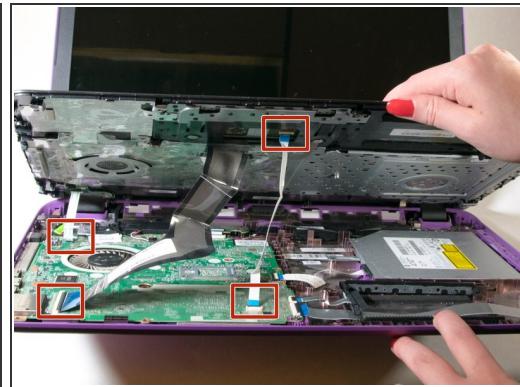


- Using the opening tools, separate the keyboard from the laptop by prying it from the base along the sides of the laptop.
- With your fingers, disconnect the keyboard connector and the connector cable from the motherboard.

**⚠** Be careful not to lift the keyboard too high because it might rip off the connectors.


- Carefully remove the keyboard.

## Step 4 — Speakers

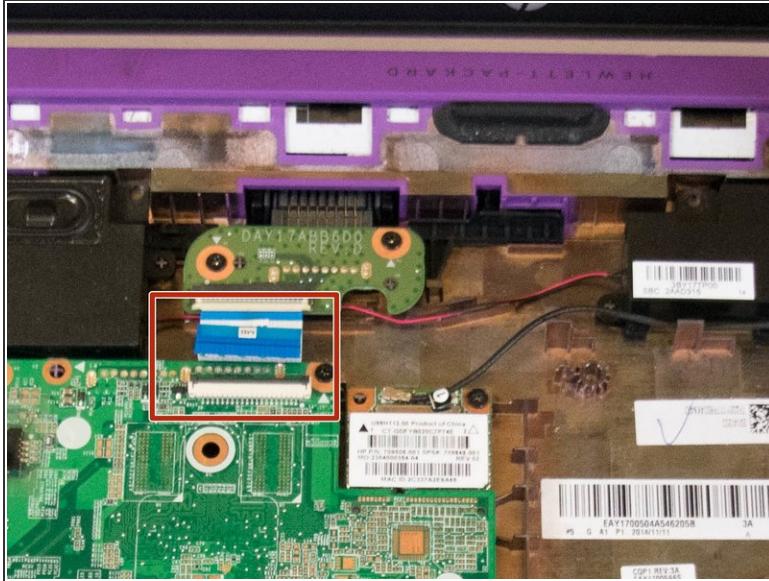

- Disconnect the tape connecting the WLAN module to the main board.
- With a Phillips #0 screwdriver remove the remaining screw holding the speaker in place.

## Step 5

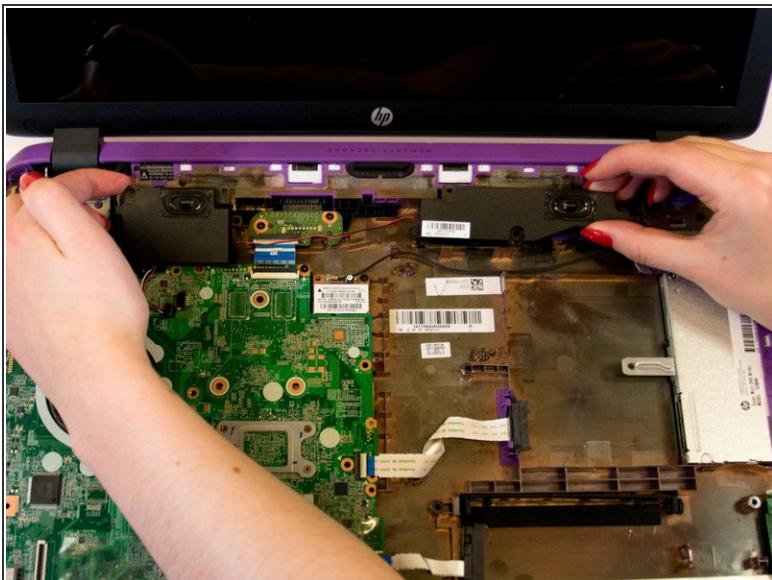

- Disconnect the speakers from the main board.
- Lift away the speakers, they are connected with a wire.

To reassemble your device, follow these instructions in reverse order.