




# HP Pavilion 17-g192dx Disassembly

This guide will teach you how to remove the back cover of the laptop. This guide will be important for a lot of other replacement guides.

Written By: Larry Christian

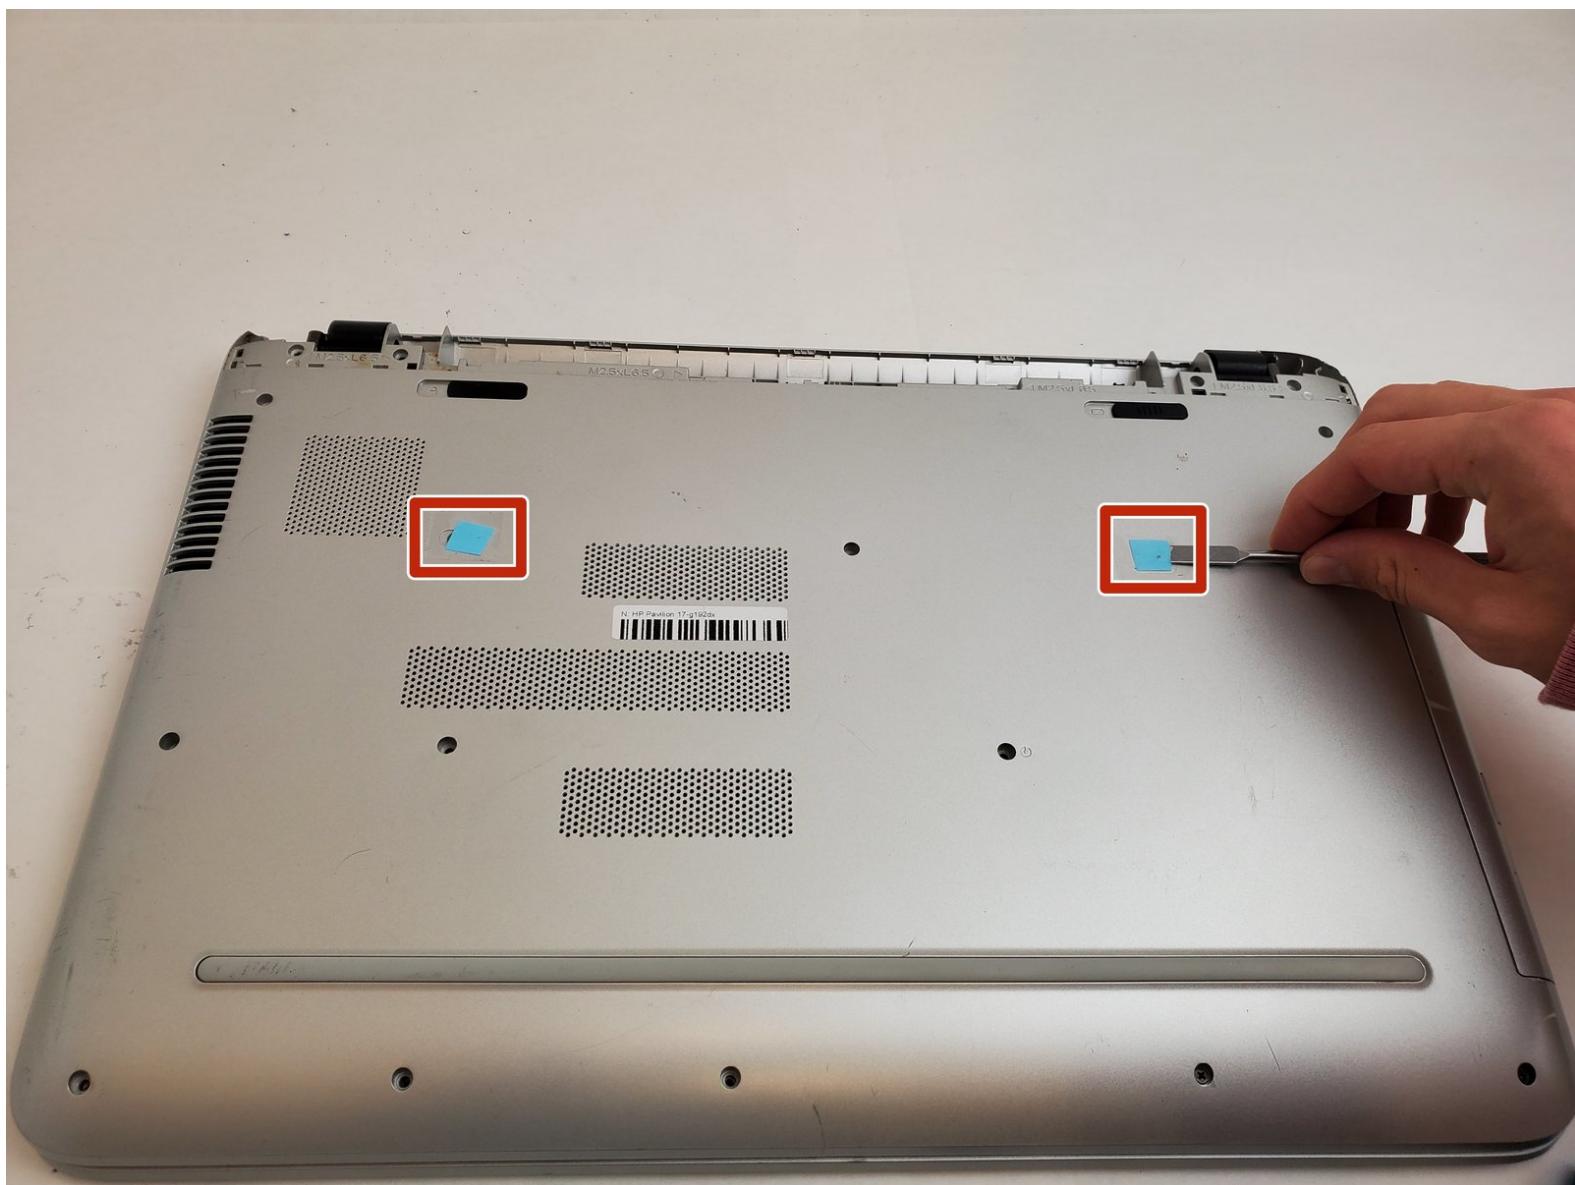

## INTRODUCTION

This guide will teach you how to remove the back cover of the laptop. This guide will be important for a lot of other replacement guides.

### TOOLS:

- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)


## Step 1 — Battery



 Turn off the laptop.


- Slide the battery lock to the right until you see the open lock symbol.

## Step 2

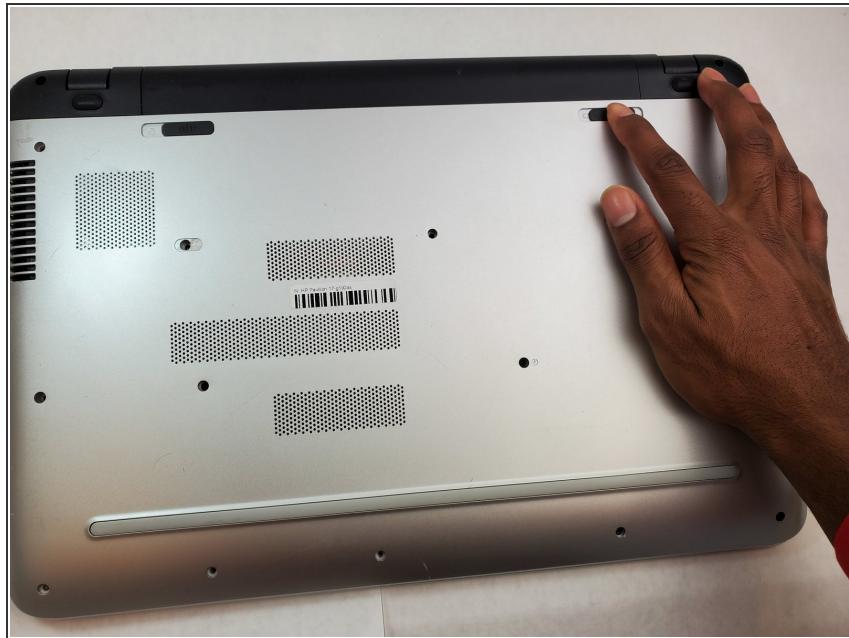


- Slide the battery release to the left until the battery pops up.
-  This may require significant force.

## Step 3

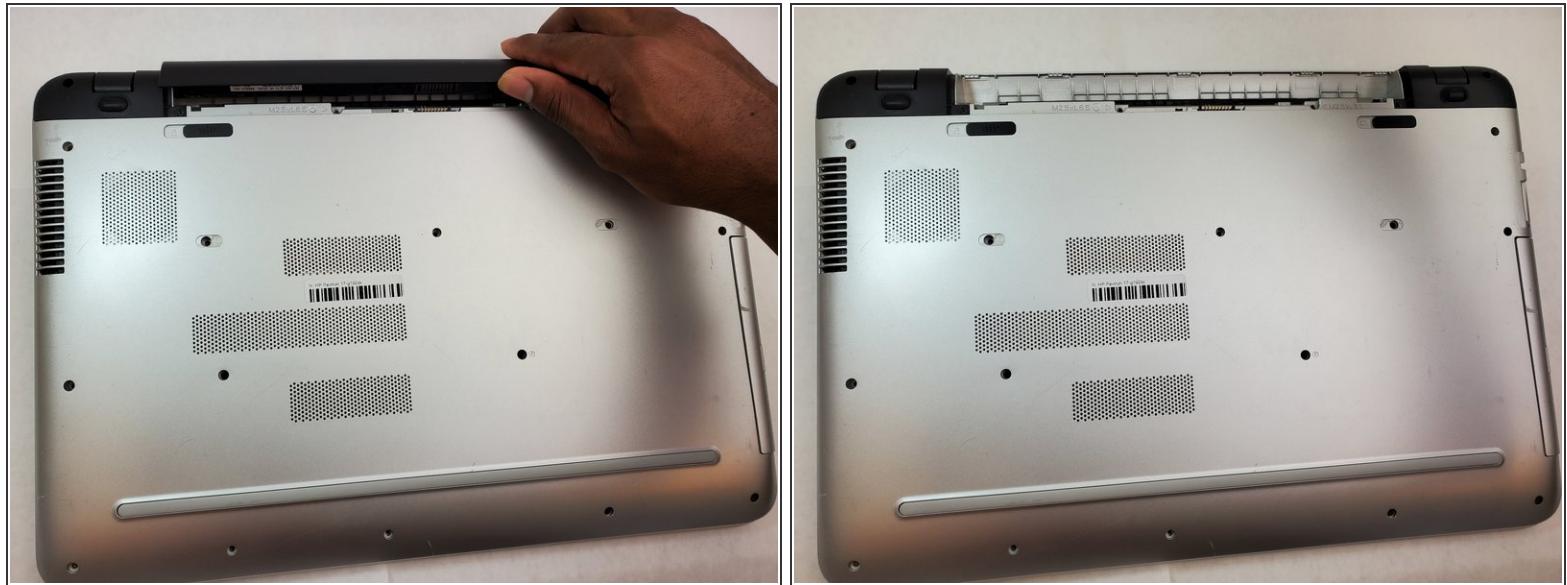


- Lift the battery up.

## Step 4 — HP Pavilion 17-g192dx Disassembly

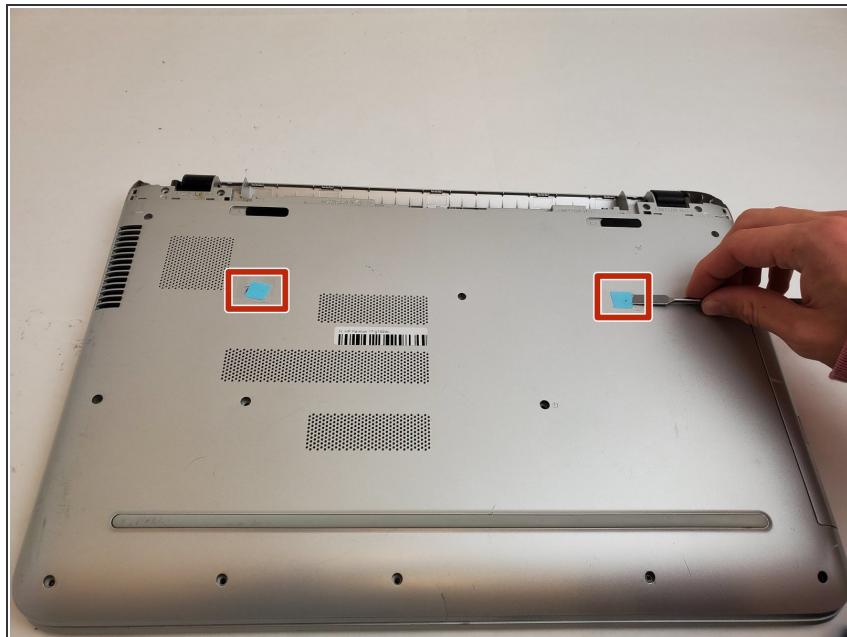


- Using the metal spudger, pry up the screw covers.

## Step 5

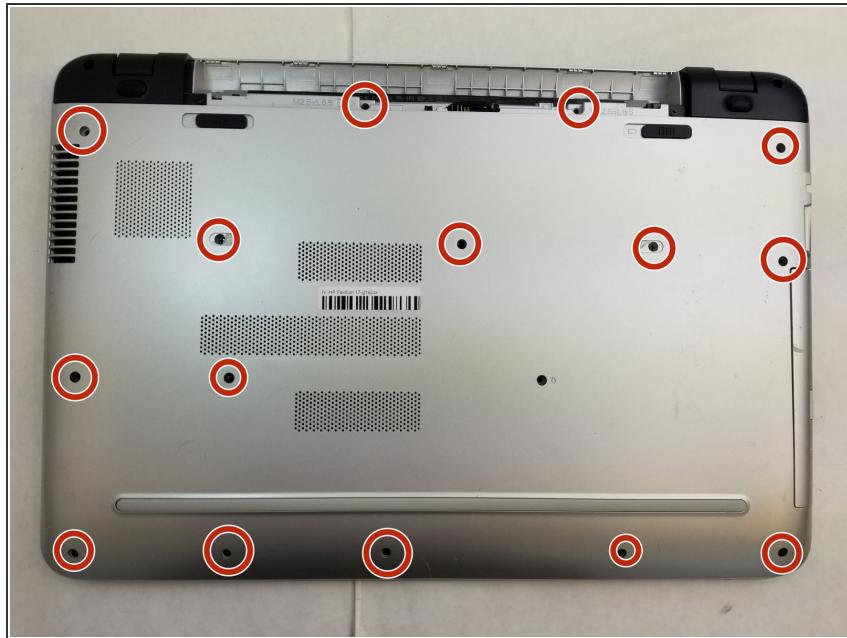


- Remove the fifteen 7mm screws holding the back casing on using the Phillips #00 screwdriver.

## Step 6

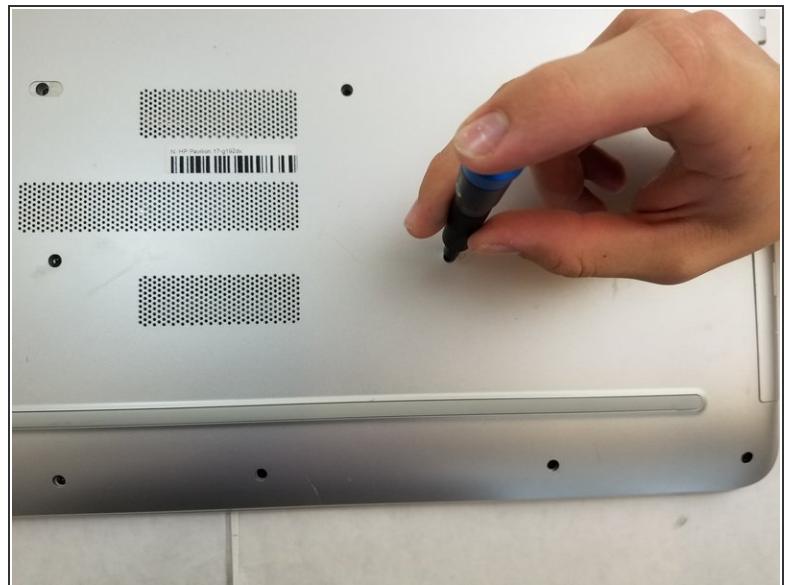

- Remove the 7mm screw holding the disc drive in place using the Phillips #00 head screwdriver.

## Step 7

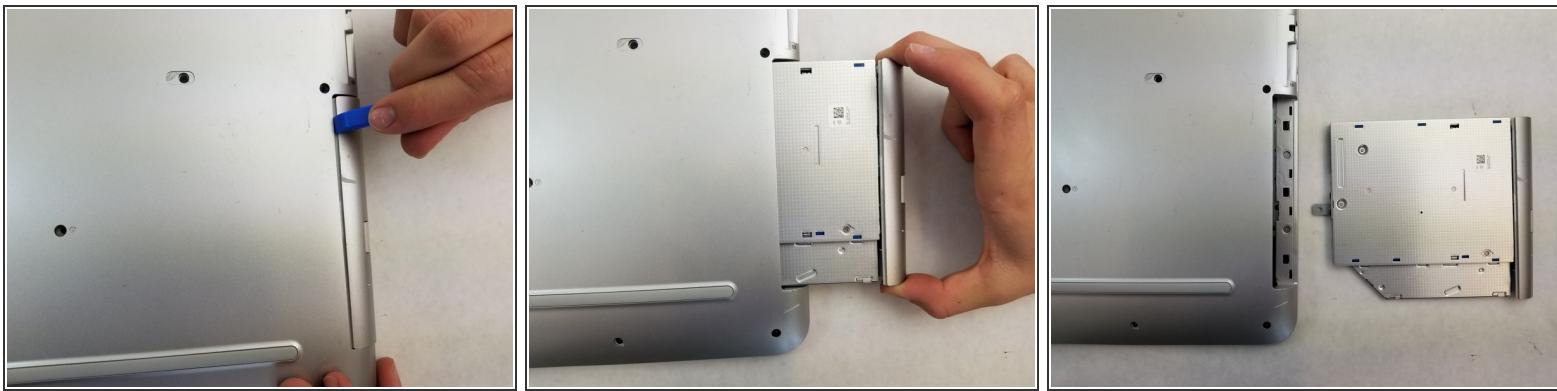


- Using an iFixit opening tool, push the disc drive away from the outer case.
- Once the disk drive is out far enough it easily slides out.

## Step 8



- Remove the four 7mm screws holding the back resting plates on using the Phillips #00 screwdriver.
- Using a metal spudger lift up on the back resting plate until it pops off.

## Step 9

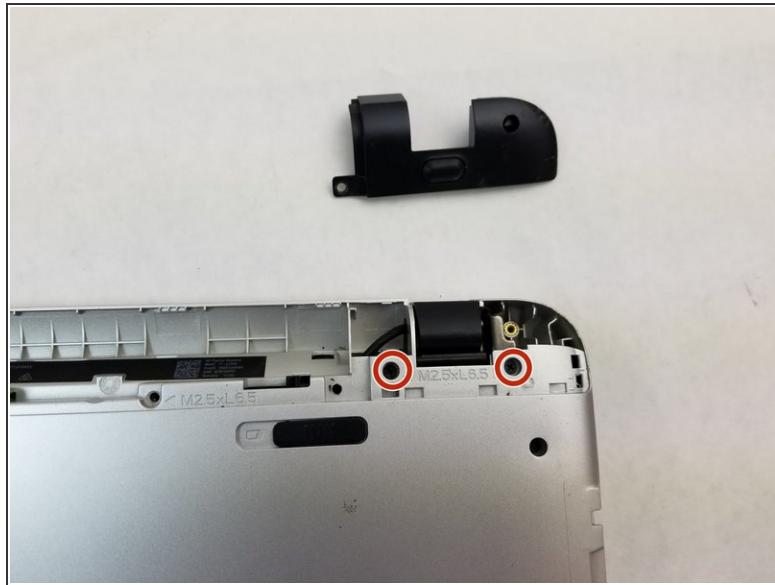

- Remove the two 7 mm screws behind the plate using a Phillips #00 screwdriver.

## Step 10



- Pry up on the case with an iFixit opening tool until you can feel a snap.
- Pry around the remainder until you can separate the case from the keyboard with your hands.
- Gently separate the two.

To reassemble your device, follow these instructions in reverse order.