



HP Pavilion 17-g192dx Screen Replacement

How to replace the screen in a HP Pavilion 17-g192dx.

Written By: Dominic Perito



INTRODUCTION

This Guide covers how to replace the 17.3 in display on the Hp Pavilion. Only replace if it is beyond repair and required.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger](#) (1)


Step 1 — Battery



 Turn off the laptop.



- Slide the battery lock to the right until you see the open lock symbol.

Step 2

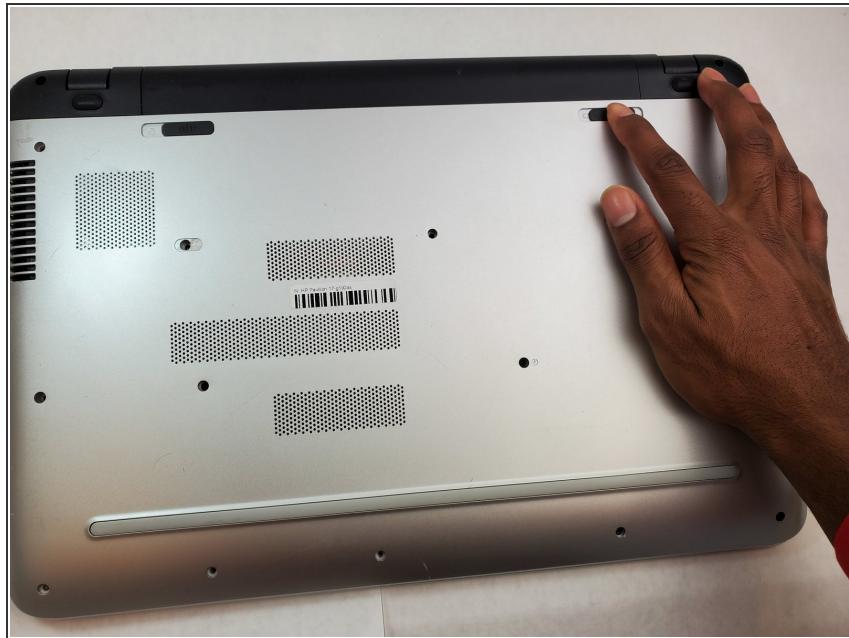

- Slide the battery release to the left until the battery pops up.
-  This may require significant force.

Step 3

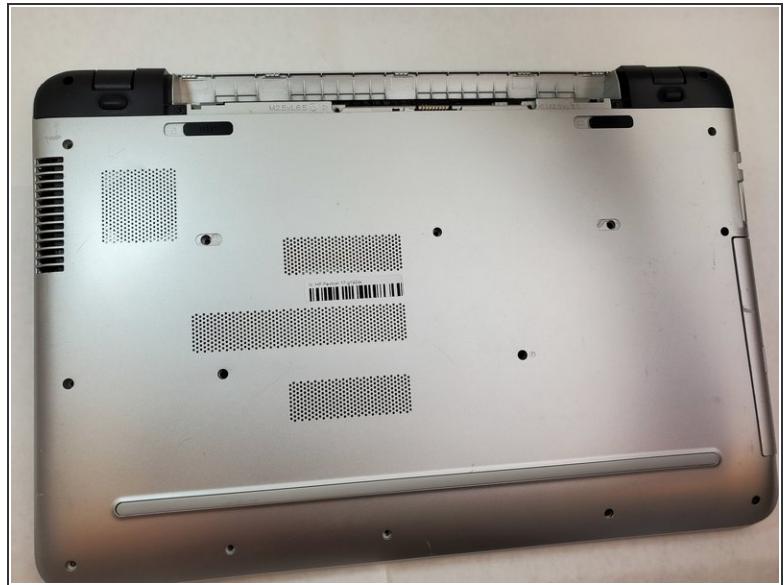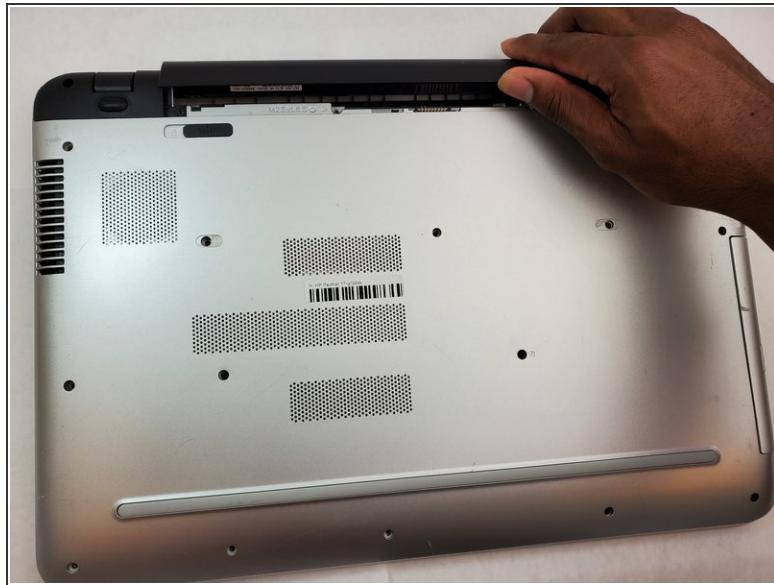

- Lift the battery up.

Step 4 — Screen



- Using the metal spudger, remove the 2 plastic screw covers at the bottom corners of the screen.

Step 5



- Remove the two 7mm screws with a Philips #00 screwdriver.

Step 6



- Use a plastic opening tool to remove the plastic cover surrounding the screen by running the tool around the edge.

(i) It may be helpful to start with the metal spudger then transition to the plastic opening tool because you will need the metal tip get in initially.


Step 7



- Remove the four 4 mm screws holding the back to the display assembly with a Philips #00 screwdriver.
- Remove the two 3mm screws holding the back cover to the display assembly with a Philips #00 screwdriver.


 Lay the cover on the workspace carefully as not to damage the wires still connected to it.

Step 8

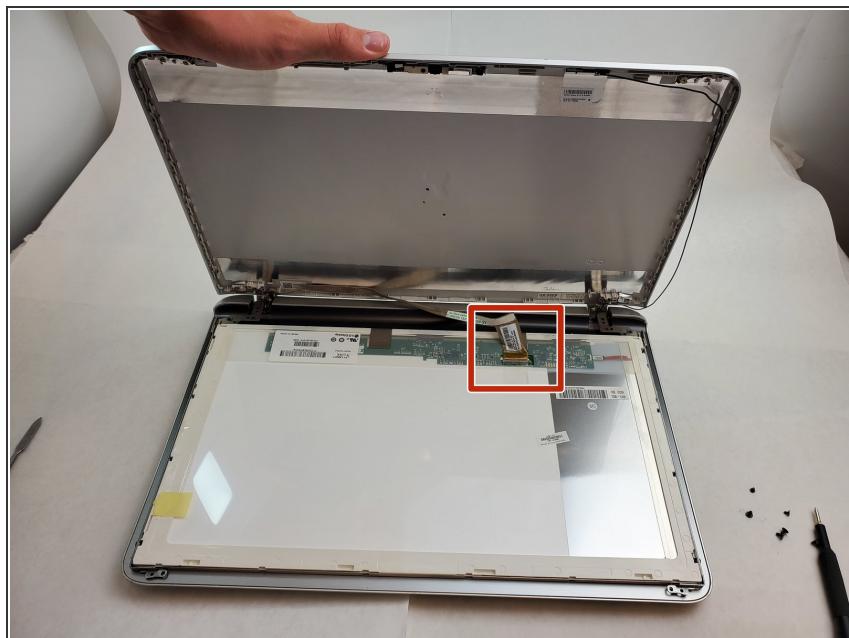

- Unplug the wire connected to the display assembly by gently pulling on it.
-  Tape may be holding it in place.

Step 9

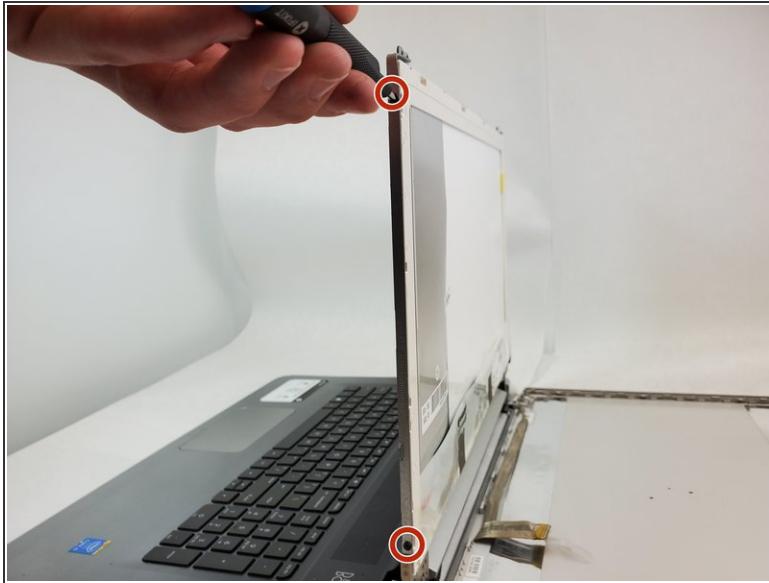

- Remove the four 3mm screws connecting the display assembly to the metal framework with a Philips #00 screwdriver.
- *(i)* It may be helpful to have someone else support the screen while you remove it.

To reassemble your device, follow these instructions in reverse order.