



HP Pavilion DV2160BR DVD±RW Drive Replacement

An optical drive capable of reading data on CDs and DVDs that is also a saving drive that allows data to be added or permanently deleted on re-writable discs.

Written By: Brandon MacDonald



INTRODUCTION

In this guide you will learn how to remove the DVD±RW Drive from an HP Pavilion DV2160BR.

TOOLS:

- **Paper Clip** (1)
- **Phillips #0 Screwdriver** (1)
- **Phillips #1 Screwdriver** (1)

Step 1 — Battery




- Start with the bottom of the laptop facing up.

Step 2



- Locate the battery compartment at the rear of the device.
- There is a slider button located under the left side of the battery compartment. It is indicated by a battery symbol. Move the slider to the left and lift the battery out.

Step 3 — DVD±RW Drive

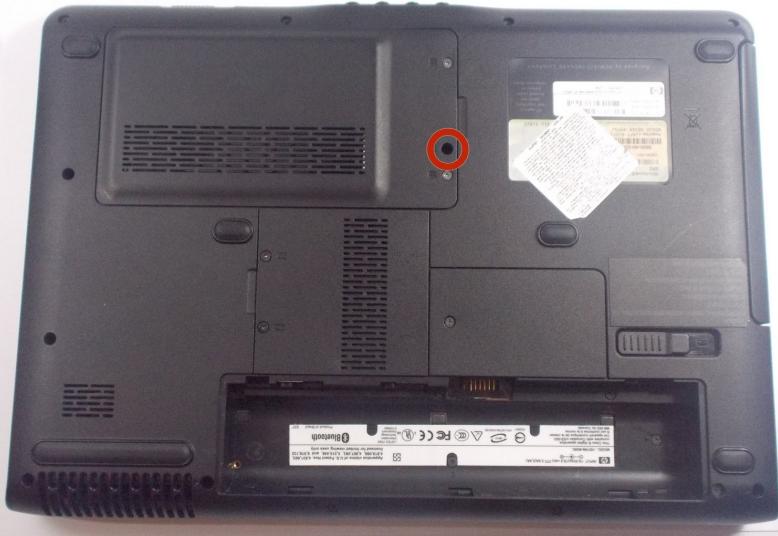


- Locate the locking screw which is located in a recessed hole on the underside of the laptop.
- Remove the M2.5X3-Lg #1 Phillips screw.

Step 4



- Locate the CD drive tray release hole on the front of the drive.
- Straighten a paper clip and push it gently into the CD drive tray release hole.
- The drive tray will pop open.

Step 5

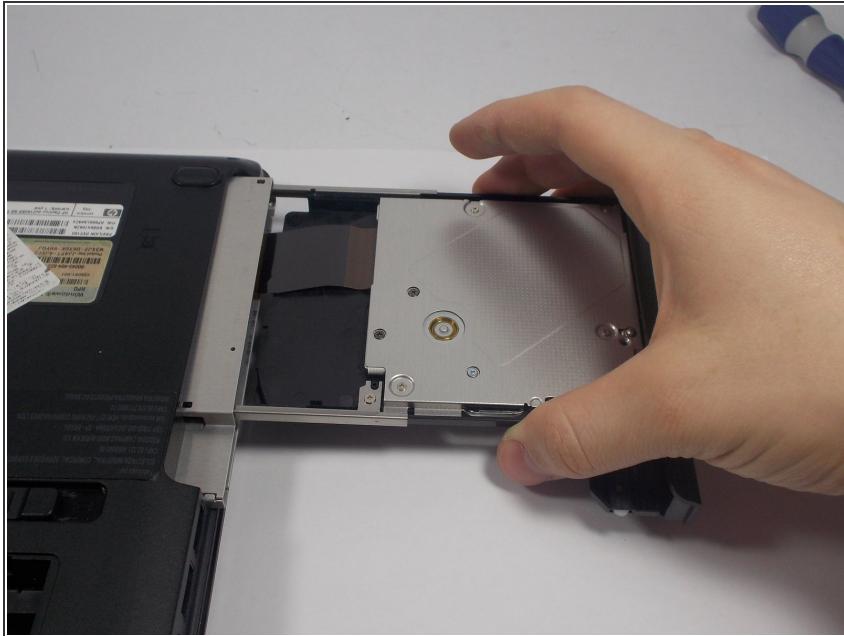

- Grasp the side edges of the drive tray.
- Gently pull the drive from the laptop.

Step 6



- Locate the mounting bracket which is attached to the back of the drive.
- Remove the two M2x3-Lg #0 Phillips screws.

To reassemble your device, follow these instructions in reverse order.