



# HP Pavilion G60-247CL Screen Replacement

How to replace an HP Pavilion G60-247CL screen.

Written By: Haley Matthews



## INTRODUCTION

The screens on laptops can be broken or cracked if dropped. If the screen of your HP Pavilion G60-247CL is damaged or broken, this guide will show you step-by-step how to replace it.

### TOOLS:


- [Phillips Head Screwdriver: Size PH1](#) (1)
- [Spudger](#) (1)
- [Precision Tweezers Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Battery




- Press down and to the right on the battery lock slide.
- Once slid over to the right the battery will pop up and out.

## Step 2 — Screen

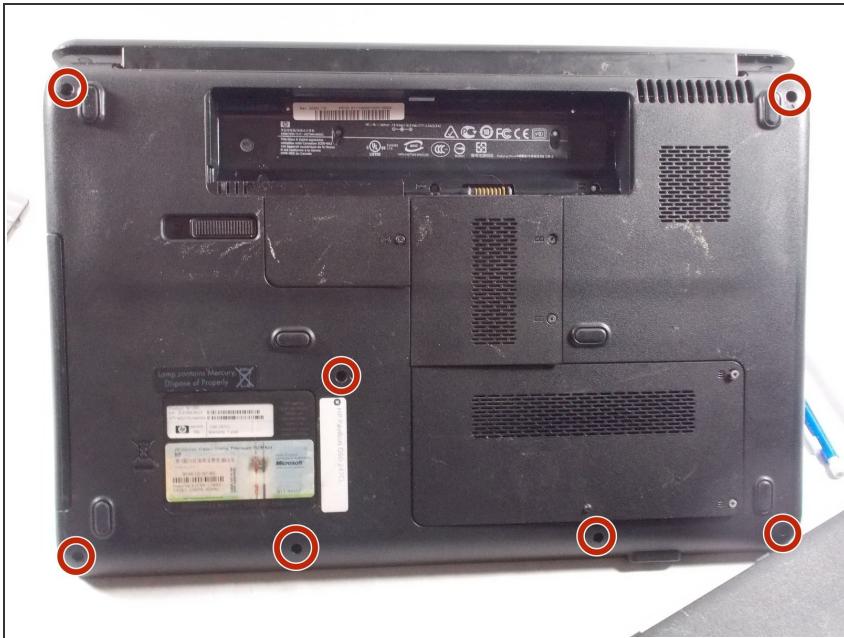

- Remove the seven Phillips #1 screws from the back side of the laptop.

## Step 3

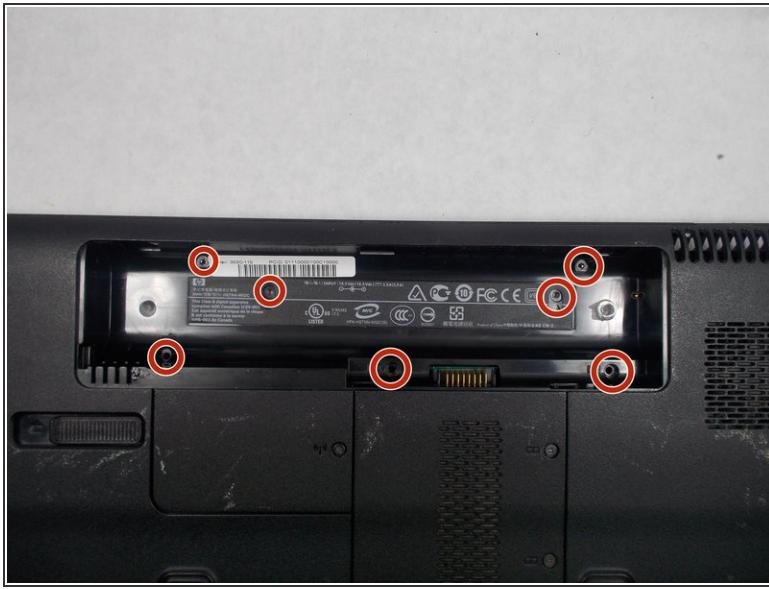


- Remove the seven Phillips #0 screws from the battery compartment.

## Step 4




- Turn the computer around to the front side.
- Using an opening tool, prop open the keyboard casing.

## Step 5

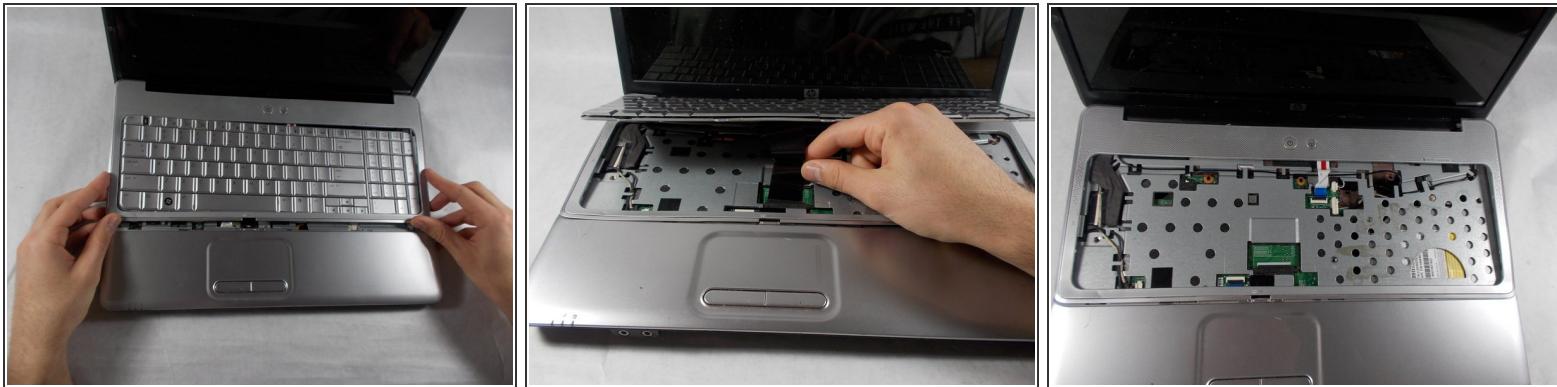



- Carefully lift up the keyboard.
- Gently pull up the connecting wire clip to completely detach the keyboard.

## Step 6

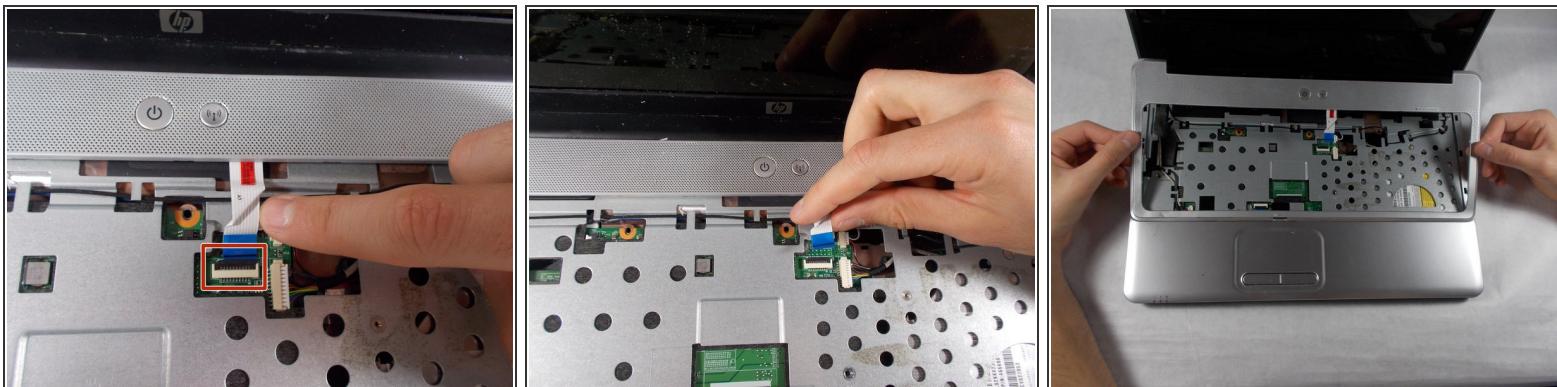



- At the top right of the laptop there will be another wire clip holding the keyboard casing.
- Carefully pull out the wire clip to fully detach the covering.

## Step 7

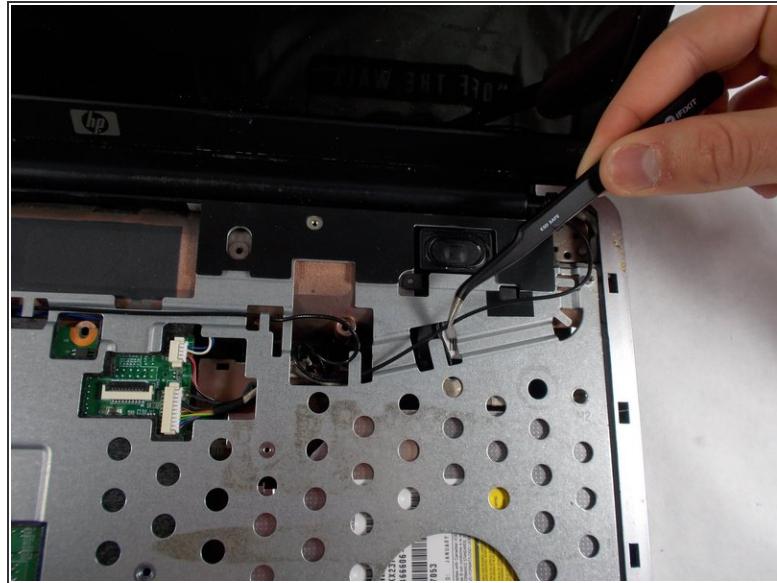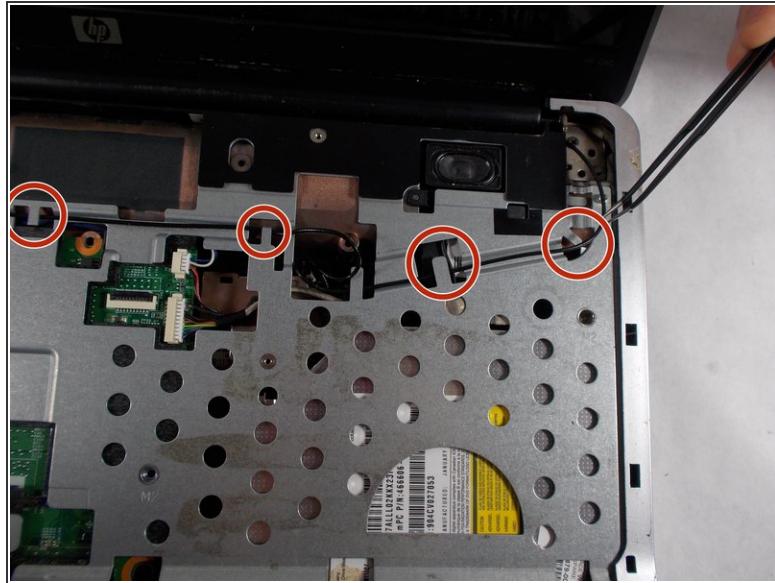


- At the top right of the laptop remove the black wire from under the metal tabs using the tweezers.

## Step 8

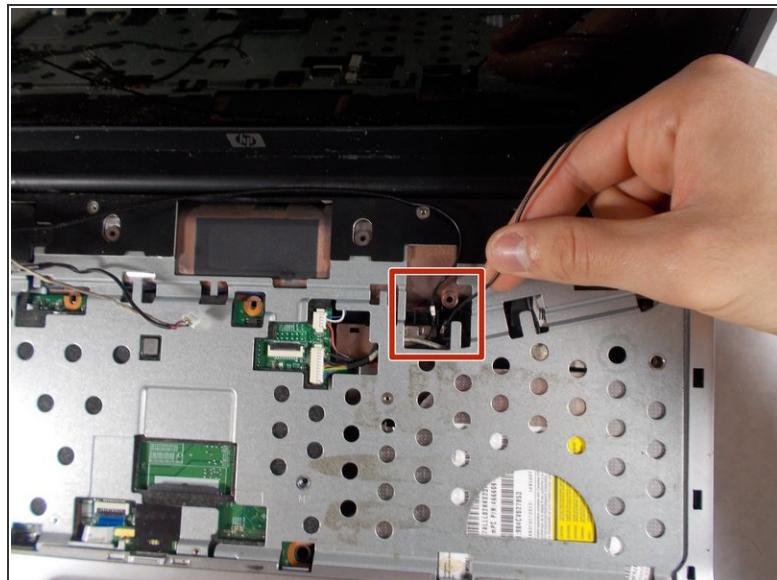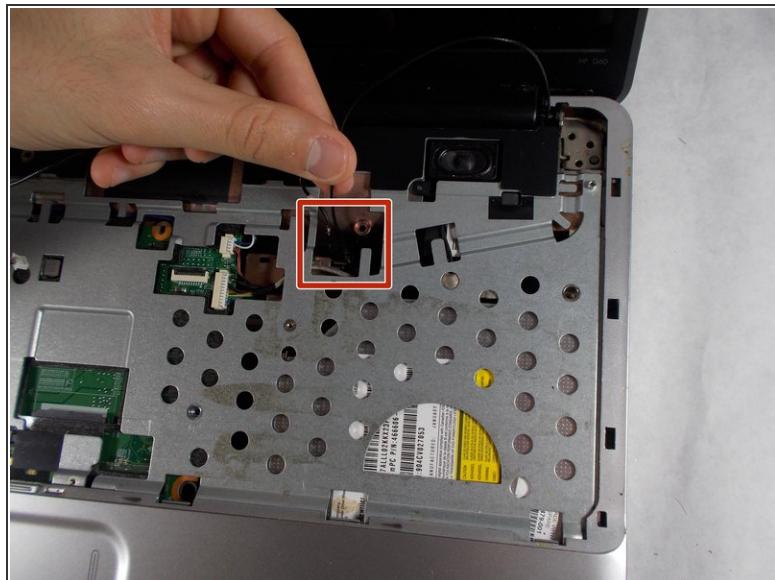


- Remove the black wire from the top right corner by gently pulling outward.

## Step 9

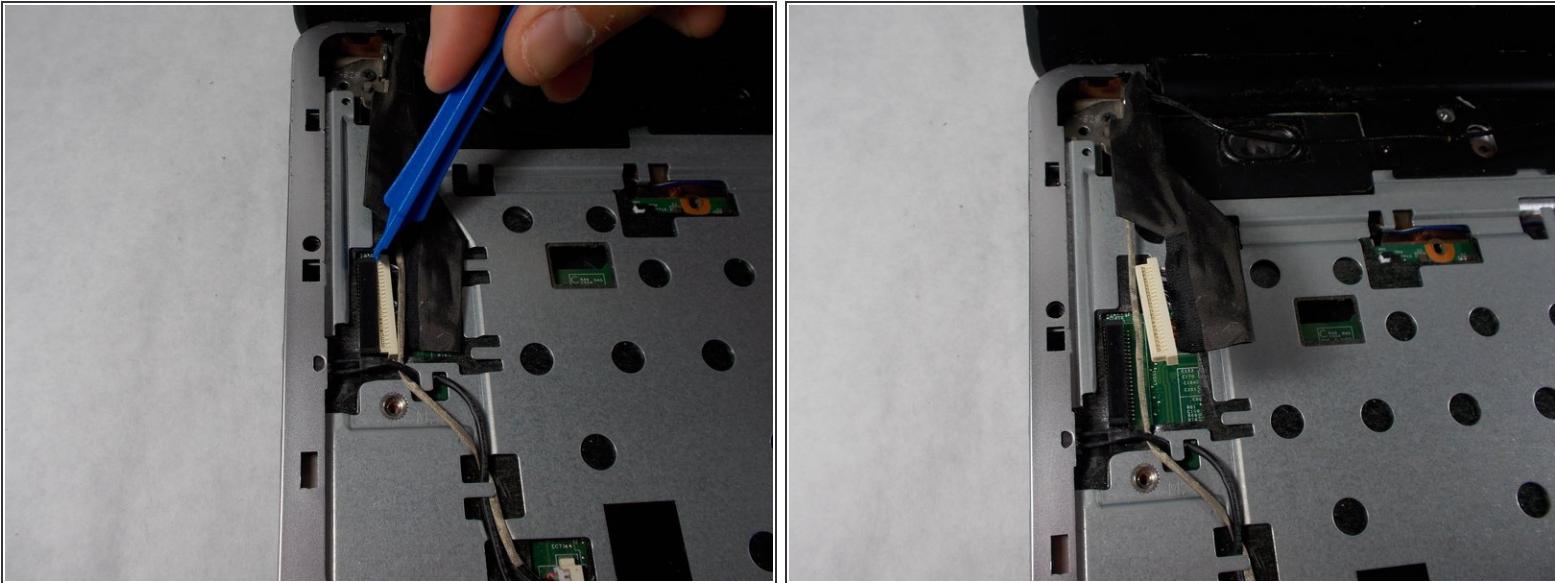


- At the top left of the computer remove the black clip using the opening tool.
- Push the opening tool to the right to pop out the clip.

## Step 10

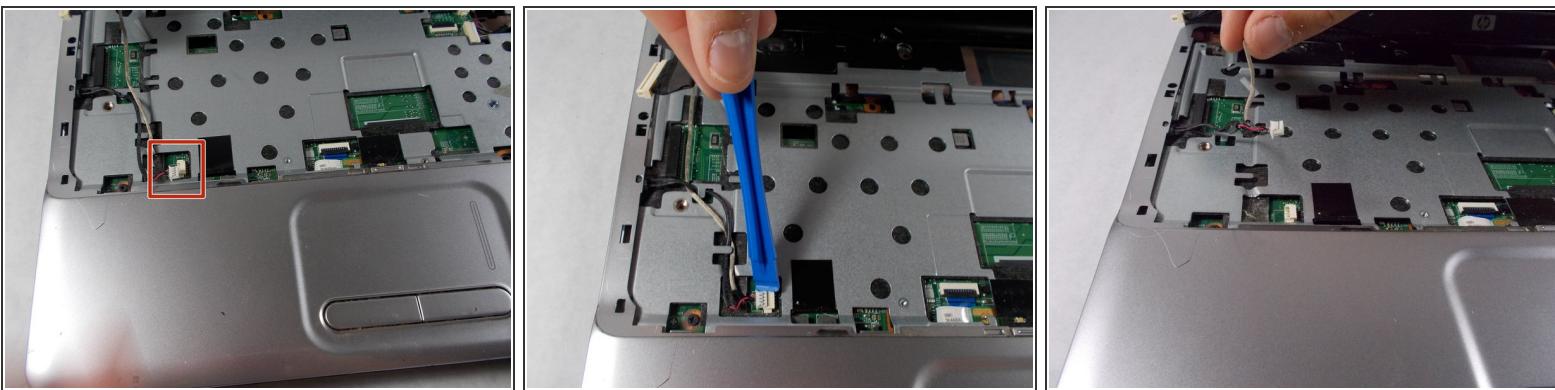

- Locate at the bottom left of the computer a white clip.
- Using an opening tool, prop out the white clip.

## Step 11

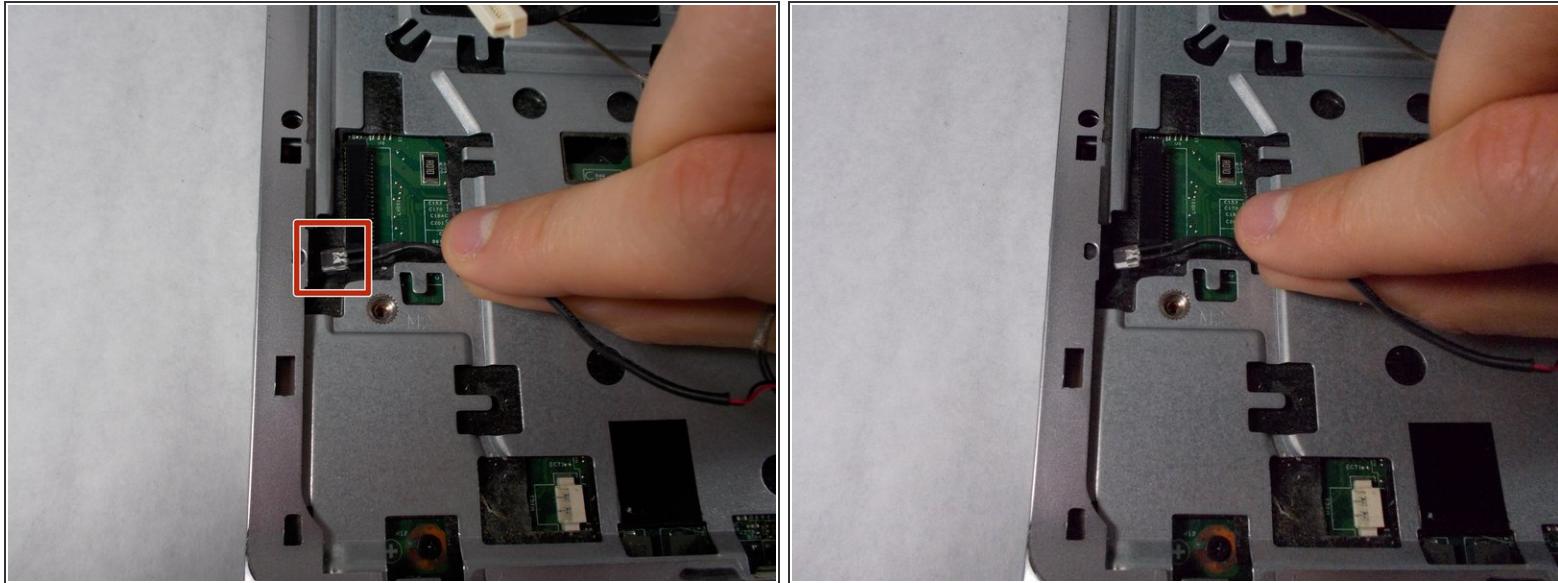

- On the left side of the computer locate the black wire with the clear clip.
- Gently pull the wire to the right to detach it.

## Step 12



- At the top corners of the computer, unscrew the three Phillips #0 screws.
- Lift up the top half of the computer carefully.

## Step 13




- Locate the two screws at the bottom corners of the screen.
- Using the tweezers remove the rubber black covering over the screw.
- Remove the two Phillips #0 screws.

## Step 14




- Using the opening tool, prop off the screen covering.
- Remove the covering to expose the screen completely.

## Step 15

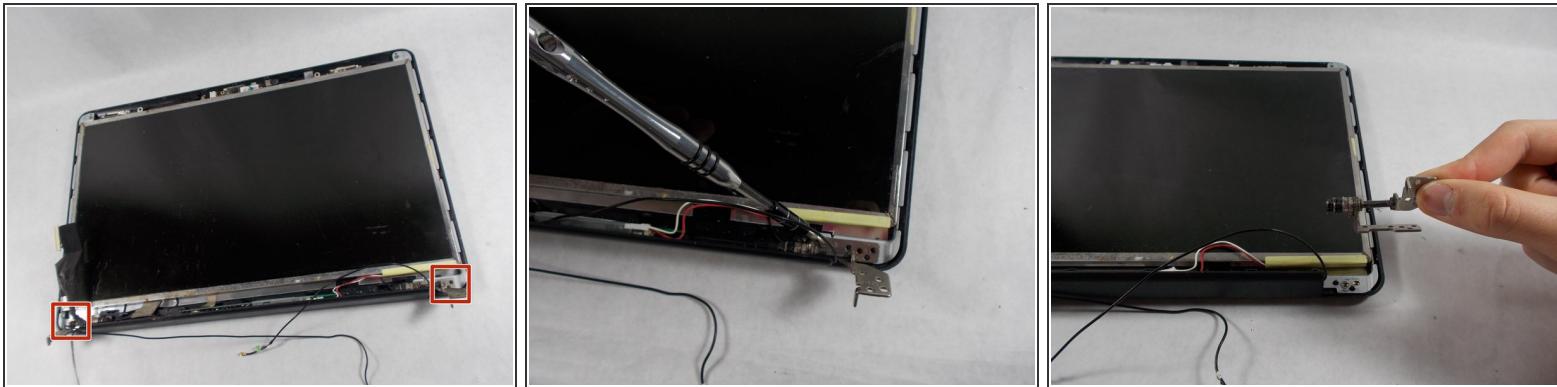


- Remove the bottom two screen bearings.
- Using a Phillips 1 screwdriver, remove the two screws on each side.

## Step 16

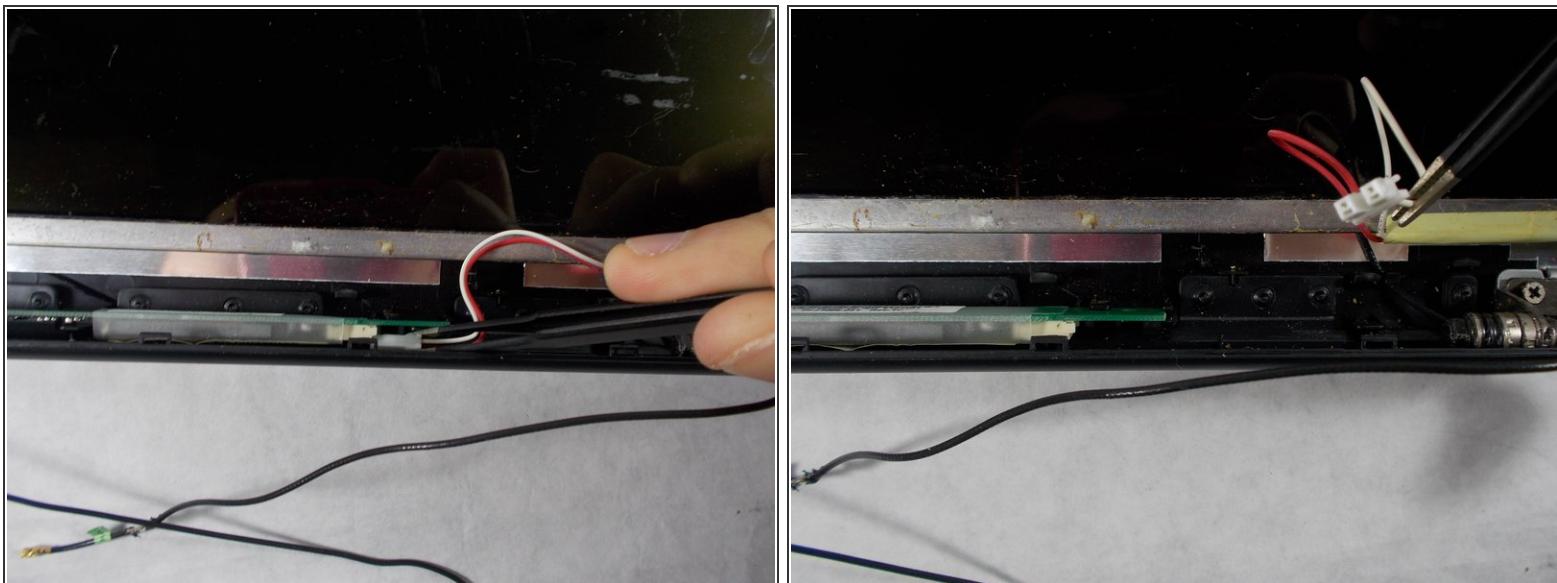



- Using the tweezers remove the red and white wire from the bottom of the screen.

## Step 17

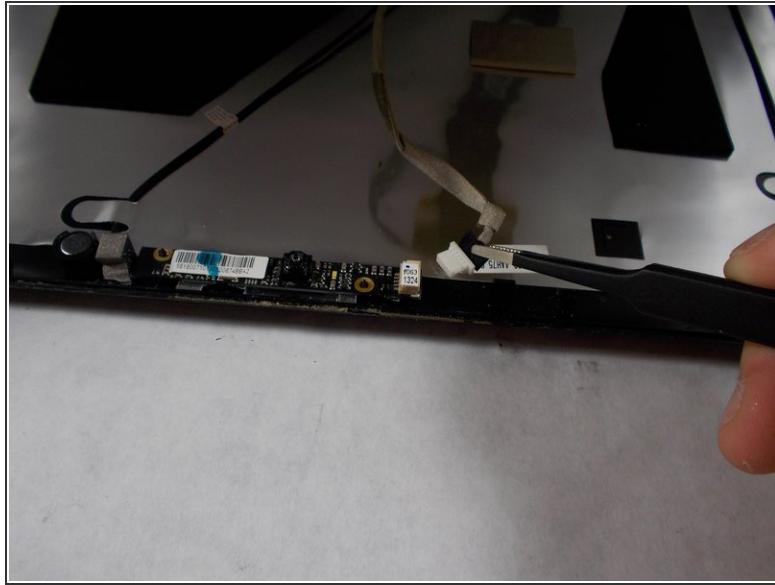


- Prop the screen up slightly .
- Using the tweezers unclip the white wire.

## Step 18

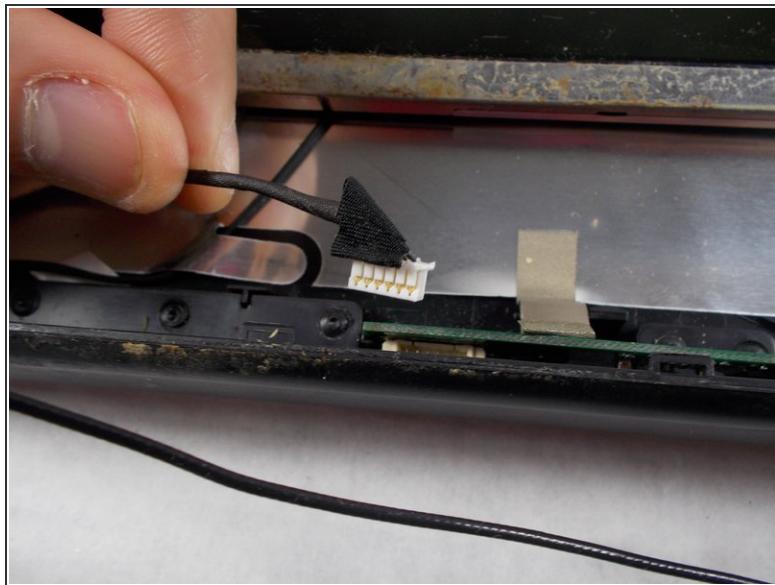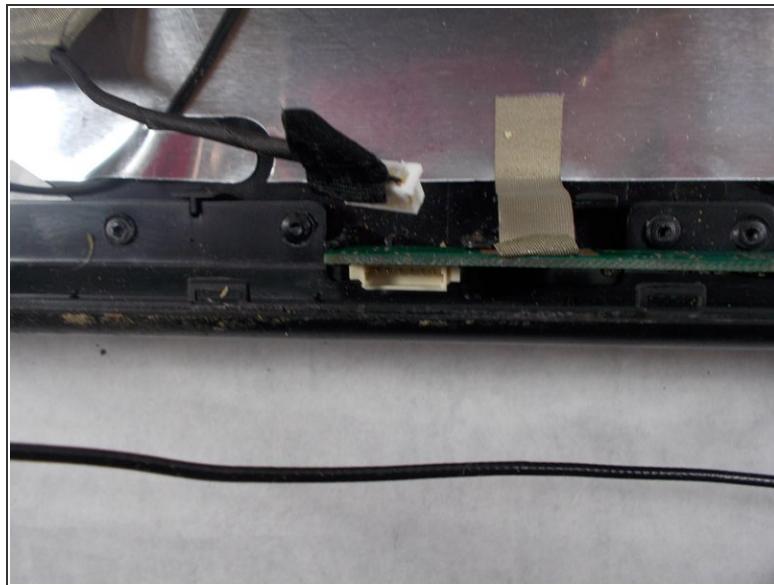

- While the screen is still propped open remove the black wire from the bottom middle of the screen by pulling gently.

## Step 19

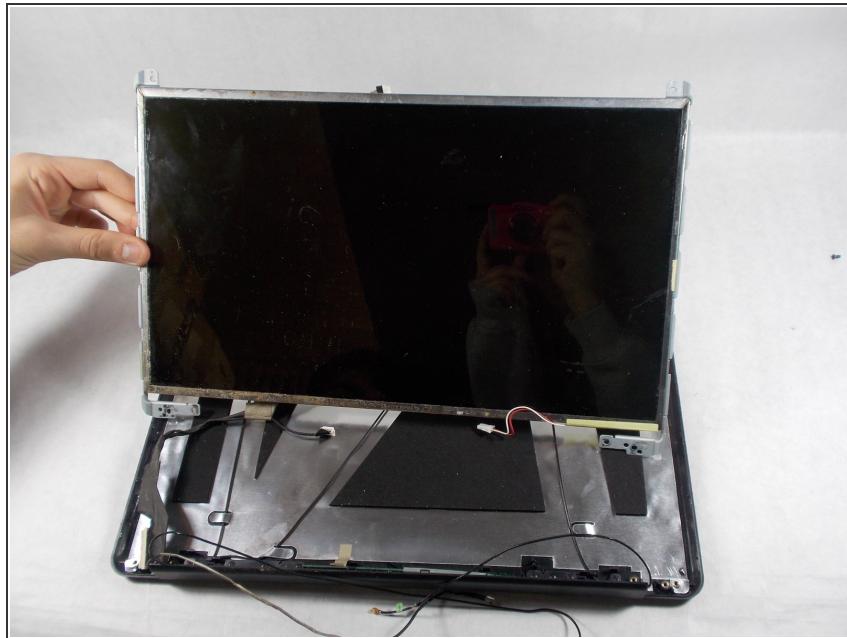

- Remove the screen from the outer casing carefully.

To reassemble your device, follow these instructions in reverse order.