



HP Pavilion G7-2289wm DVD Drive Replacement

This guide provides instruction on how to replace a broken DVD Drive

Written By: Ryson Smith



INTRODUCTION

This guide provides instruction on how to replace a broken DVD Drive in the HP Pavilion G7-2289wm laptop.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery




- Slide the battery release latch to the left, towards the center of the laptop.
- Lift the battery up, and pull towards the center of the laptop to remove it.

Step 2 — DVD Drive

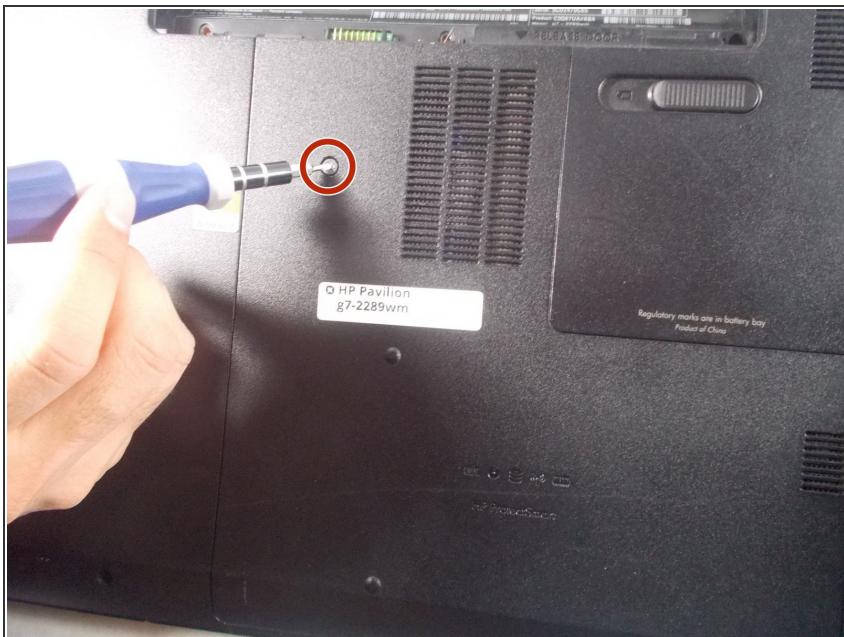

- Loosen the screw that secures the service cover.
- Lift the edge of the service cover up and forward until it's at an angle to remove it.

Step 3

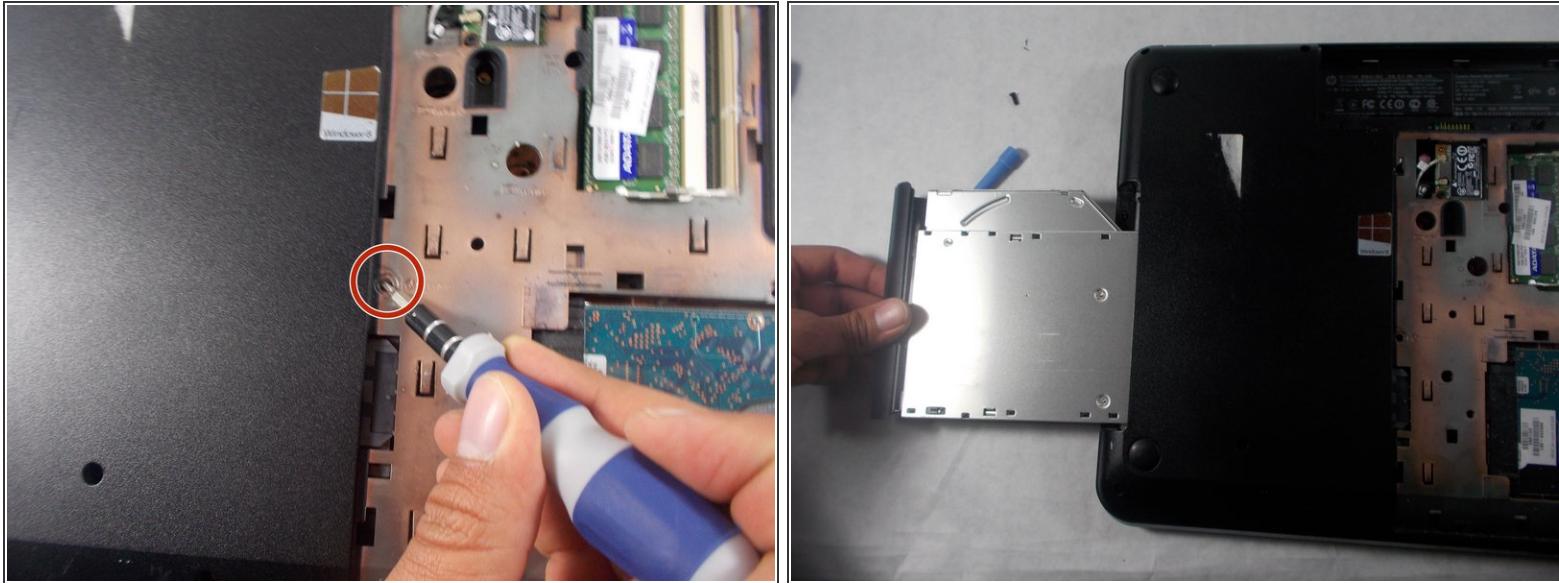

- Remove the screw that secures the DVD drive to the laptop.
- The DVD drive will now be able to slide out from its DVD Drive bay.

To reassemble your device, follow these instructions in reverse order.