




# HP Pavilion Sleekbook 15-b000 Hard Drive Replacement

Remove the hard drive for future repairs or replace the hard drive if damaged.

Written By: Sam Barkley

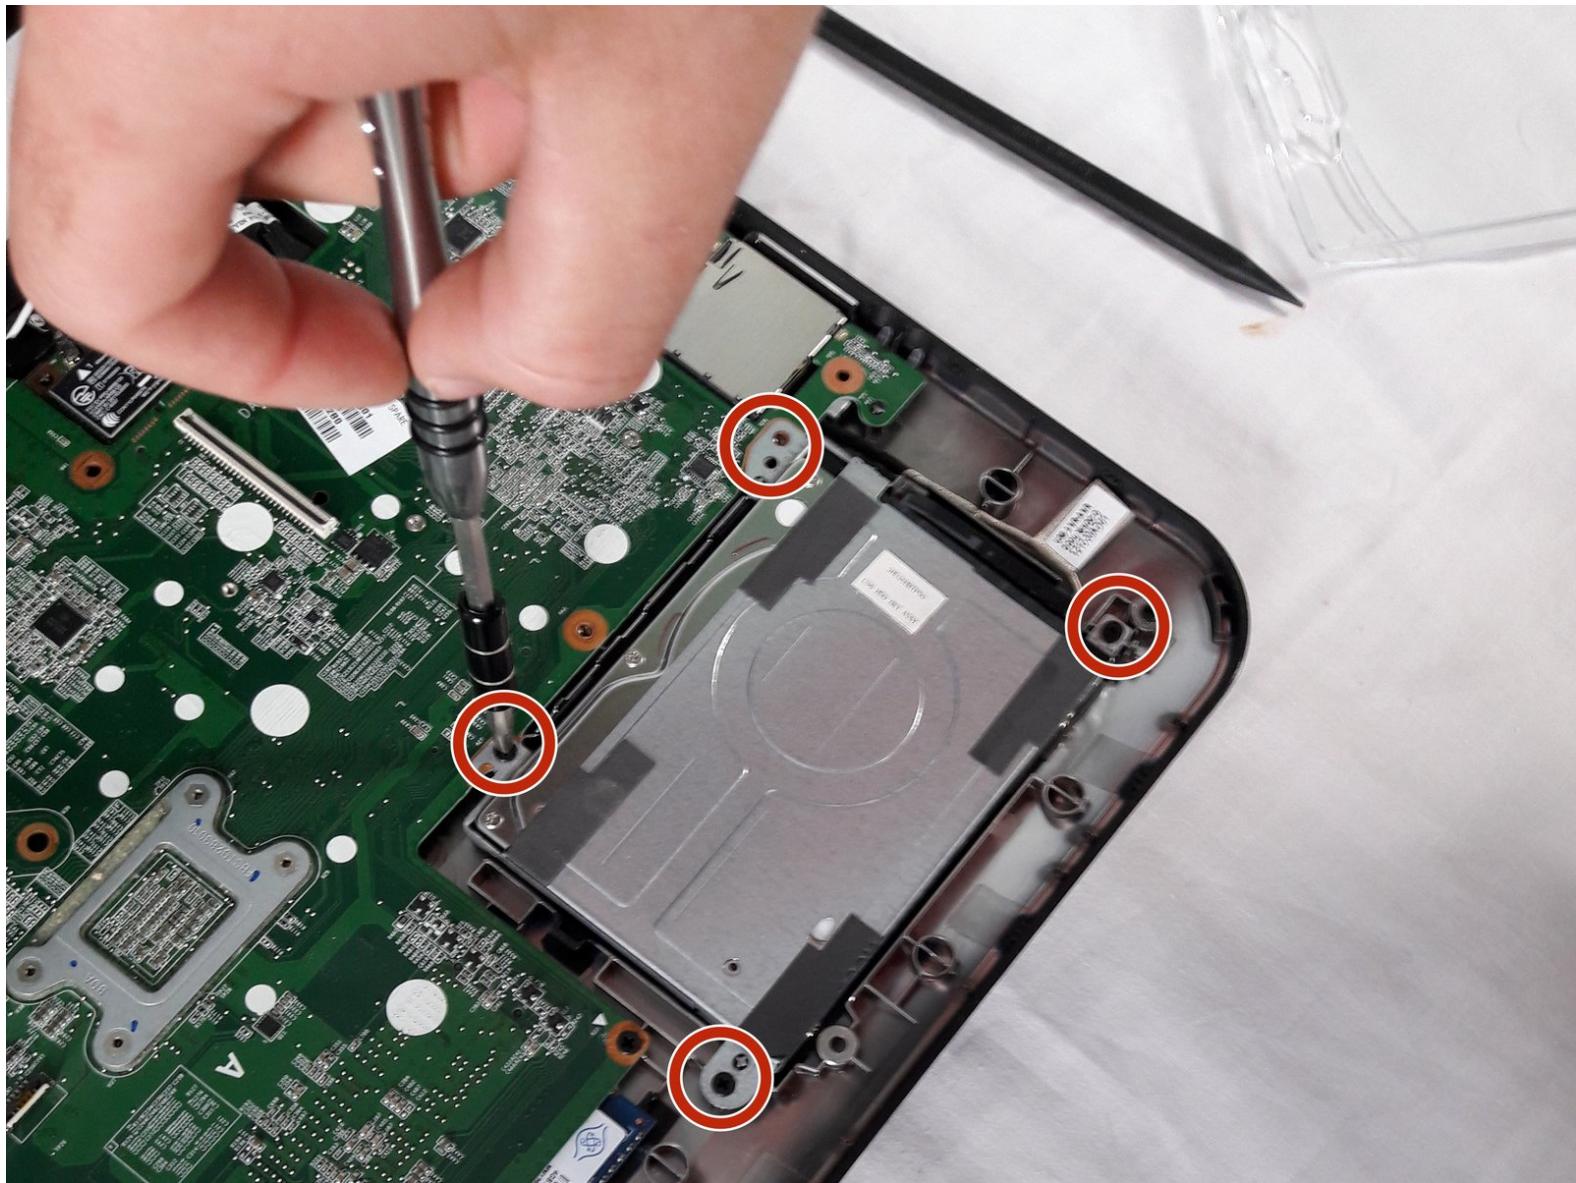

## INTRODUCTION

Since the operating system is stored in the hard drive, the laptop may not start or boot if the hard drive is faulty or not working. This guide will take you through the steps to remove the hard drive from your laptop in case the laptop will not boot or having problems loading to your desktop.

### TOOLS:

- Spudger (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

## Step 1 — Battery



- Unplug laptop from adapter and all other devices.

## Step 2



- Flip the laptop over with battery facing you.

## Step 3



- Slide the battery lock on the right side open.
- Slide the Battery release latch on the left side.

## Step 4



- Pull battery out.

## Step 5 — Keyboard



- Remove the two 6.5mm Phillips #1 keyboard screws from bottom of laptop.

## Step 6



- Push screwdriver through screw hole top pop the keyboard.

**i** Make sure the screen is open.

## Step 7



- Pry up the keyboard.


**i** The keyboard is still attached by its ribbon.

## Step 8



- Remove keyboard wire by popping latch under blue plastic

## Step 9 — Case

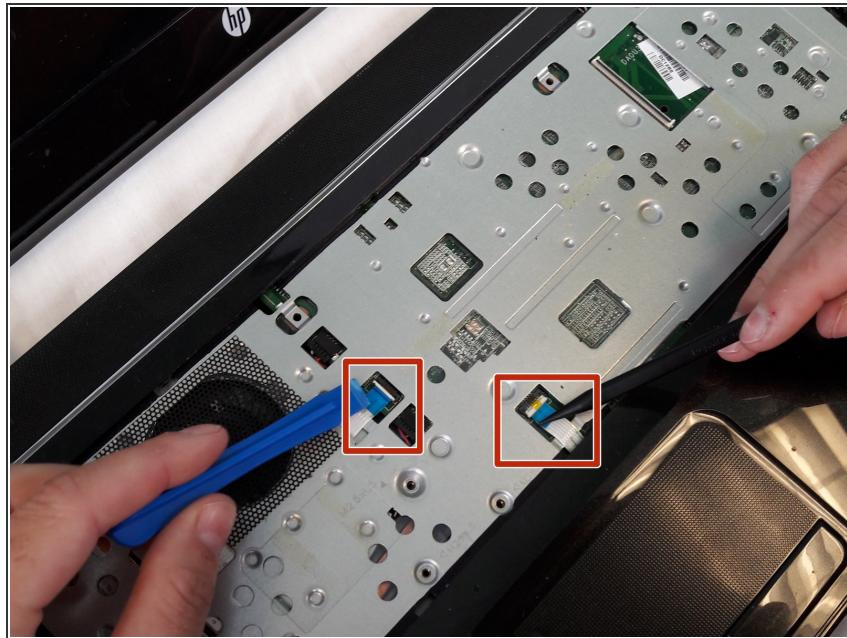

- Using the spudger to lift up on the white tabs
- Pull horizontally on the blue ribbon to disconnect the cables

## Step 10



- Remove the five 5.5mm Phillips #1 screws from the case

## Step 11




- Remove eight 6.5mm Phillips #1 screws from the back cover

## Step 12



- Starting at a top corner, use the pry tool to split the case.
- Slowly work around the case, pulling up gently to release the clips.

## Step 13 — Hard Drive

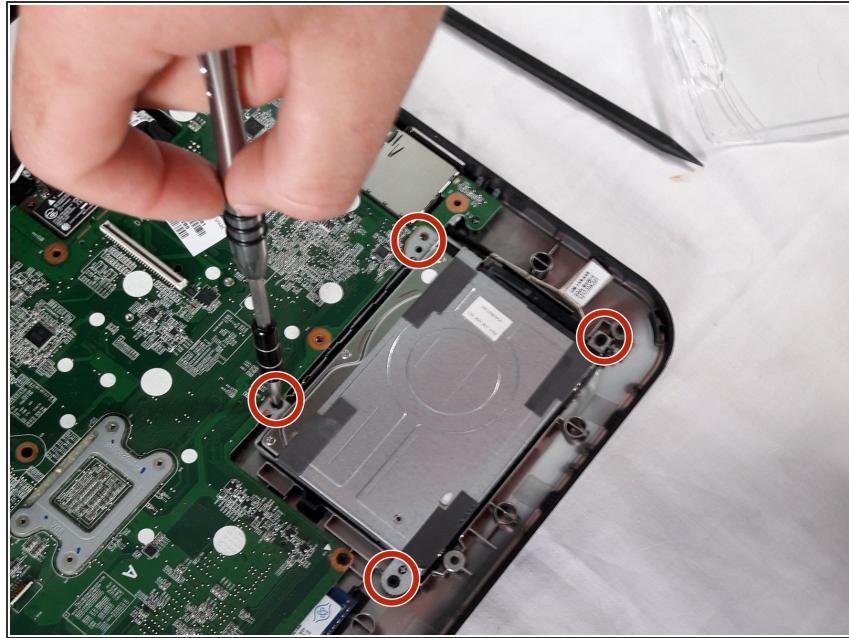


- Remove the 4 x 5.5 mm screws connecting the hard drive tot he case.

## Step 14



- Remove hard drive from bracket being careful of it's cable.

## Step 15

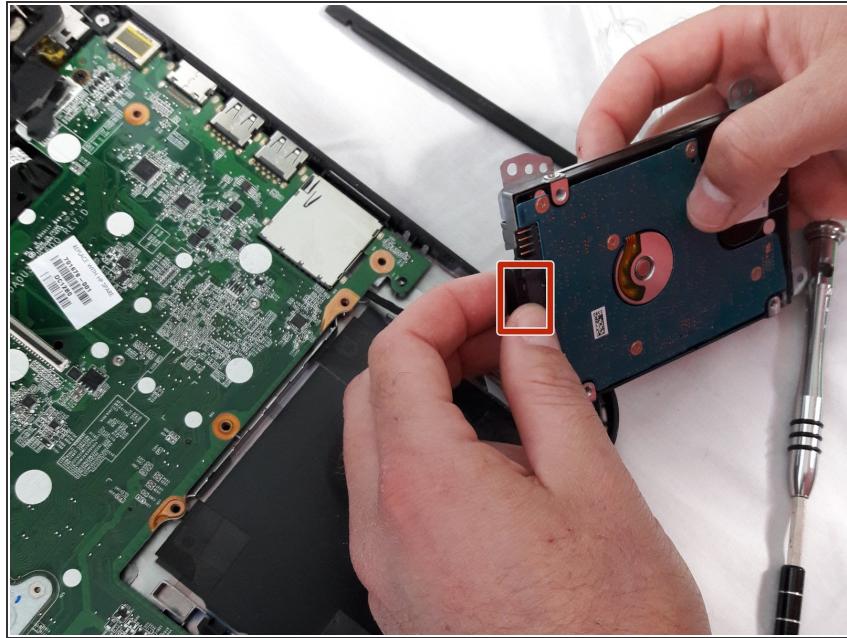

- Disconnect cable from hard drive.

To reassemble your device, follow these instructions in reverse order.