




HP Pavilion Wave 600-a014 RAM Replacement

This guide will help you replace the RAM in your computer.

Written By: Arthur Knatt

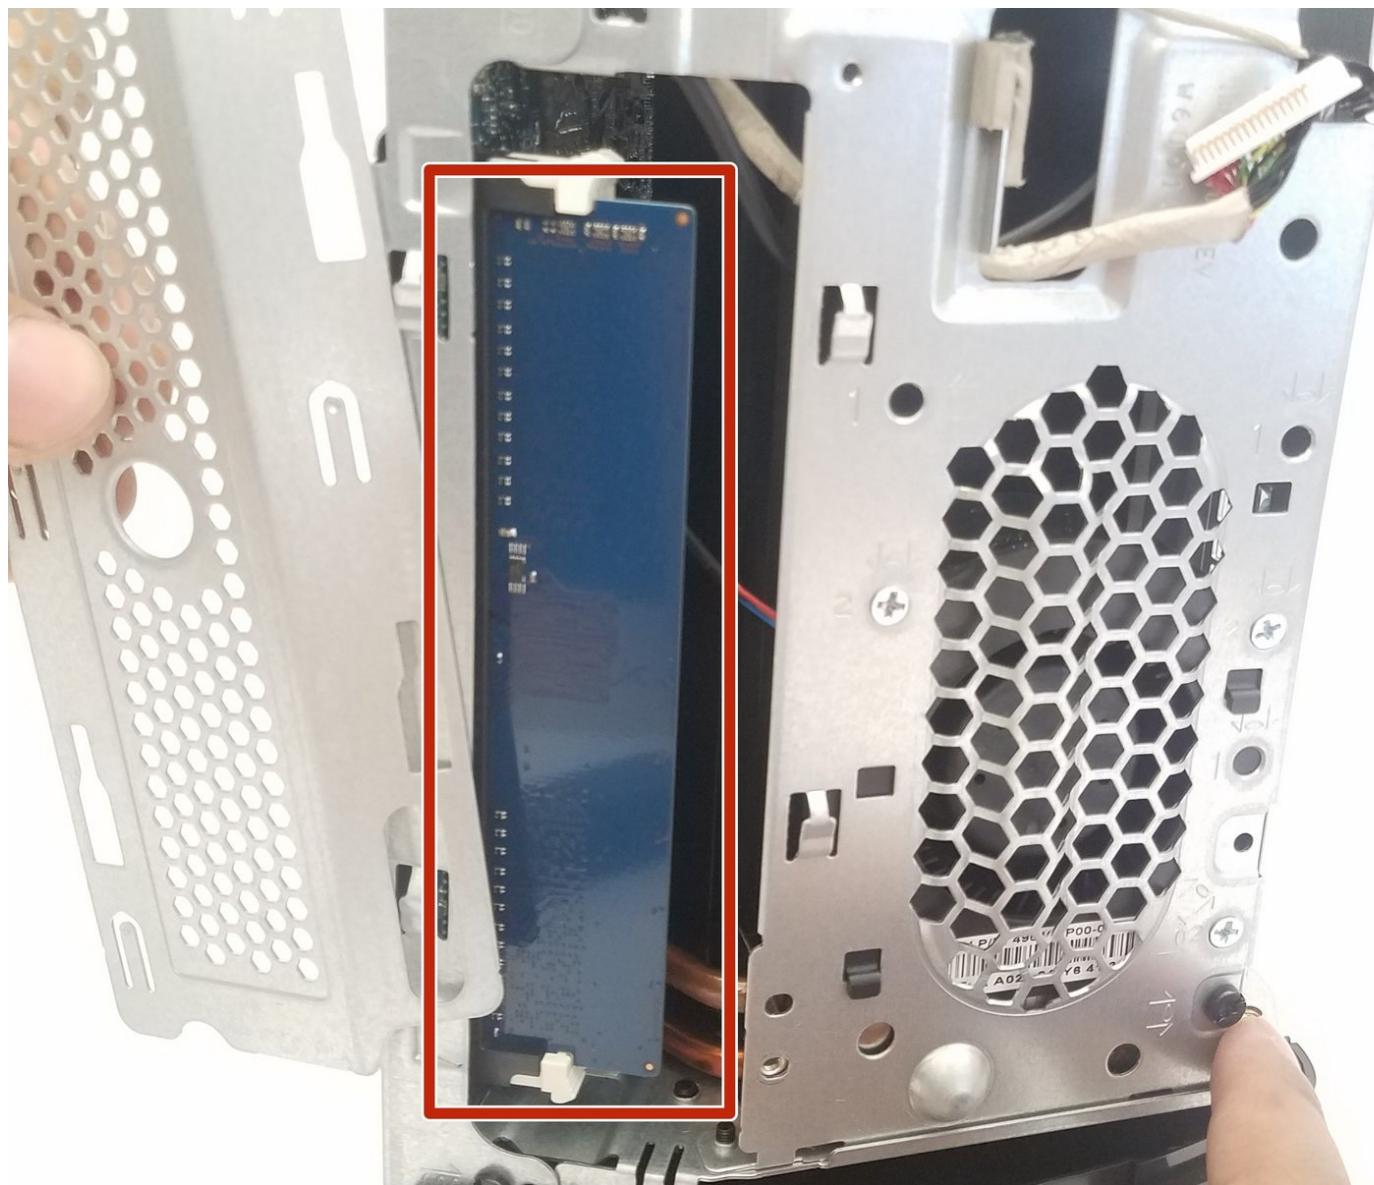

INTRODUCTION

If your computer has errors or just needs a speed boost, consider changing the RAM by following this guide.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)

PARTS:


- [8GB PC3-1600 \(2x 4GB pair\)](#) (1)
This is a recommended replacement part.

Step 1 — RAM





- Disconnect PC from power source and any other devices.

Step 2

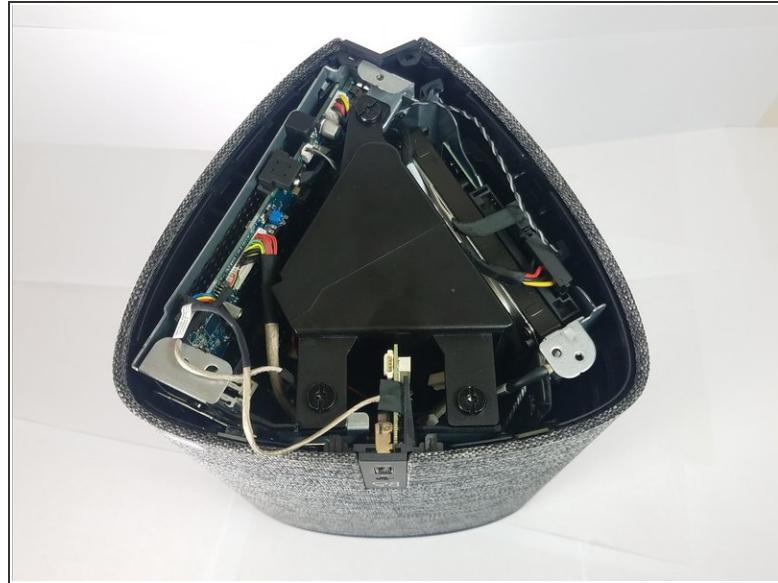

- Turn over computer and remove the rubber feet.
- Remove the three 8mm Philips screws with a Philips #0 screwdriver.
- Use a pry tool and lift up on the lid.

Step 3

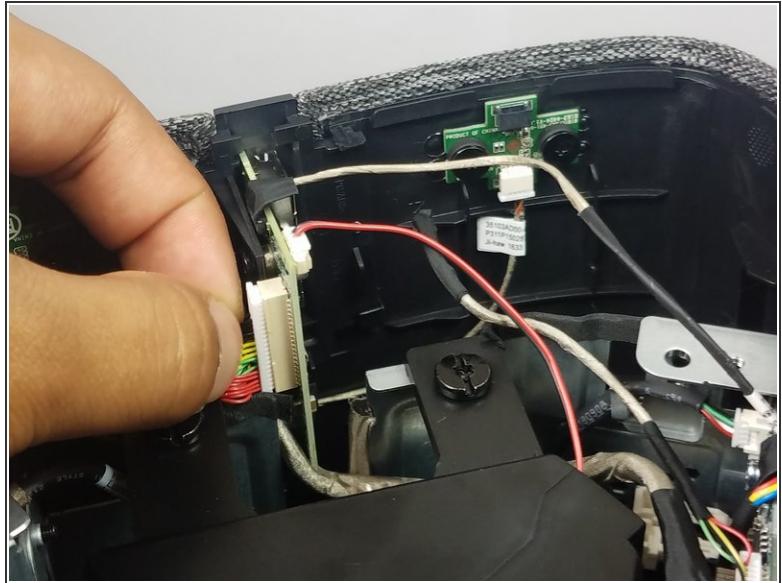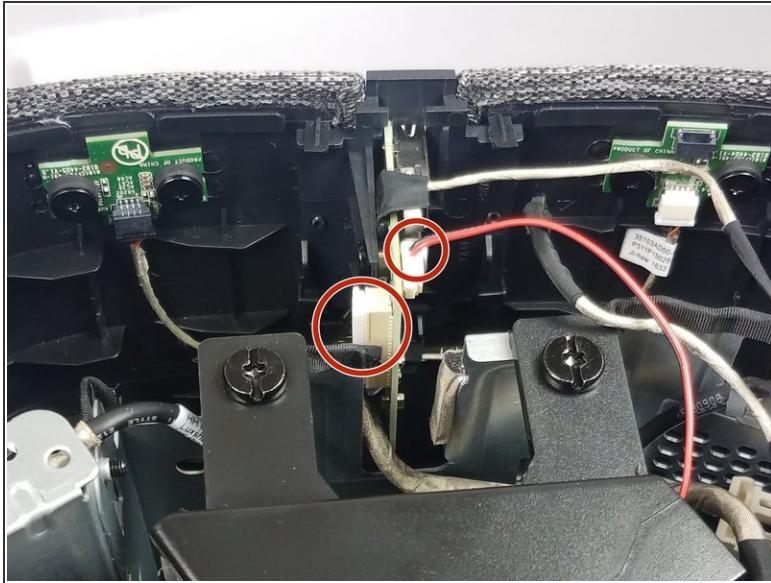


- Remove the two cables connecting the motherboard to the front I/O panel.

Step 4



- From the back I/O panel, pry open the cloth covering.

Step 5

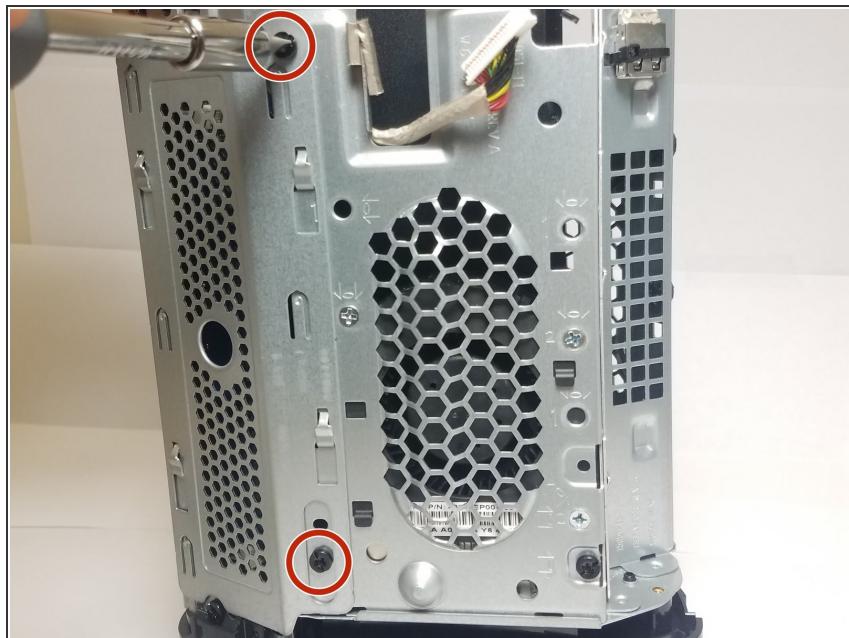


- Remove the 2 black philips screws on the outside of the PC, to the left of the fan.
- (i)* There is one on the top and one on the bottom.

Step 6




- Put your thumb on the penny-sized hole, and slide the panel upwards.
- Remove the panel to reveal the stock blue RAM.

Step 7

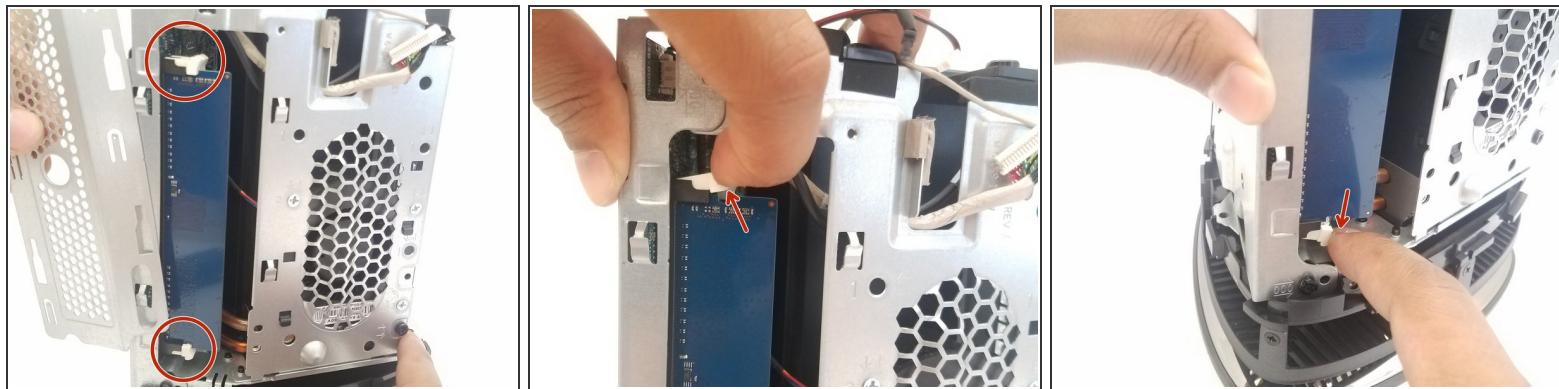

- Push both of the white tabs away from the RAM stick to free the RAM.

Step 8

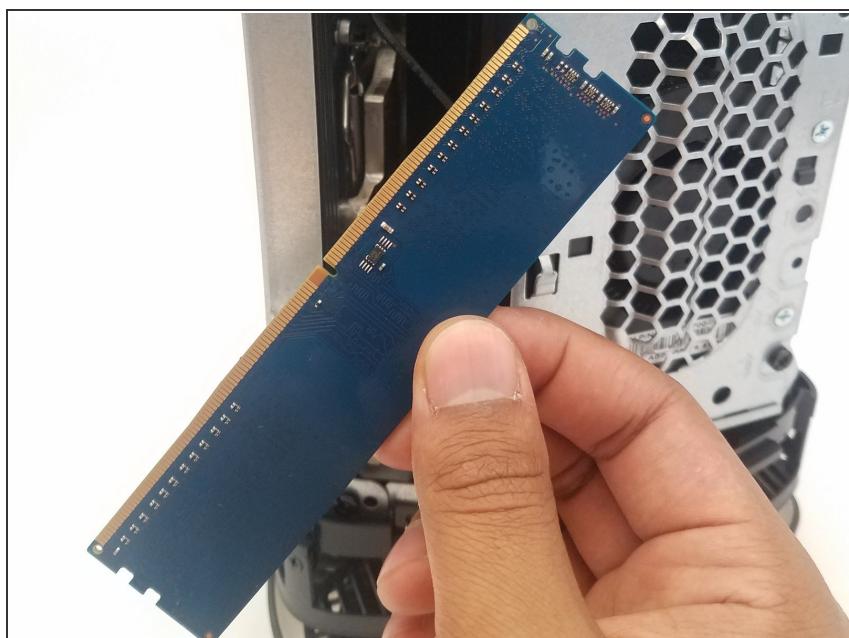

- You can now easily pull the RAM out of the socket, and replace up to two new ones!

To reassemble your device, follow these instructions in reverse order.