




HP Pavilion dv5000 Optical Drive Replacement

Removing the optical drive

Written By: Alex Kwok

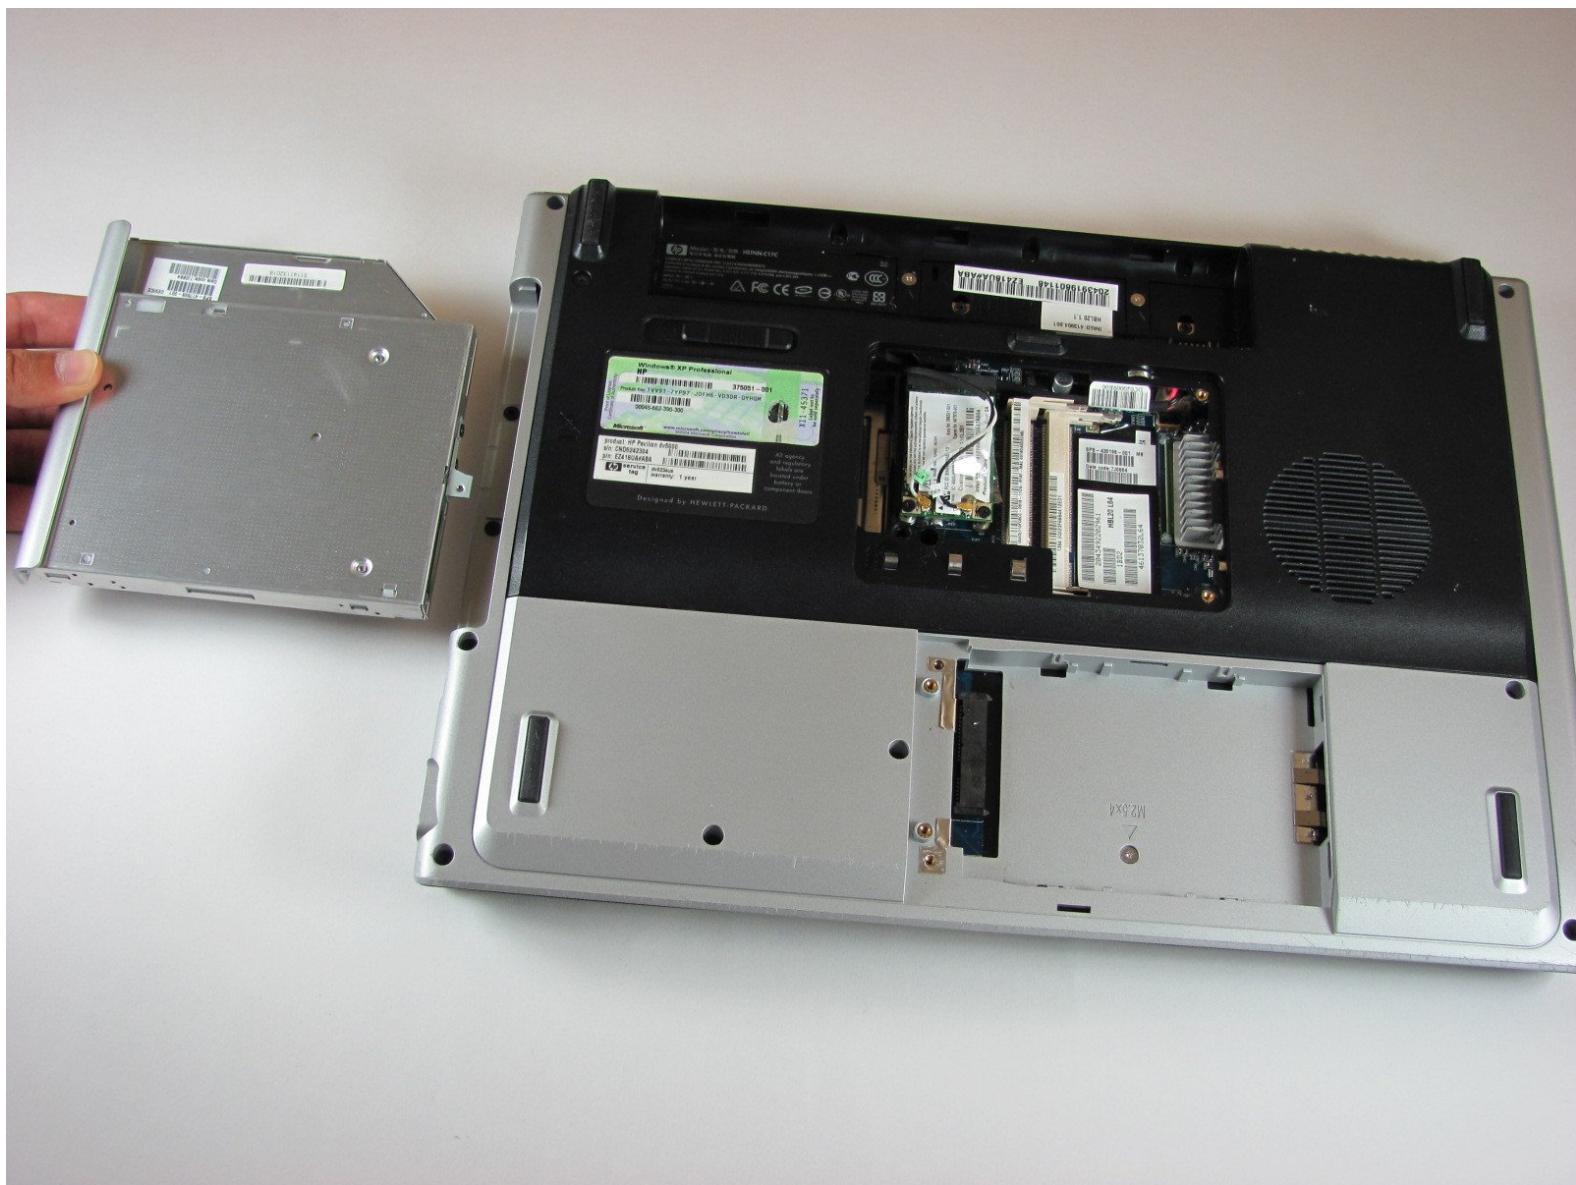

INTRODUCTION

This guide will tell you how to remove the optical drive, or CD/DVD drive.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery




- ⚠ Turn off and unplug the computer from all external power sources.
- Shut the screen, and lay the computer face-down on a flat, sturdy surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image. Sliding this switch from right to left will release the battery.
- Remove the battery.

Step 2 — RAM Cover



- Remove the two 5mm screws securing the right side of the RAM cover to the computer frame.
- Lift the right side of the RAM cover to remove.

Step 3 — Optical Drive

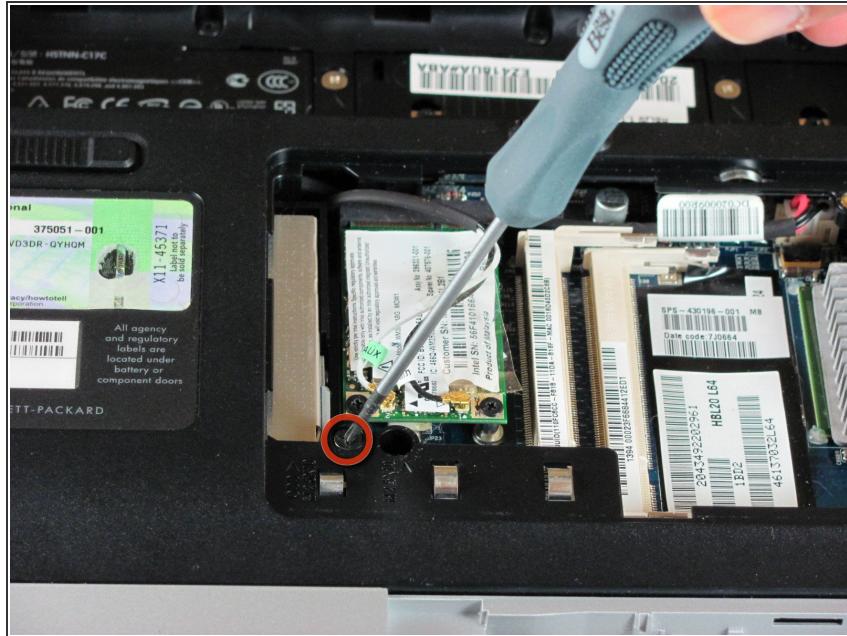

- Remove the 11.0mm screw securing the optical drive to the computer.

Step 4



- Locate the optical drive. The optical drive is located on the left side of the RAM bay.
- Press the exposed edge of the optical drive gently with the spudger until the drive releases from the computer frame.
- Pull the optical drive completely out of the computer frame.

To reassemble your device, follow these instructions in reverse order.