



HP Pavilion dv5000 Wifi Card

A step-by-step guide to accessing and removing the Wifi card for an HP Pavilion dv5000 laptop.

Written By: Sam Kaplan



INTRODUCTION

The HP Pavilion dv5000 Wifi Card allows for wireless network connectivity. It is located on the mother board, beneath the RAM memory/Wifi compartment cover.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery



- ⚠ Turn off and unplug the computer from all external power sources.
- Shut the screen, and lay the computer face-down on a flat, sturdy surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image. Sliding this switch from right to left will release the battery.
- Remove the battery.

Step 2 — RAM Cover



- Remove the two 5mm screws securing the right side of the RAM cover to the computer frame.
- Lift the right side of the RAM cover to remove.


Step 3 — Wifi Card



- The wifi card is connected to the computer with the two antenna lead wires.

- *(i)* Note where the white AUX wire and the black MAIN wire connect to the wifi card before disconnecting.

Step 4

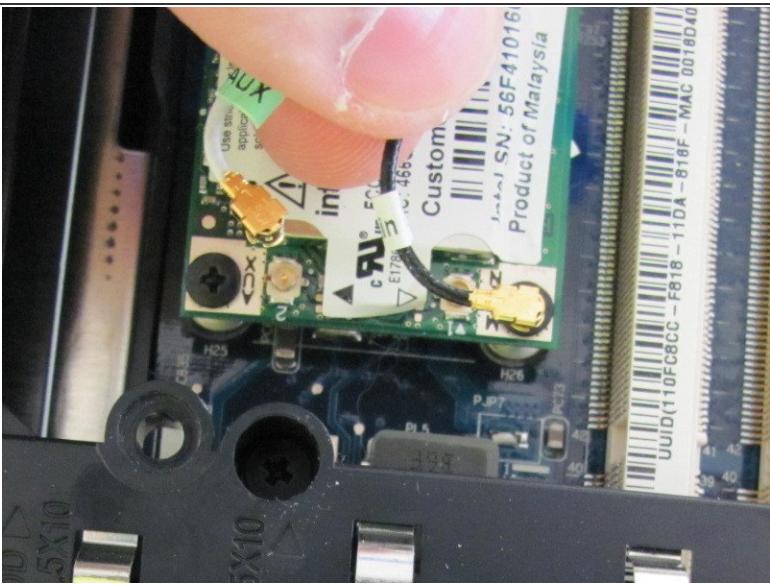


- Disconnect the antenna leads from the wifi card by lifting the gold ends of the wires off the prongs on the wifi card.
 - The white wire connects to the AUX terminal.
 - The black wire connects to the MAIN terminal.

Step 5



- Remove the two 6.0mm screws securing the wifi card to the computer.

Step 6

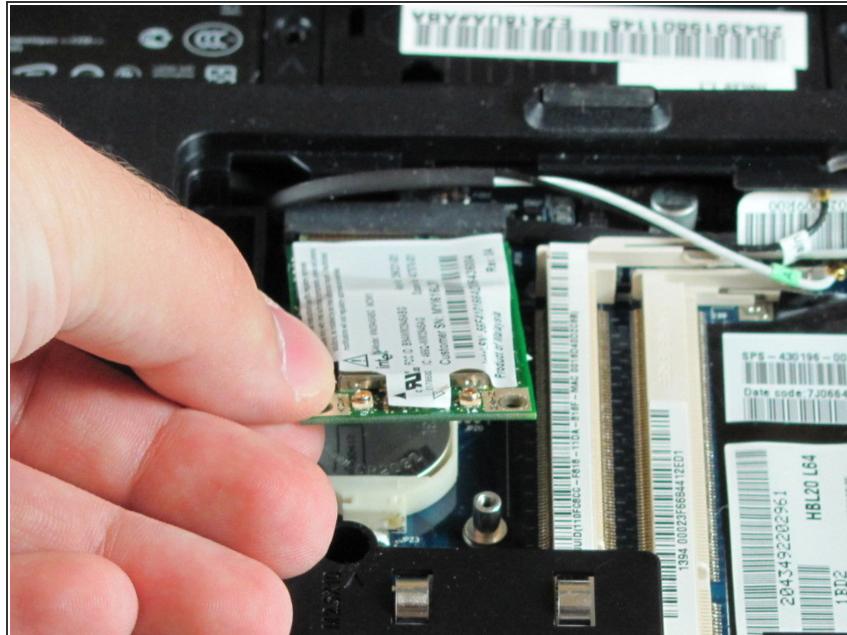

- Remove the wifi card.

To reassemble your device, follow these instructions in reverse order.