



HP Pavilion dv6000 LCD Screen Replacement

Replace the LCD in your HP Pavilion dv6000.

Written By: Ben Hirsch



INTRODUCTION

Replace the LCD in your HP Pavilion dv6000.


TOOLS:

- Phillips #1 Screwdriver (1)

PARTS:

- 15.4" PC Laptop LCD LTN154AT07 (1)

Step 1 — LCD Screen

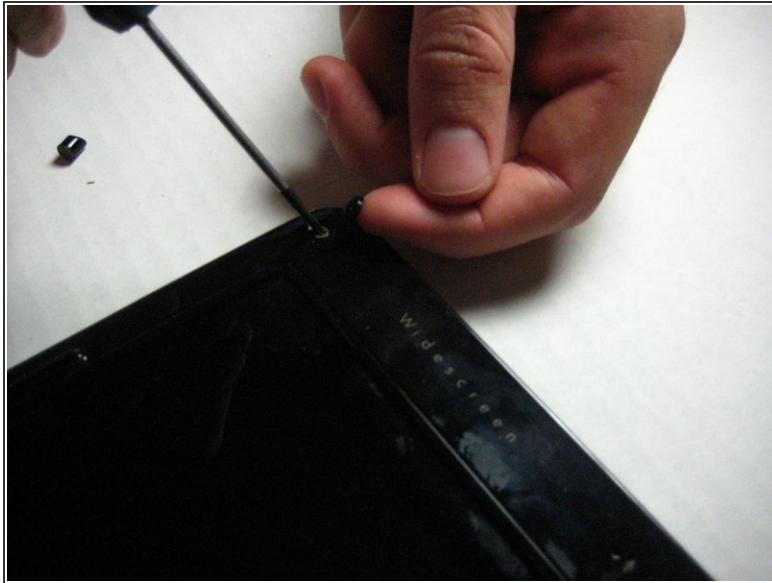

- Remove rubber screw covers from the LCD screen. The top covers pop off with a fingernail but the two on the bottom may require a screwdriver or flat tool.
- Remove the six 7.15mm screws underneath the stoppers. There are four on top and two on bottom.

Step 2



- Press the tabs on the sides of the screen in and pop the plastic off. Careful, the plastic is very flimsy and may break.

Step 3




- Remove the two screws (5.8mm) on either side of the LCD near the hinge. Remove the screws on the outermost side first.

Step 4




- Take out the two 3.58mm screws on the LCD at the top (one on each edge).

Step 5

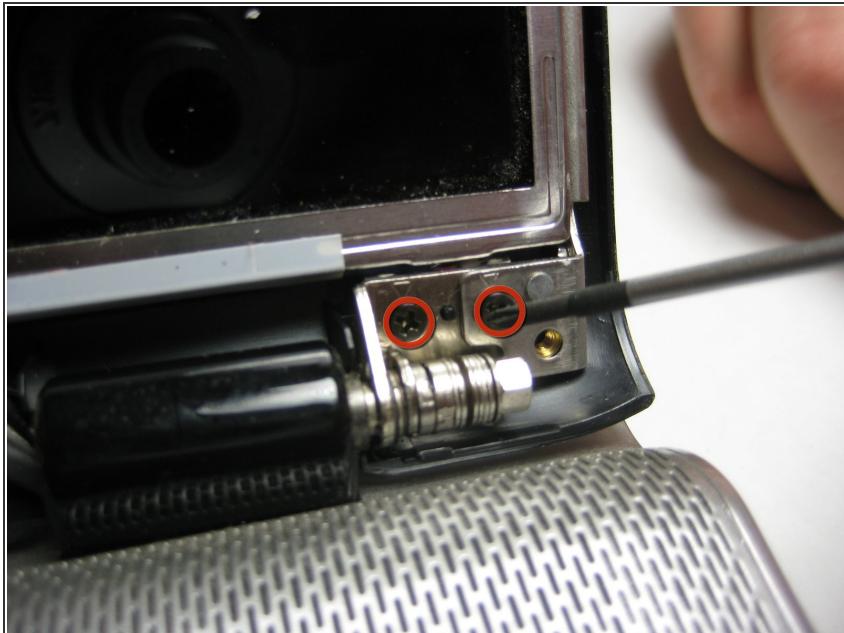

- Hold on to the LCD screen to prevent it from falling over and remove the two 3.58mm screws on the sides at the bottom.

Step 6

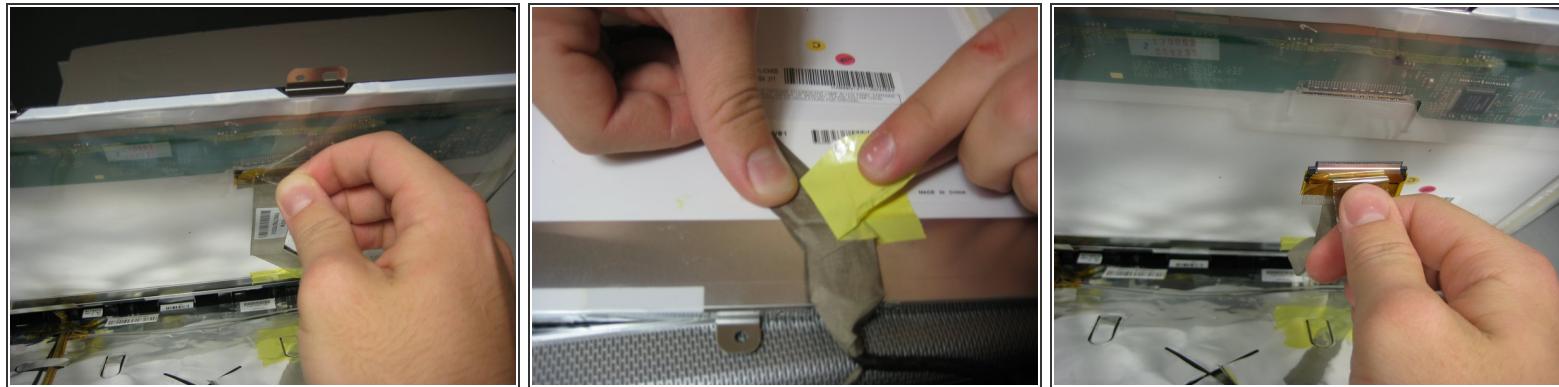

- Let the screen gently rest on the keyboard.
- Remove the tape from the ribbon.

ⓘ Stop here and check the cable

To reassemble your device, follow these instructions in reverse order.