



HP Pavilion dv7-3065dx Disk Drive Replacement

Replace disk drive for the HP Pavilion dv7-3065dx. This is located on the side of the computer and is a quick fix!

Written By: Bailey York



INTRODUCTION

This guide will instruct you on how to replace the disk drive for the HP Pavilion dv7-3065dx. This is located on the side of the computer and is a quick fix!



TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
-

Step 1 — Disk Drive



- Remove the Battery as a safety precaution

✦ There is a latch identified in the picture. By sliding this latch to the left, the battery is released from a lock position.

Step 2



- Use a Philips screwdriver to unscrew one screw holding the disk drive to the laptop.
- ⓘ In the photo there is a covering missing from another piece of the laptop but this will not impact the disk drive.

Step 3



- Slide (pull) the disk drive out from the laptop and place it off to the side.
- The disk drive is the silver container as seen in the photo.

To reassemble your device, follow these instructions in reverse order.