



# HP Pavilion dv7-3065dx Keyboard Replacement

HP Pavilion dv7-3065dx Keyboard Replacement

Written By: Nicholas Moore




## INTRODUCTION

This guide will instruct you on how to replace the keyboard for your HP Pavilion dv7-3065dx.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Fingers](#) (1)
- [Phillips #1 Screwdriver](#) (1)


## Step 1 — Battery

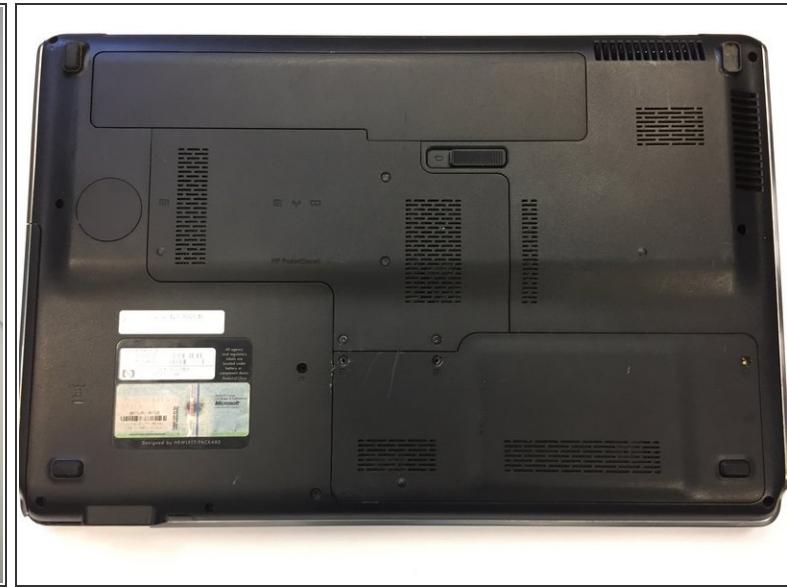

 Turn off the device before removing the battery.

- Place the laptop upside down on a flat surface so that the bottom is facing up.
- *(i)* The battery is the long rectangle above the latch.

## Step 2

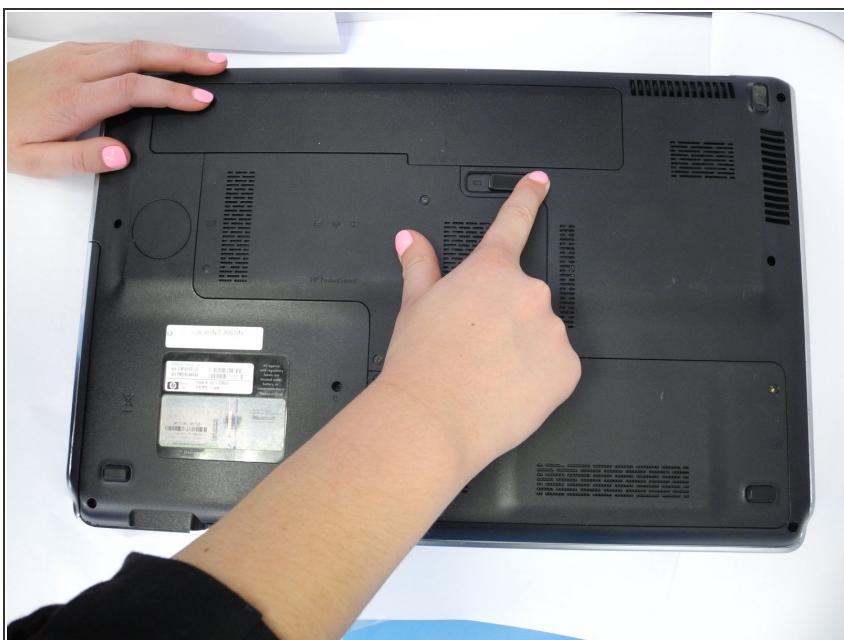

- Slide the battery latch to the left to release the battery.

## Step 3



- Carefully pull out the battery while holding the latch to the open position with your finger.

## Step 4 — Hard Drive



- Loosen the four screws that secure the hard drive panel with a Phillips head screwdriver.

Do not completely remove the screws from the panel.

## Step 5



- Lift the drive cover to expose the hard drive.

ⓘ This device did not have a physical hard drive to work with.

## Step 6



- Gently tug on the black tabs located on each end of the hard drive in order to loosen the hard drive from the motherboard.

⚠ Be careful when working with the hard drive cable.

## Step 7



- Separate the hard drive from the cable by firmly gripping the hard drive and the black plug.

## Step 8




- Remove the four Phillips screws that secure the hard drive to its carrier.
- *i* There are two screws on each side.

## Step 9



- Lift and remove the hard drive from the metal surrounding its perimeter.

## Step 10 — Keyboard

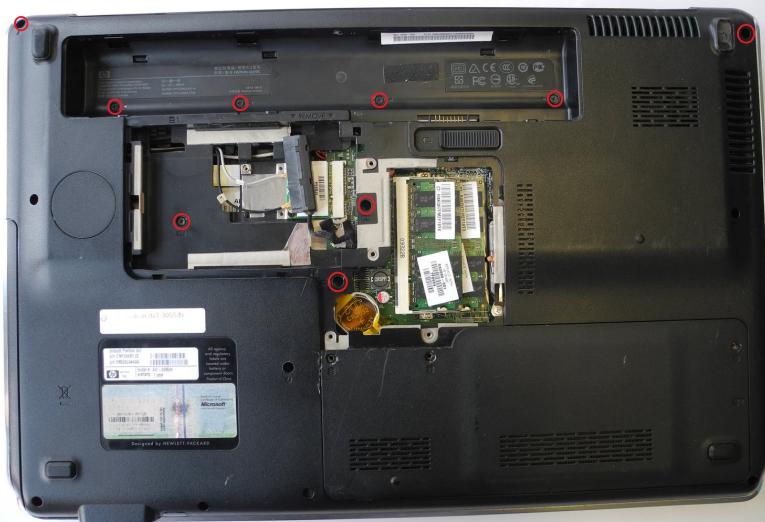

- Locate these seven screws that fasten the keyboard and switch cover to the computer.
- Remove these screws

## Step 11



- Flip over the computer to the upright position and locate the switch cover.
- Carefully pry the switch cover up until it detaches from the computer.

**⚠** The switch cover is held in with plastic clips. They may break if they are removed too forcefully.

## Step 12



- Raise the switch cover to expose the speaker assembly.
- Carefully detach the ribbon cables from the speaker assembly.
- Locate and remove these four screws from the switch cover.

## Step 13



- Locate and remove the screws that hold the keyboard to the computer.
- Lift the keyboard up to expose the keyboard connector.

***(i)*** The keyboard connector is the small cord located near the screen of the computer.

## Step 14



- Disconnect the keyboard connector by unhinging the blue plastic clips and gently pulling the cord.
- The keyboard can now be removed from the computer.

To reassemble your device, follow these instructions in reverse order.