




HP Pavilion dv7t-7000 Speaker Replacement

How to replace the speaker on a HP Pavilion dv7t-7000 laptop.

Written By: Nabin Bhatta

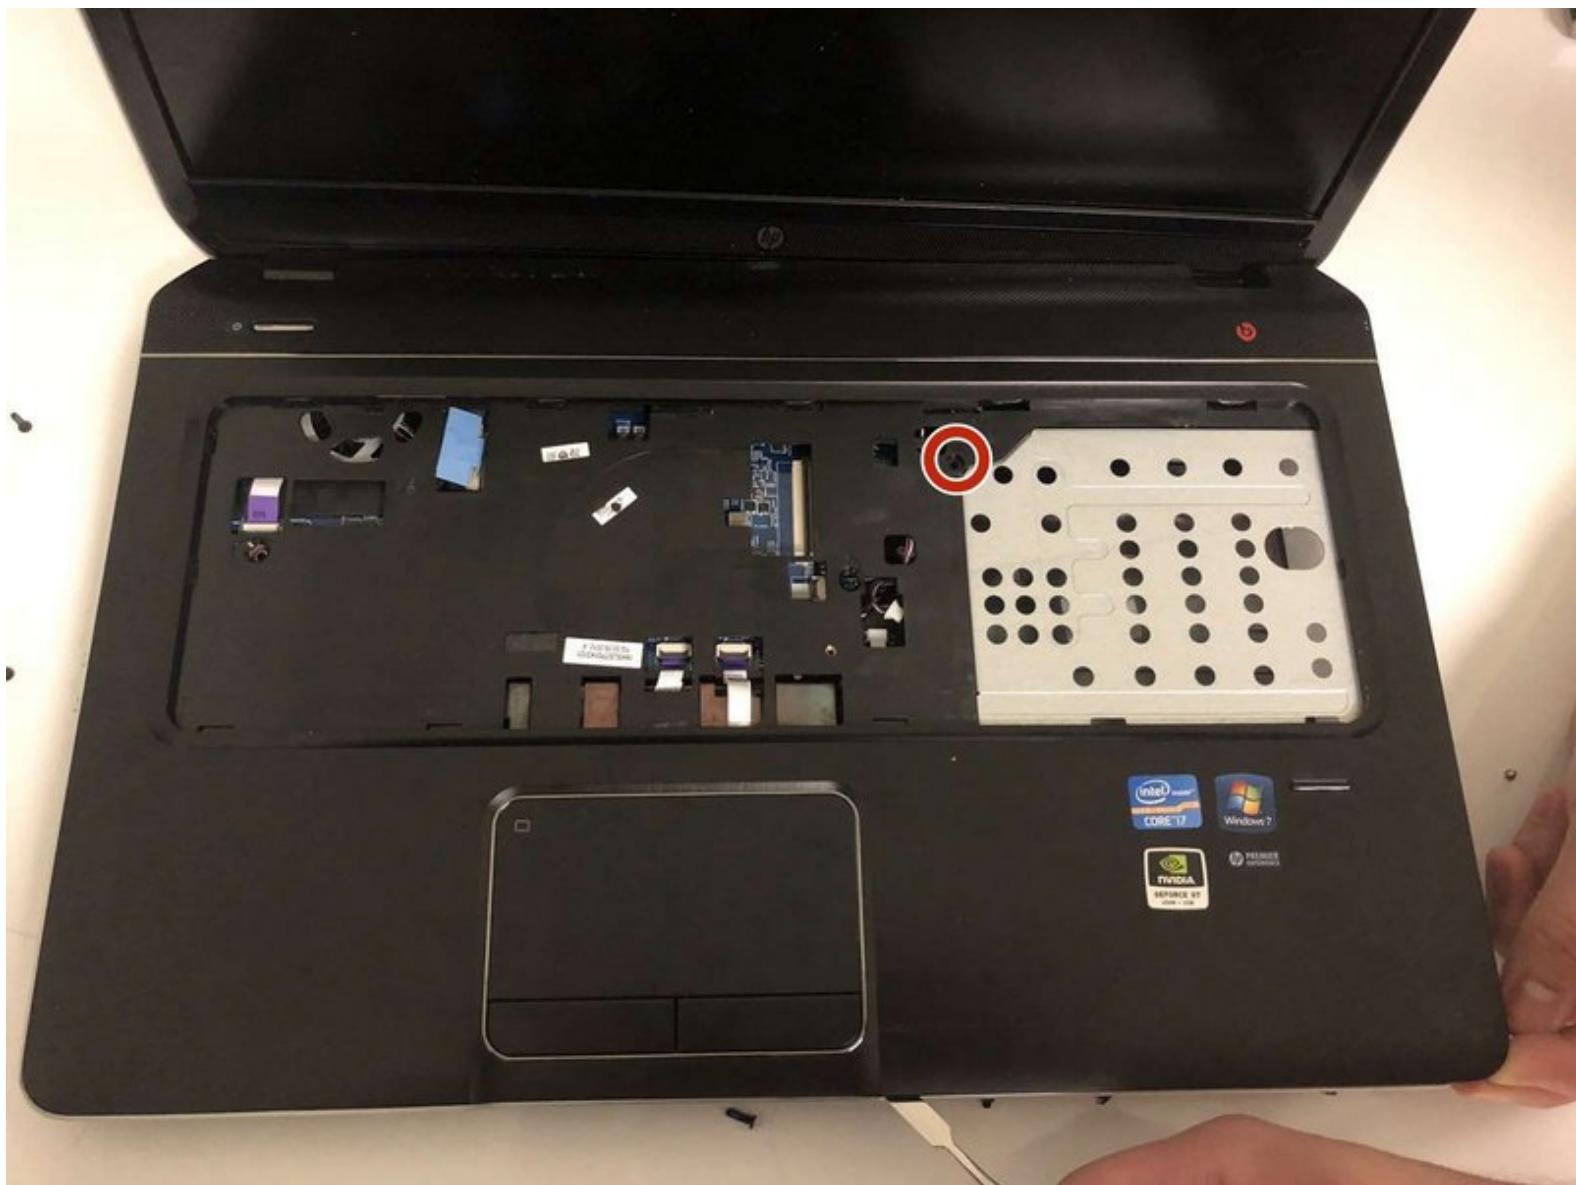

INTRODUCTION

How to replace the speaker on a HP Pavilion dv7t-7000 laptop.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery




- Turn the computer off and disconnect it from all power sources.

Step 2

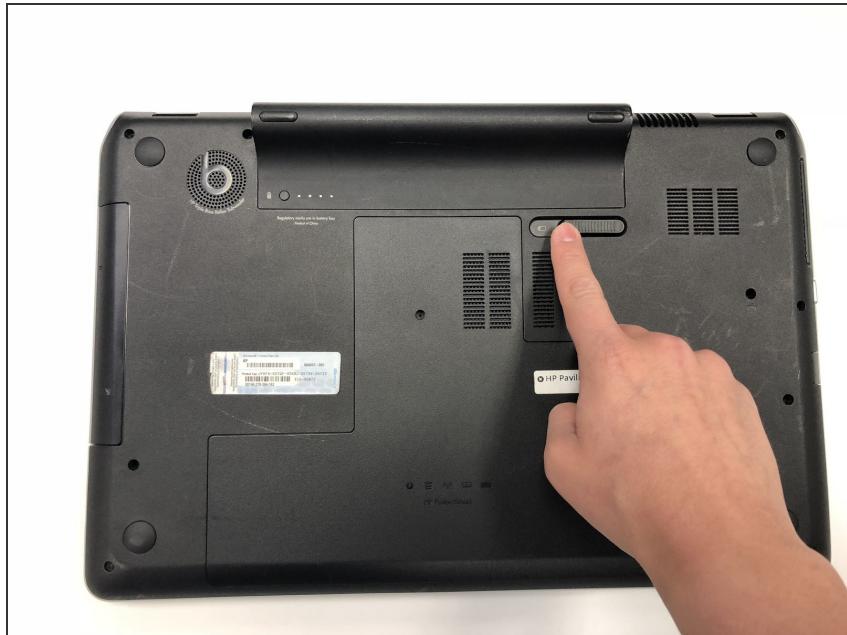

- Slide the battery release switch to the left.

Step 3

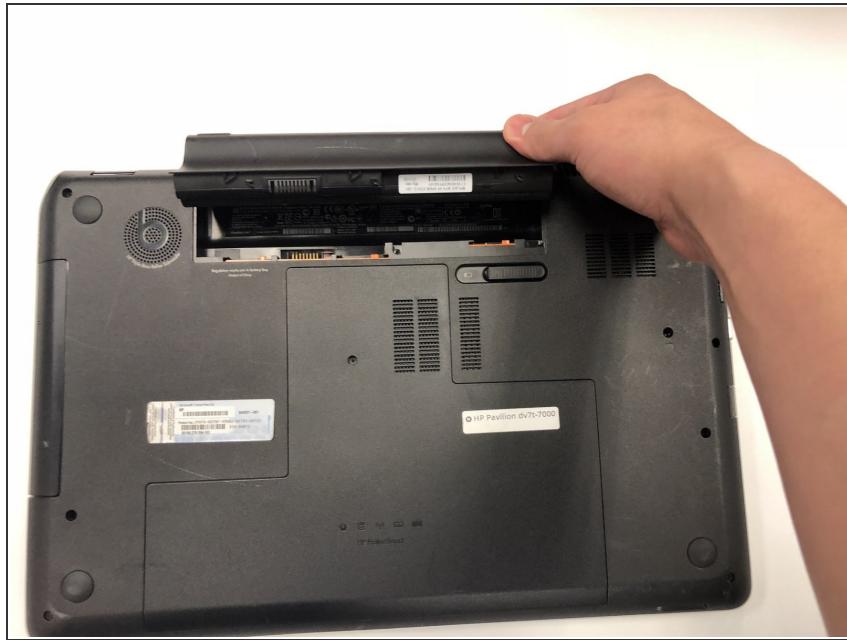

- Hold the release switch all of the way to the left and your other hand to pull the battery out.


Step 4 — Back Panel



- Unscrew the single Phillips #00 screw.

i Screw will not come out, it is connected to the panel

Step 5

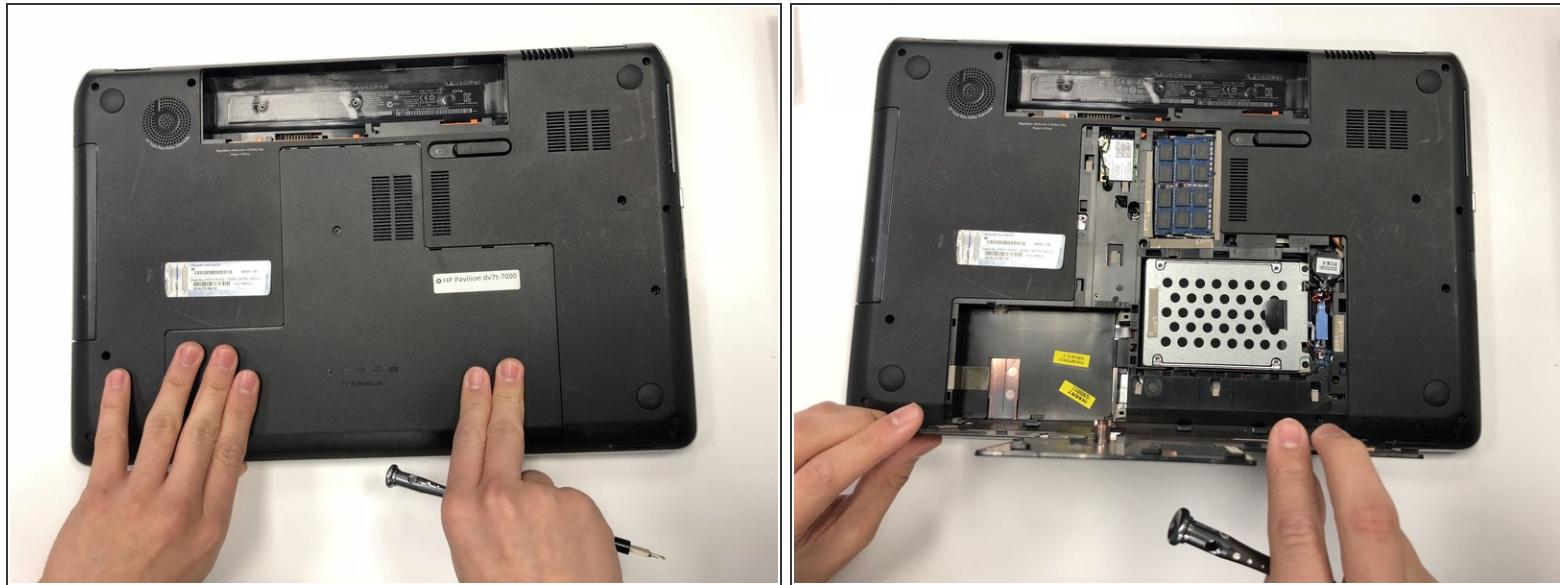

- Remove service hatch by sliding away from the computer and lifting up.

Step 6 — Keyboard



- Remove the single Phillips #00 screw.
- Flip the laptop over.

Step 7



- Wedge a spudger in between the keyboard and palm rest bezel.
- Pry upward to release the keyboard clips.

⚠ The keyboard is plugged into the motherboard, so be careful not to pull out while lifting keyboard.

Step 8




- Use the flat end of a spudger to flip up the black tab on the ZIF connectors.
- Pull the ribbon cables out of the ZIF connectors.
- Remove the keyboard.

Step 9 — Speaker




- Use Phillips #00 to unscrew the screw and take off the front panel.

Step 10

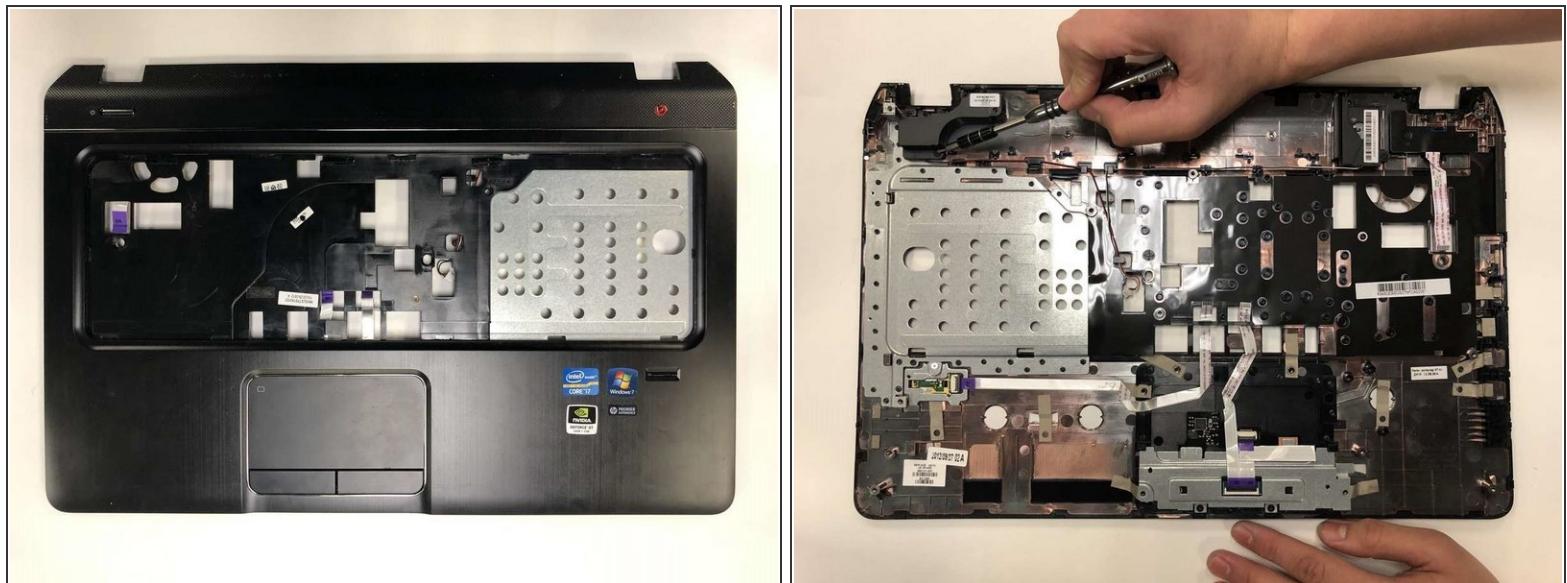

- The speaker is located at the back side of the front panel.
- Unscrew two screws located at the speaker.

Step 11

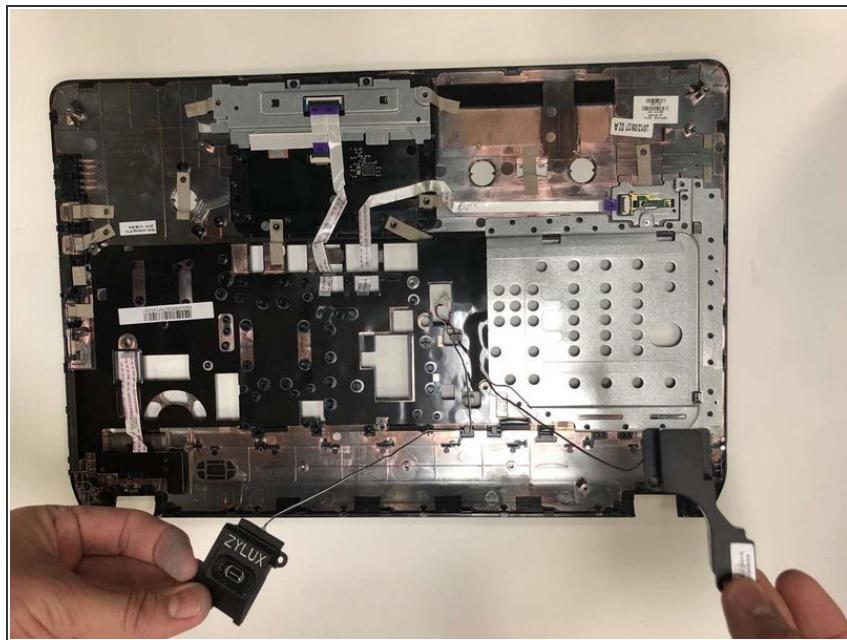

- Pull out the speakers to remove.

To reassemble your device, follow these instructions in reverse order.