


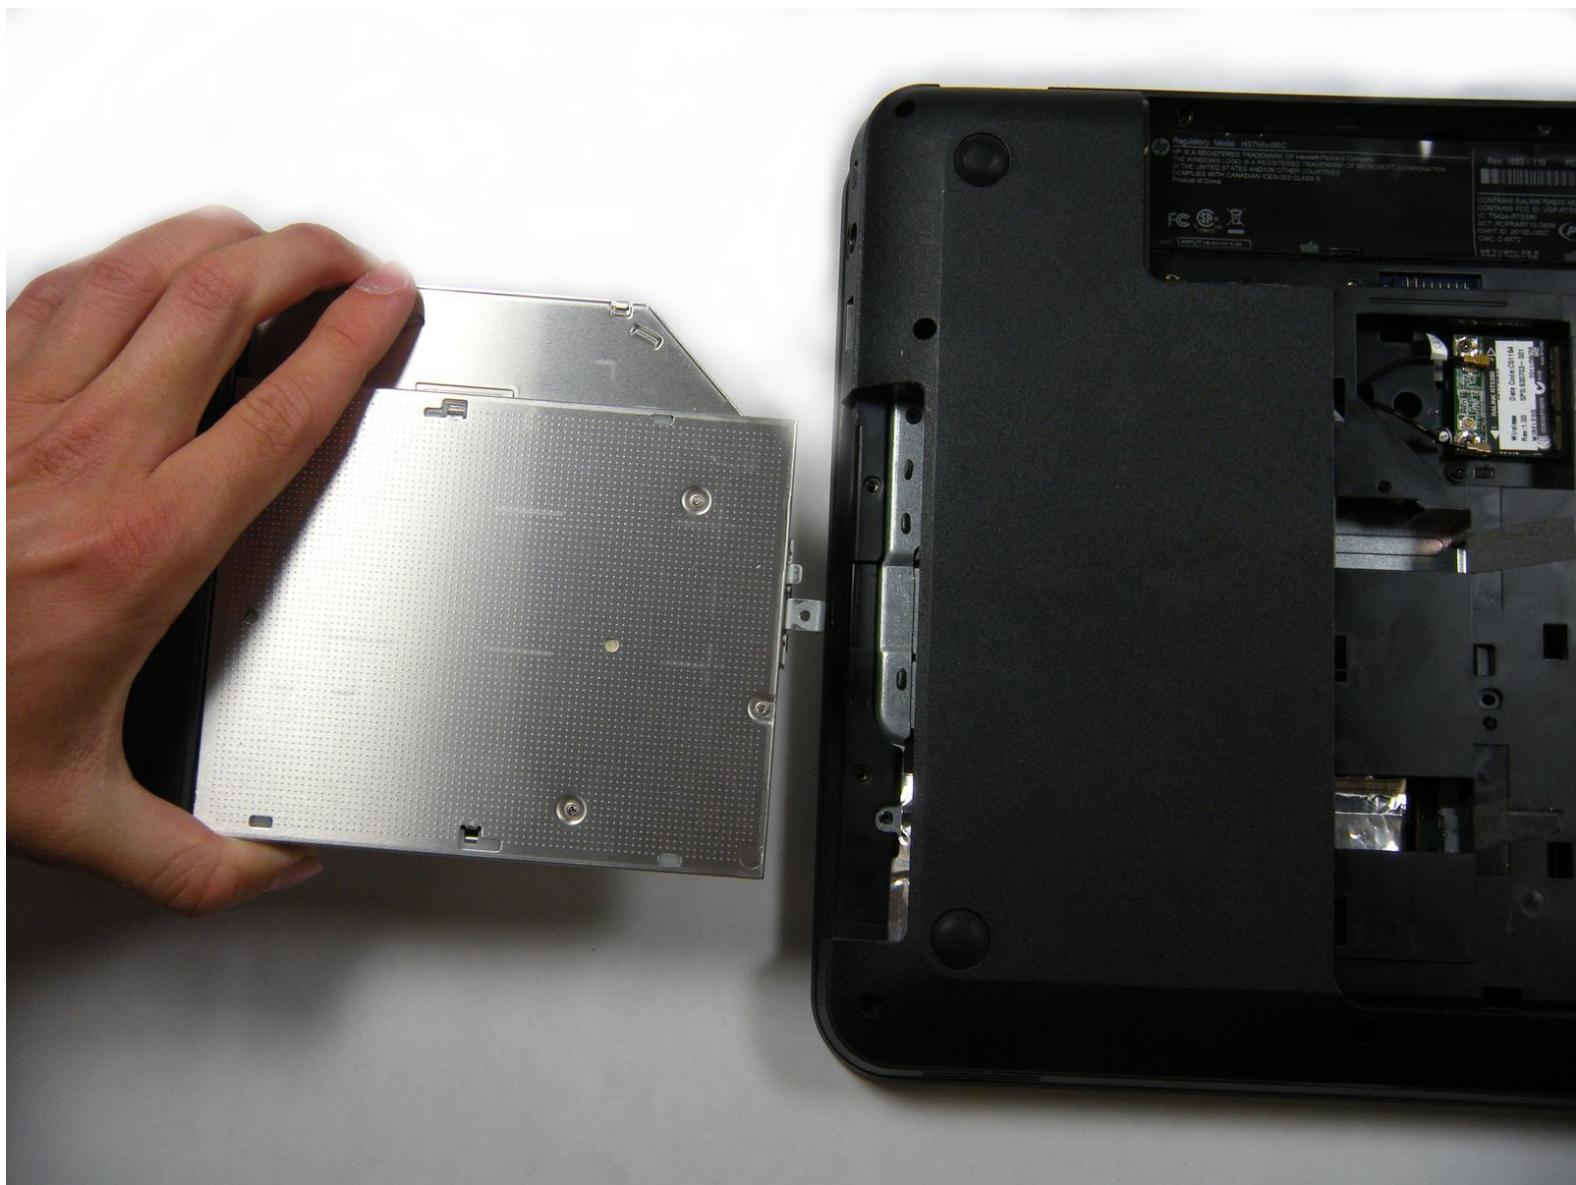

HP Pavilion g6-1b79dx CD Drive Replacement

Replacing the CD drive on the laptop.

Written By: patrickhall



This document was generated on 2019-09-30 03:25:12 PM (MST).

INTRODUCTION

If the CD drive is damaged or needs to be removed to get to another component of the laptop, this is a guide to do so.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)


Step 1 — Battery



- Flip the computer so the bottom is facing up with the battery away from you.

Turn off the computer and disconnect the charger.

Step 2

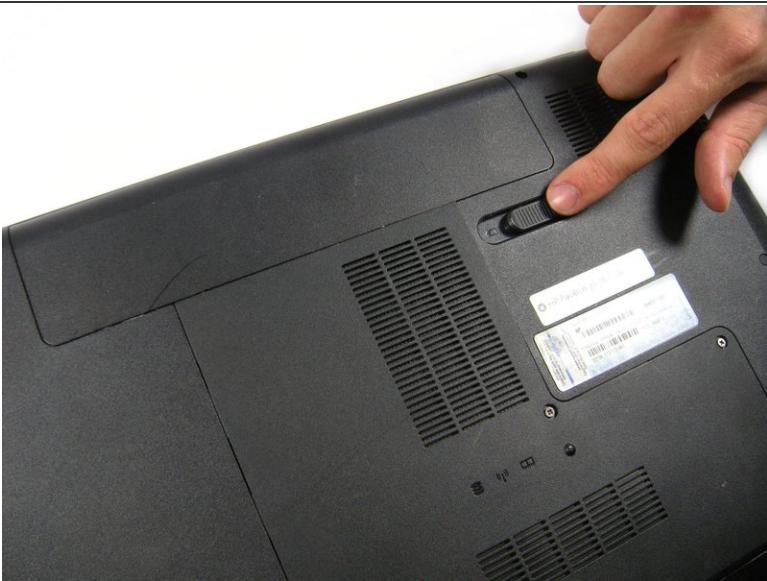

- Slide the battery switch to the left until the battery unlatches from the base of the laptop.

Step 3



- Lift the battery from its compartment away from the laptop.


Step 4 — Bottom Panel



- Loosen the two 5.7 mm screws on the bottom panel using a PH00 screwdriver.

⚠ The screws do not come out of the panel due to small washers. Do not try to remove the screws completely.

Step 5

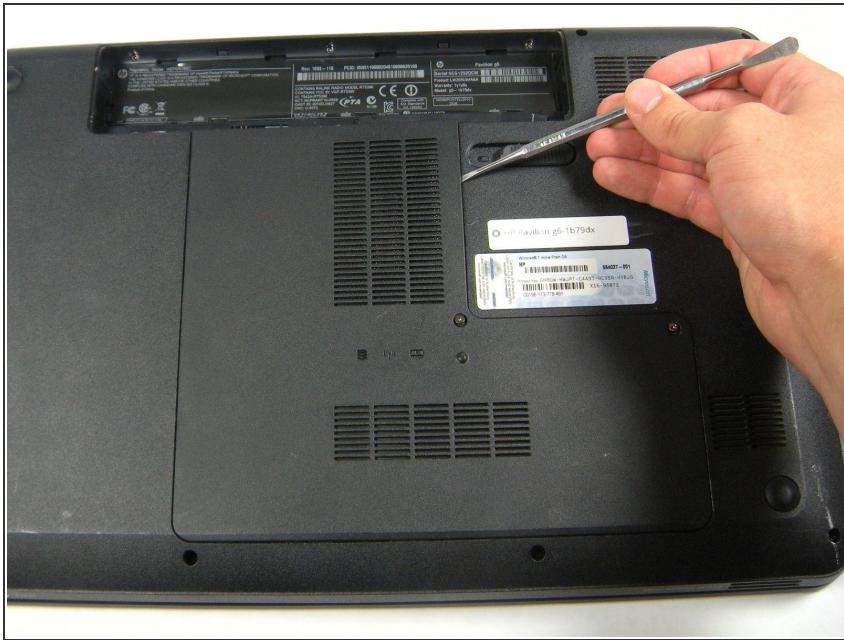

- Use the metal spudger all around the panel to pop it up from the base.

! When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.



i Using your finger is acceptable but not entirely recommended. Be gentle if you choose to use your hands.

Step 6




- With your hands, lift the panel completely off the base of the laptop.

Step 7 — CD Drive

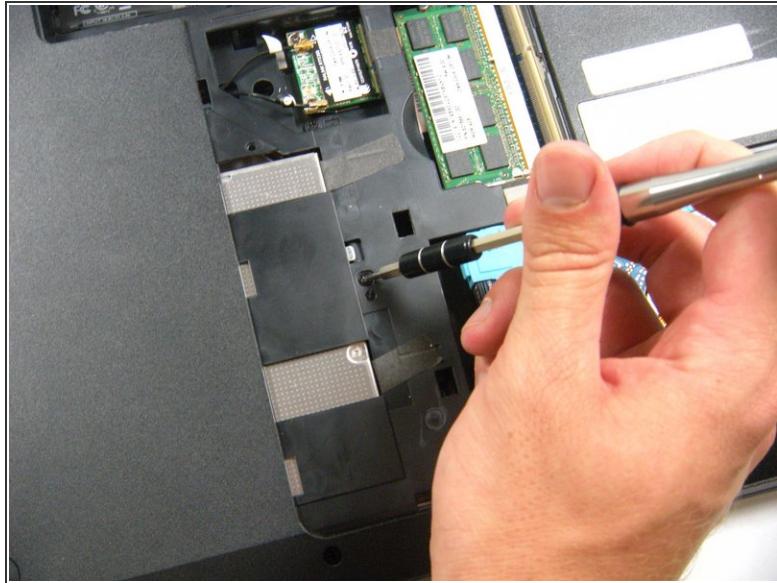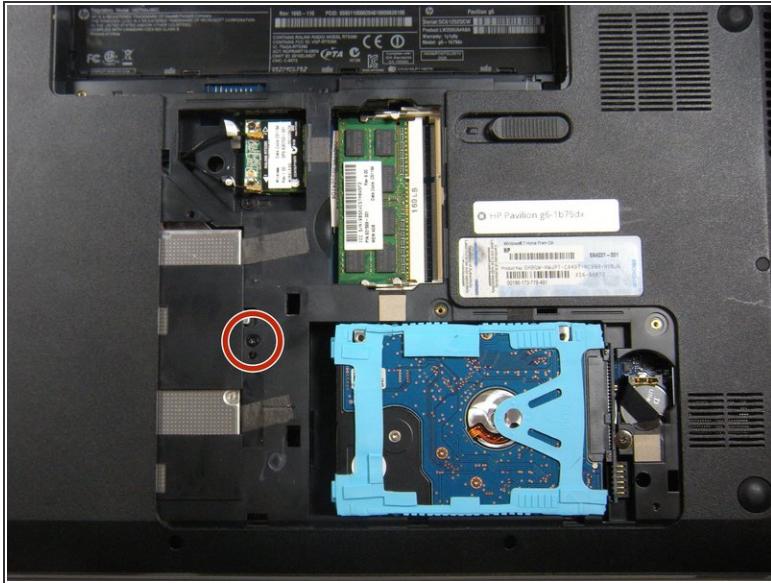

- Using the PH 00 screwdriver, remove the screw left of the CD drive.

Step 8

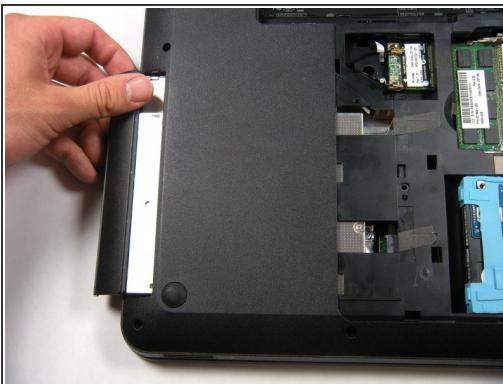

- Slide the CD drive out from the exterior of the laptop.

To reassemble your device, follow these instructions in reverse order.