



HP Pavilion g6-2228tx Hard Drive Replacement

Replace hard drive to increase storage for your HP Pavilion g6-2228tx.

Written By: Hai Lin




INTRODUCTION

The hard drive is an important part to a laptop. The hard drive's main function is store data for the laptop. Replace hard drive if it is faulty or a need to increase storage

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Battery

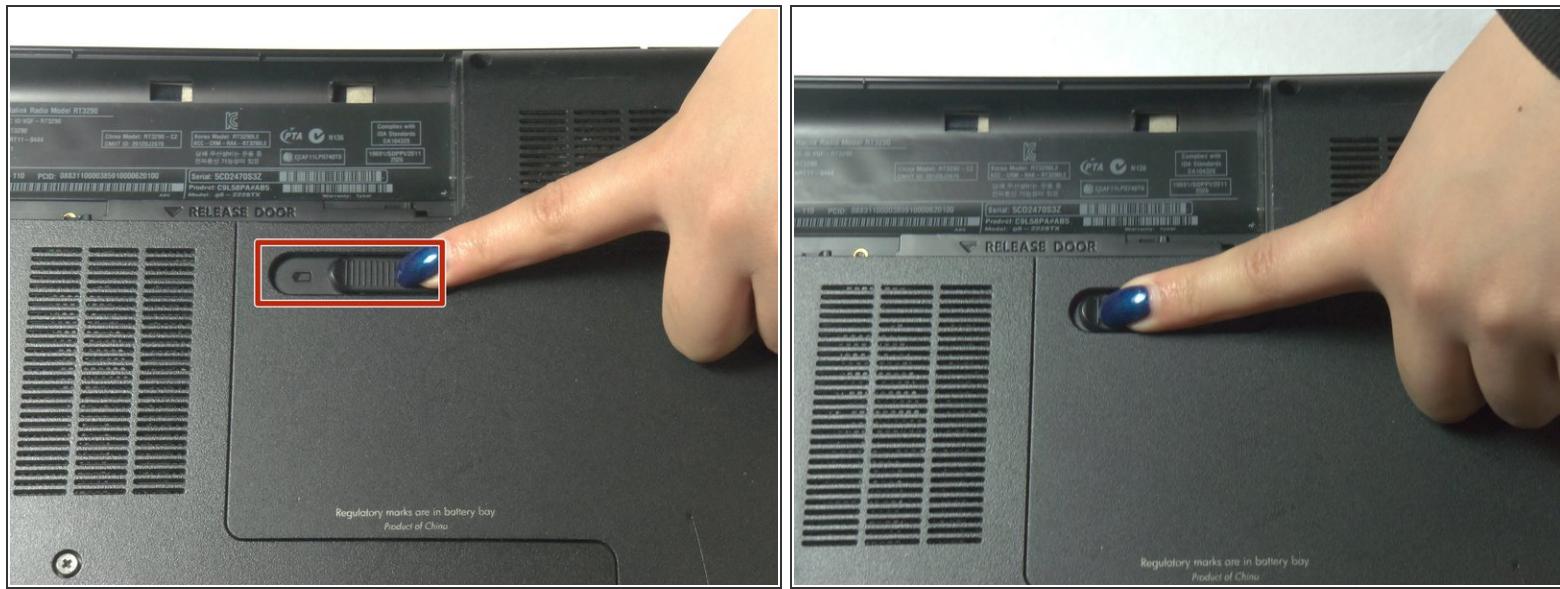

- Push the battery latch to the left to release the battery.

- Remove the battery from the device.

Step 2 — Hard Drive




- Use a Phillips #0 screw driver to loosen the screw. The screw will not detach from the cover.

Step 3




- Place your hand on the cover and slide the cover down.
- Use your hand to lift the cover from the bottom right and slide the cover to the right to remove the cover.

Step 4

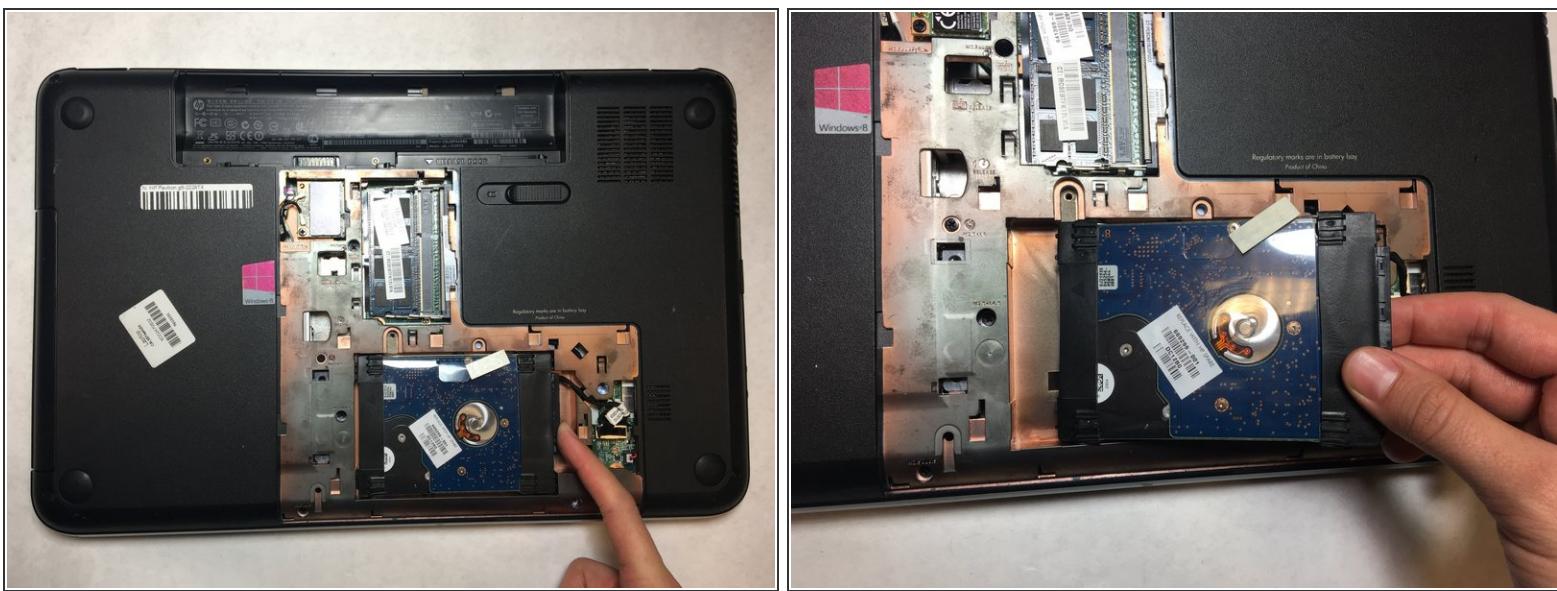

- Place one finger on the right side of the hard drive.
- Push the hard drive to the left and lift the hard drive up to remove it from the device.

Step 5

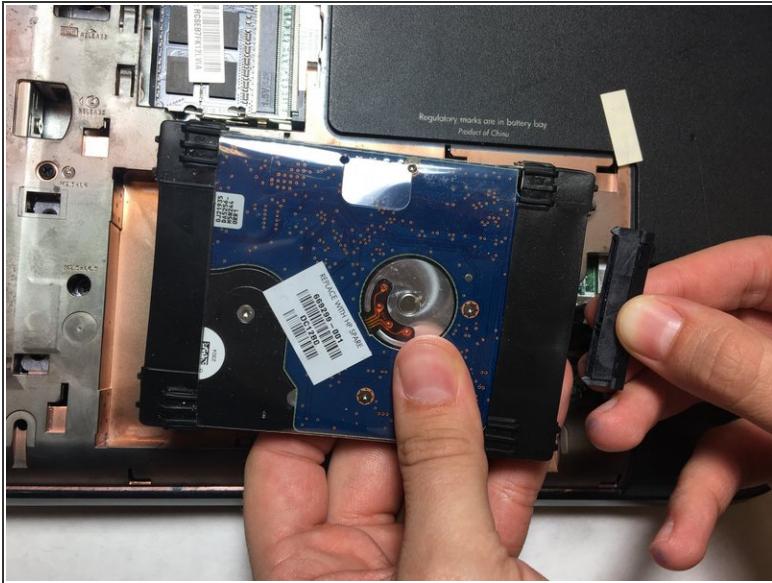

- Disconnect the connecting part by pulling the part to the right.
- Remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.