




HP Pavilion x2 10-n113dx Speaker Replacement

Shows how to disassemble the HP Pavilion x2 10-n113dx to expose and replace the speakers.

Written By: David Zambrano

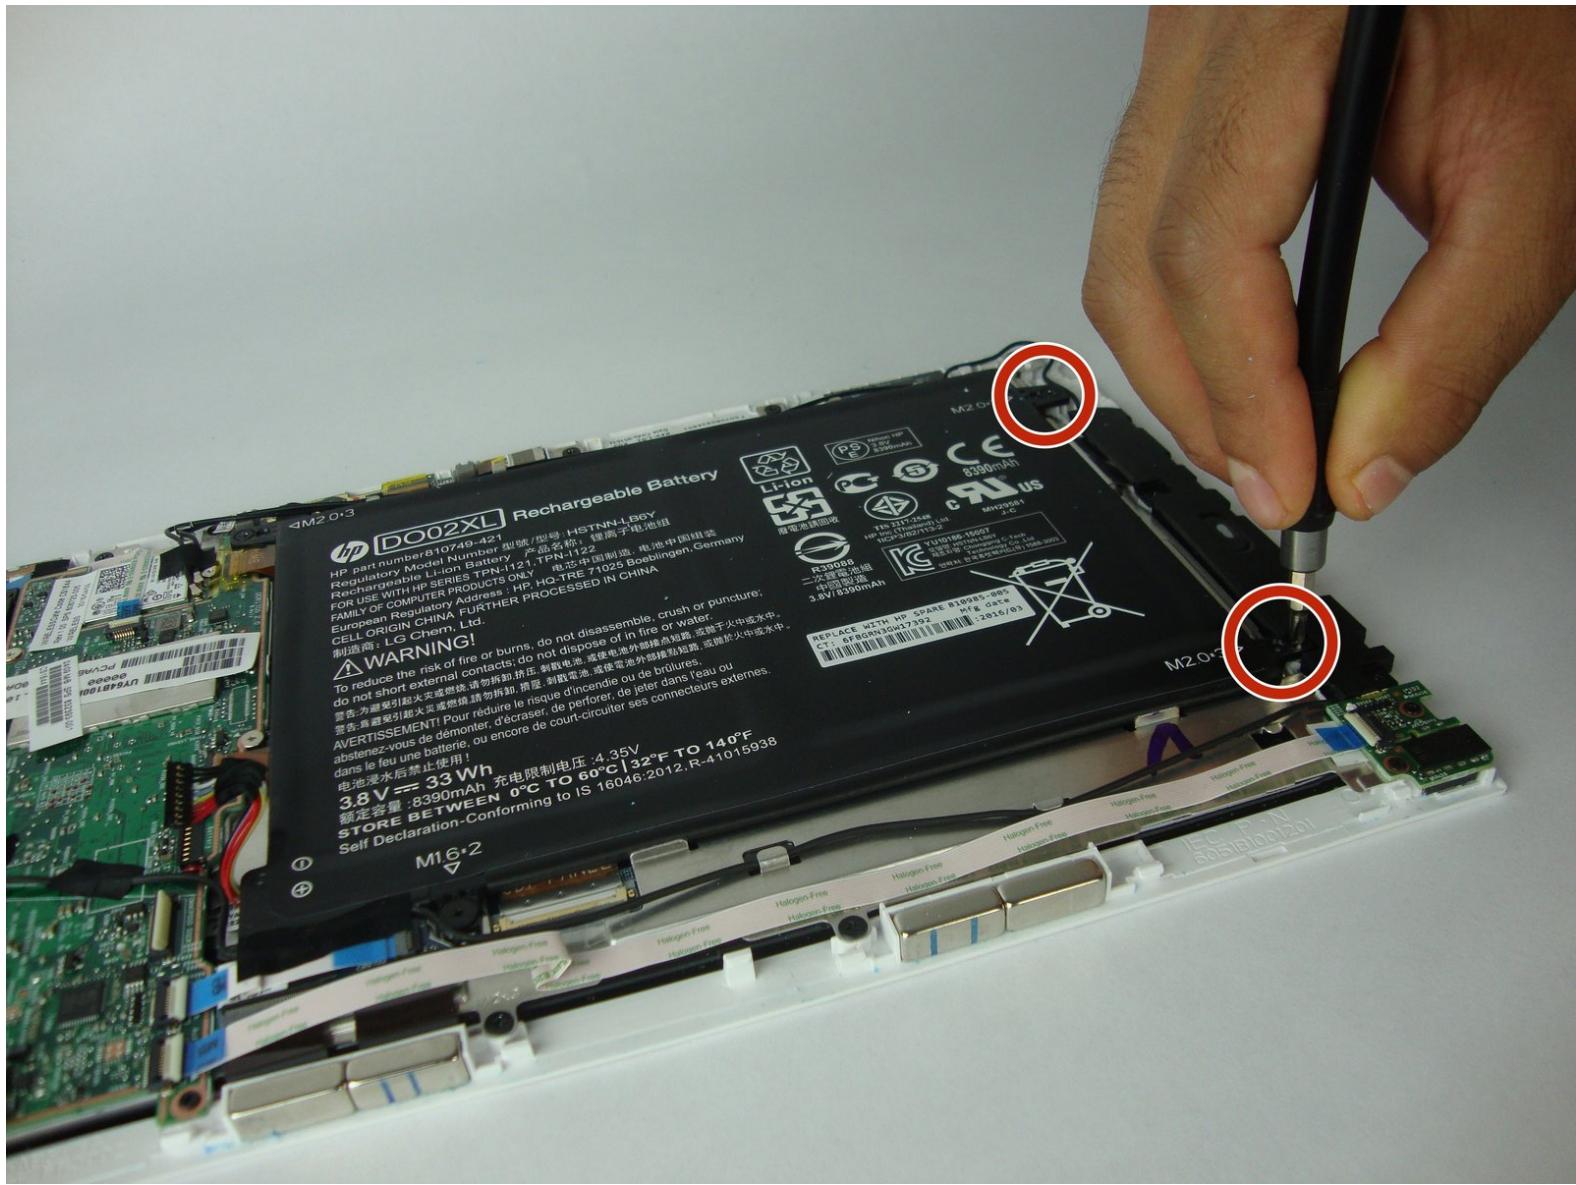

INTRODUCTION

Use this guide to replace the speakers in your device.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Precision Tweezers Set](#) (1)

Step 1 — Battery



- Using the blue plastic opening tool or a flat bladed tool, carefully slide the blade in between the display panel and gently slide to prop open the assembly.

Step 2

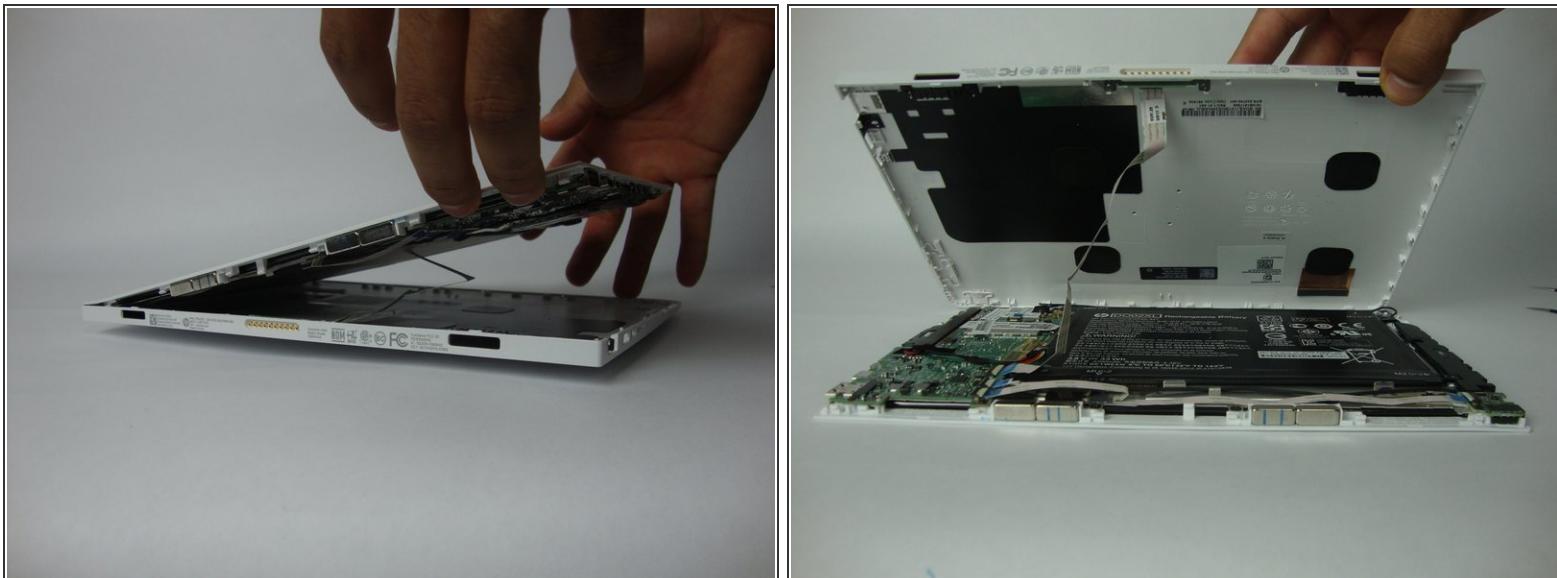

- Gently lift and remove the display panel from the assembly.

Step 3



- Remove the tape that covers the battery connector on the system board and carefully disconnect the battery cable from its connector on the system board.

Step 4




- Carefully disconnect the white ribbon cable from the system board.

Step 5



- Using the Phillips #0 screwdriver, carefully remove the 4 corner screws that hold the battery to the display panel.
(i) 3 screws are 3.12 mm head, 2.40 mm length, and 1 screw is 5.85mm head, 2.5mm length.
- Remove the battery from the device.

Step 6 — Speaker

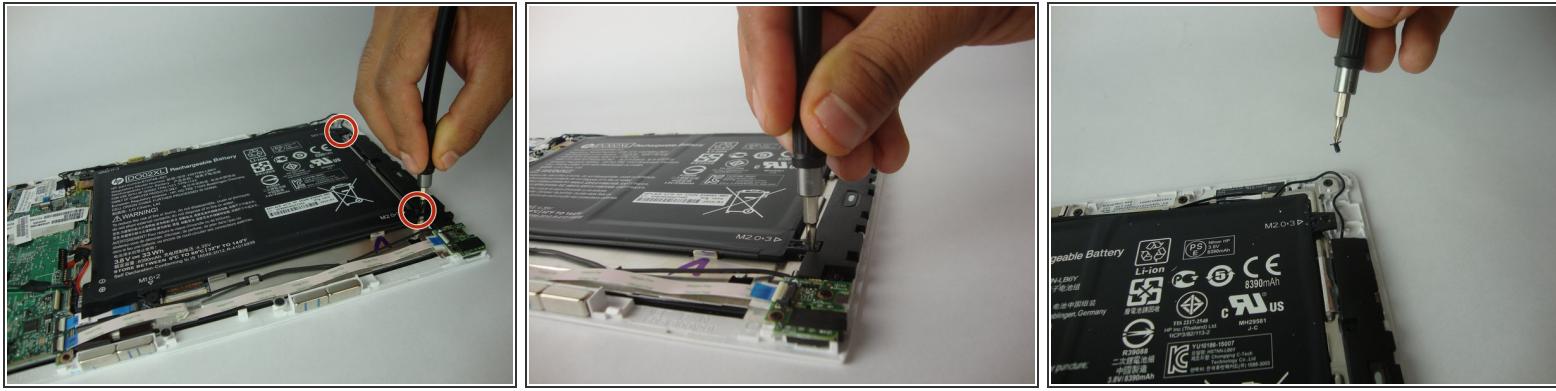


- To unscrew the first speaker, use the Phillips #0 screwdriver to unscrew the 2 screws- head 3.99mm, length 3.32 mm.

Step 7



- For the second speaker, repeat the previous step by unscrewing the two screws.

Step 8

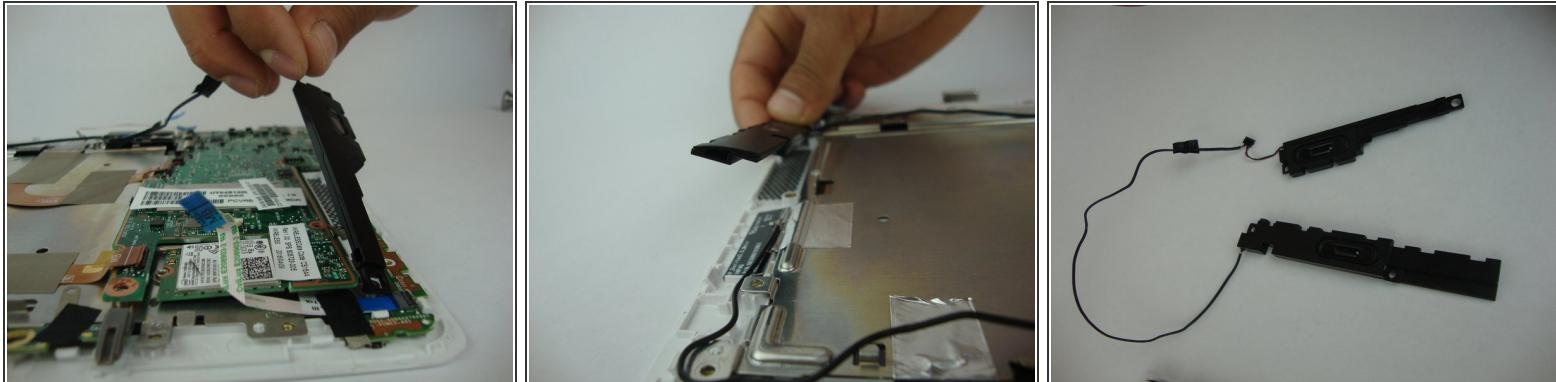

- Gently remove the 1st and 2nd speaker from the assembly.

To reassemble your device, follow these instructions in reverse order.