



# HP Pavilion x360 11-p110nr Battery Removal

This guide will show how to remove the battery from HP Pavilion x360 11-p110nr.

Written By: AljeannaJohnson





## INTRODUCTION

If your computer keeps turning off, your battery may be damaged. Click [here](#) for more information on why your computer may be turning off.

## TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — HP Pavilion x360 11-p110nr Battery Removal

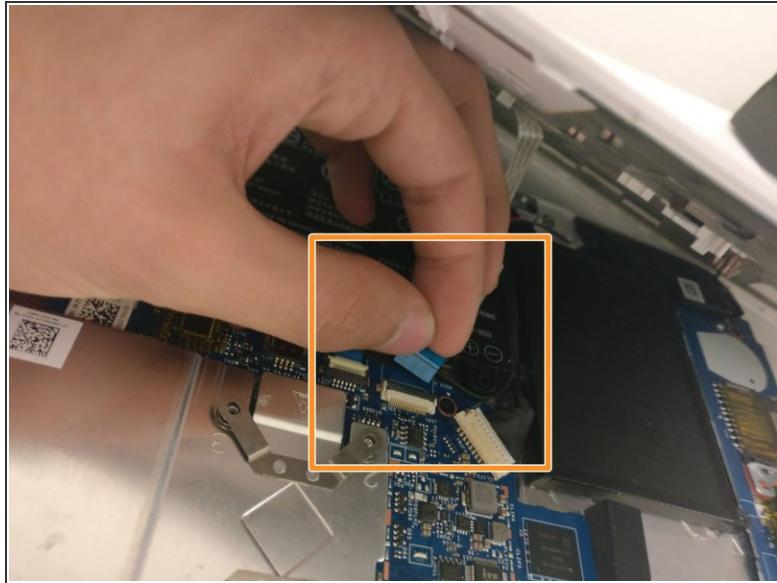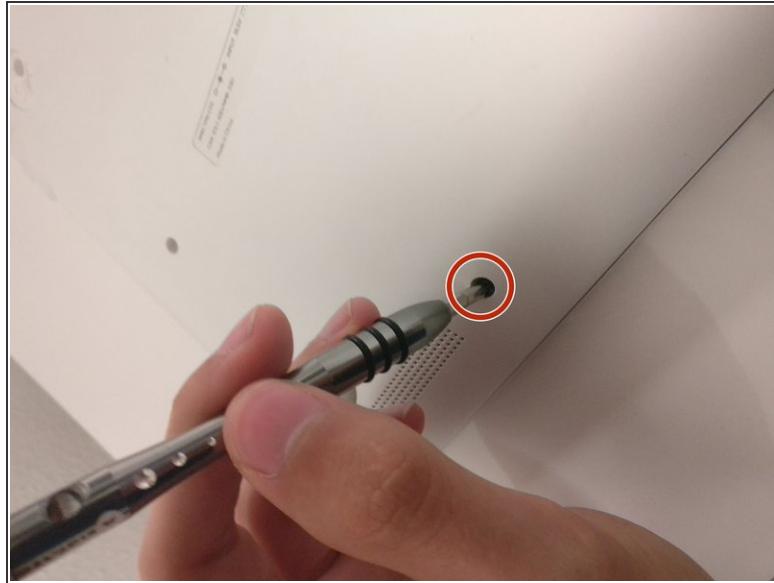


*(i)* Unplug the power cord from the power outlet and disconnect the charger.

- Flip over the laptop.
- Unscrew the back cover using the Phillips 0 screwdriver.

**⚠** Deattach the cover carefully and **do not** remove the cover completely as there is a safety plastic that needs to be removed first.


- Pull the blue safety plastic in an orthogonal motion from where it is inserted.

## Step 2

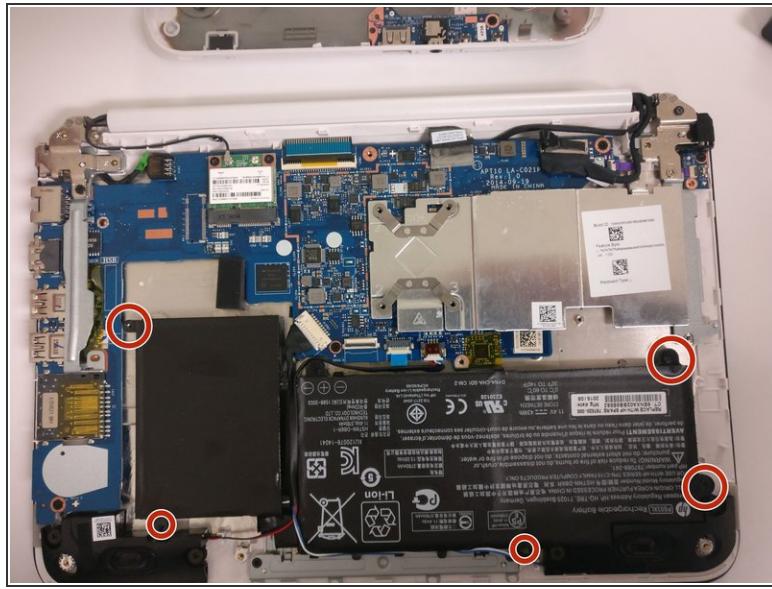

- ⓘ After removing the back, the battery should be the largest black object towards the bottom right of the laptop. It is both the square block and the large rectangular. They look like separate things, but they are both the battery. (see picture 1)
- Unscrew all the screws attaching the battery to the basis of the computer.
- ⓘ There should be five 1 mm Phillips #0 screws in total: two on the top, one on the bottom, one on the right side, and one on the left side. (see picture 1 and 2)

## Step 3

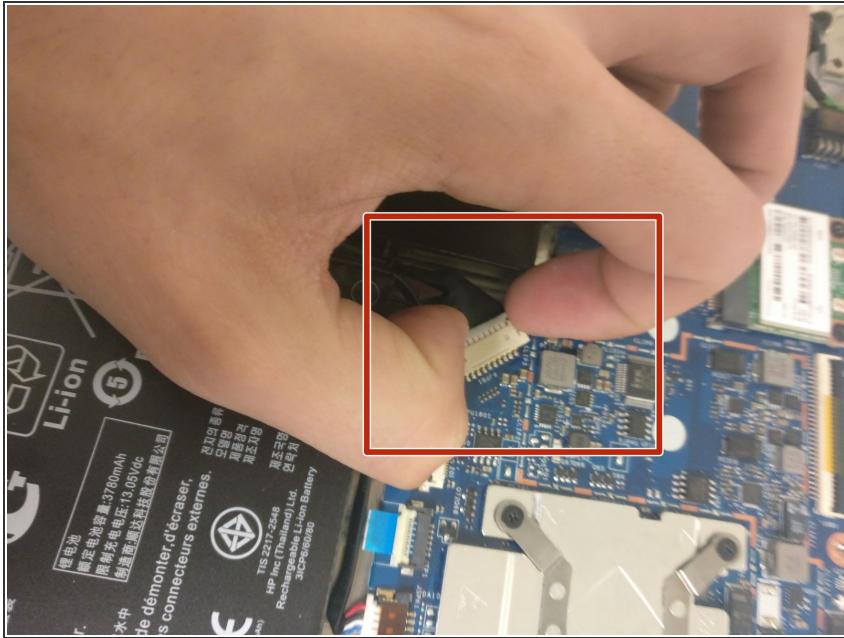

- Disconnect the three chips attached to the battery. The chips have a head that can be disconnected by pulling away from the slot. (see picture 3)
  - *i* If they seem hard to pull, try to wiggle them loose to make it easier to pull.
- Pull out the battery after everything is disconnected.

To reassemble your device, follow these instructions in reverse order.