



HP Pavillion G60-120US LCD Screen Replacement

How to replace an HP Pavilion G60-120US LCD screen.

Written By: Won Chan Park



INTRODUCTION

The LCD screen is an integral component of any computer, responsible for transmitting data into something tangible the user can understand. Screens that are damaged or have cracks could result in the screen not working properly or not working at all. This guide will help users replace an HP Pavilion G60-120US screen with a properly working screen.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



 Make sure the laptop is turned off.

- Turn the laptop over to reveal the battery.

Step 2




- Slide and hold the battery release switch to the left to release the battery from the device.

Step 3



- While holding the battery release switch, grab the battery and pull it upward gently.

Step 4 — Keyboard

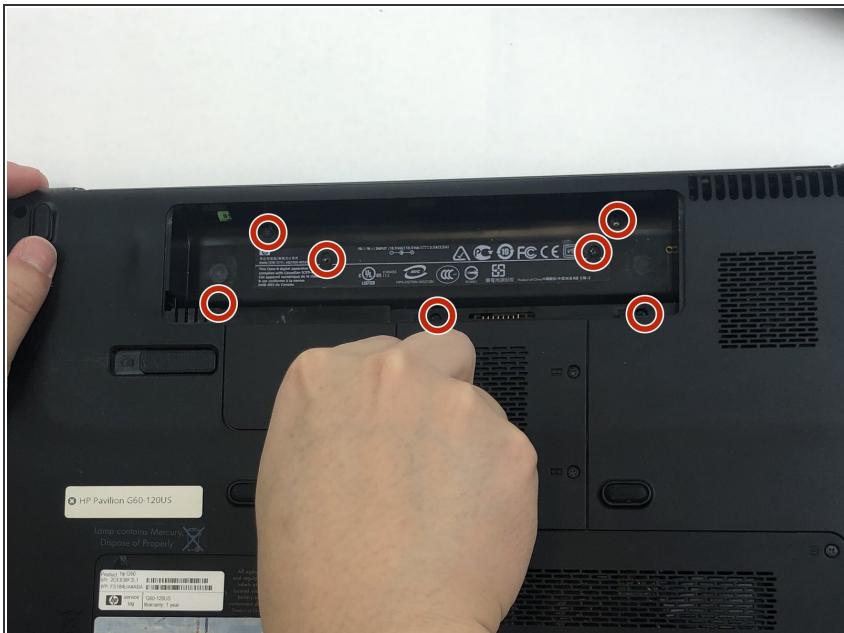


- Using the Phillips #0 screwdriver, remove the seven 4.0mm screws on the battery compartment of the laptop.

Step 5




- Using the Phillips #0 screwdriver, remove two 4.0mm screws from the hard disk cover.
- Remove the hard disk cover.

Step 6

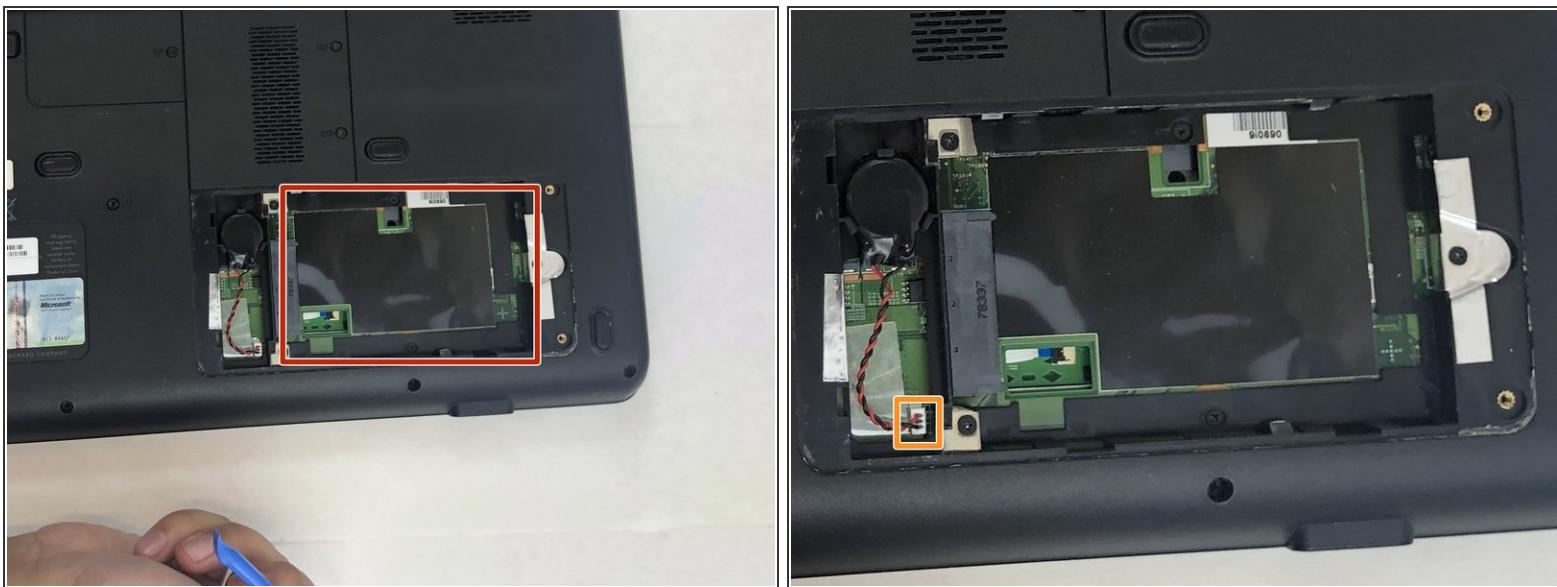

- Remove the hard drive by pulling gently and disconnecting the hard drive from the laptop.
- Gently pull on the black and red wiring on the bottom left to separate the wire from the component.

Step 7

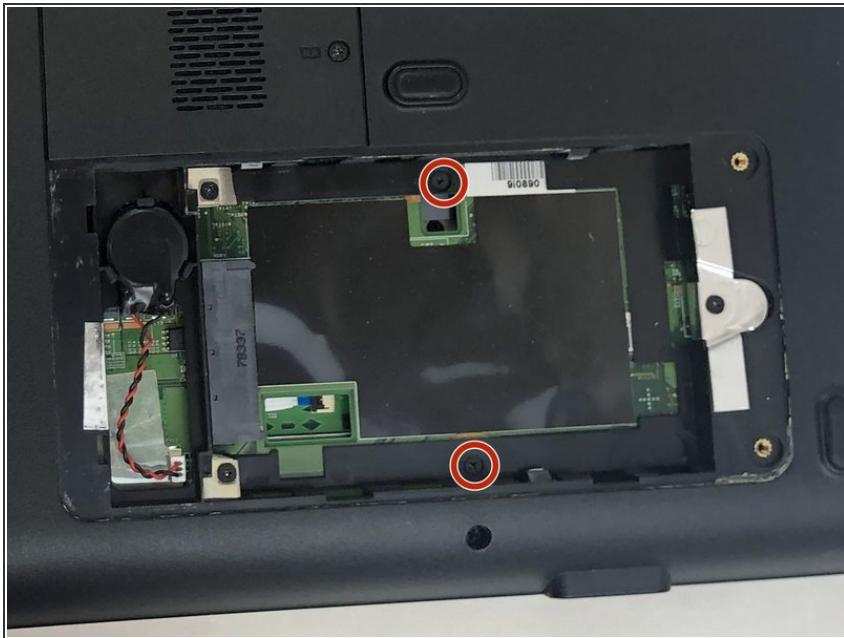


- Remove the two 4.0 mm Phillips #0 screws from the hard disk compartment.

Step 8



- Using the Phillips #0 screwdriver, remove the two 4.0 mm screws from the memory card cover.
- Remove the memory disk cover.

Step 9

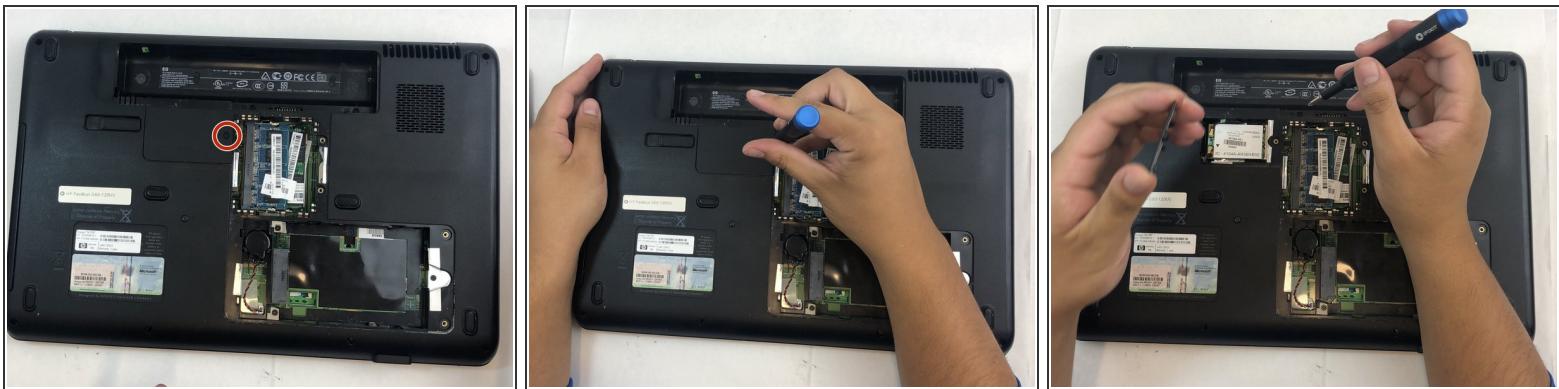

- Using the Phillips #0 screwdriver, remove the 4.0 mm screw from the Wi-Fi chip cover.
- Remove the Wi-Fi chip cover.

Step 10



- Using the Phillips #0 screwdriver, remove the two 3.0 mm screws securing the Wi-Fi chip in place.
- Grab the Wi-Fi chip and pull up gently to the left to disconnect it from the laptop.

Step 11



- Disconnect the two wires connecting the chip's base.
- Remove the Wi-Fi chip.

Step 12



- Using the Phillips #0 screwdriver, remove the seven 4.0 mm screws on the bottom of the laptop.

Step 13



- Turn the laptop back to its upright state.
- Insert an opening tool into the upper right corner of the keyboard and gently lift it to separate it from the laptop.

! Be sure not to apply excessive pressure to prevent the bending and breaking of the keyboard.


! Do not pull the keyboard all the way out because there is a wiring connection under the keyboard.

Step 14



- Grab the wiring and gently pull it out to disconnect it from the laptop.
- ! Don't use excessive force.
- Remove the keyboard.

Step 15 — Display Assembly


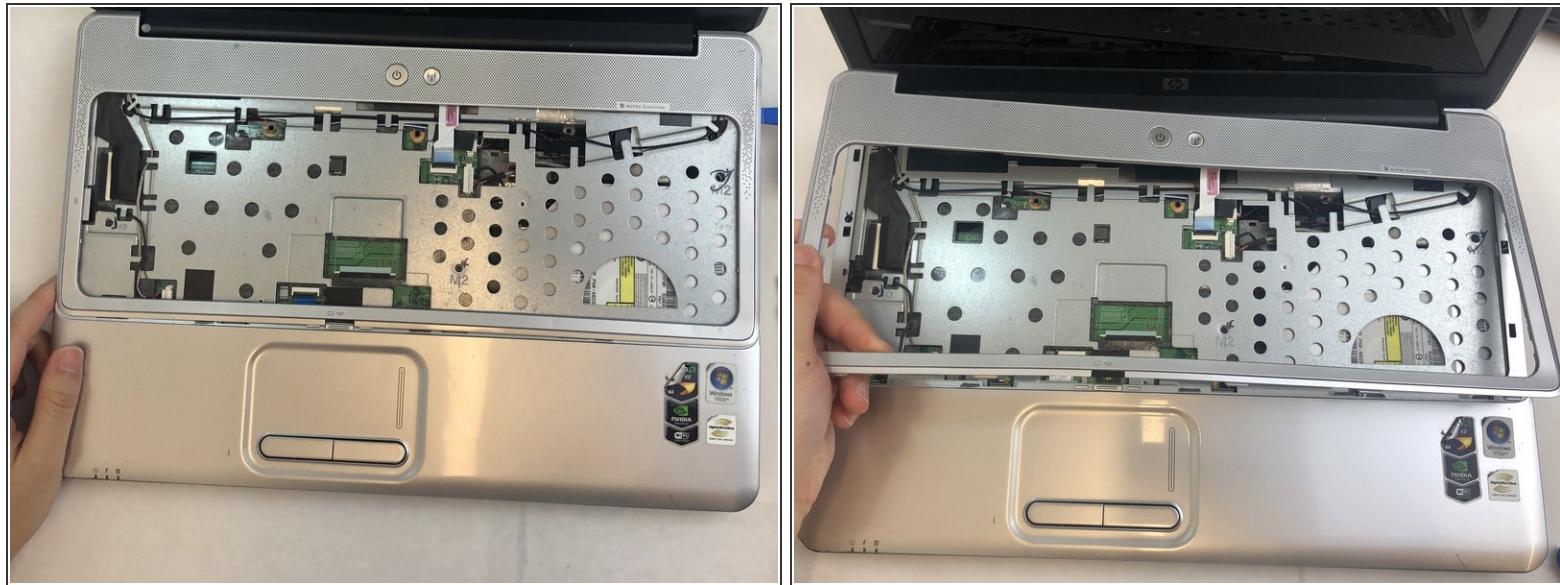


- Insert an opening tool into the top right side of the corner, and gently lift the rest of the cover to separate it from the laptop.

! Avoid using excessive force which may break the cover.



! Do not completely pull out the cover; there is a wire still attached to the laptop.

Step 16

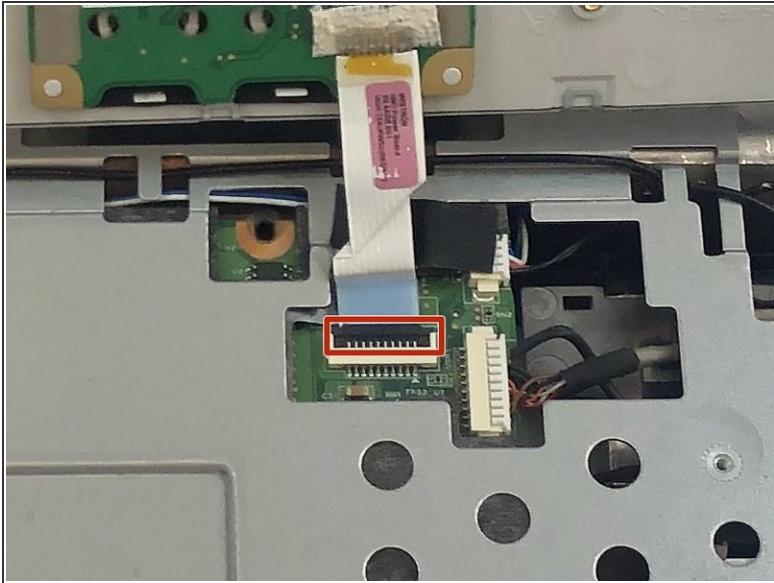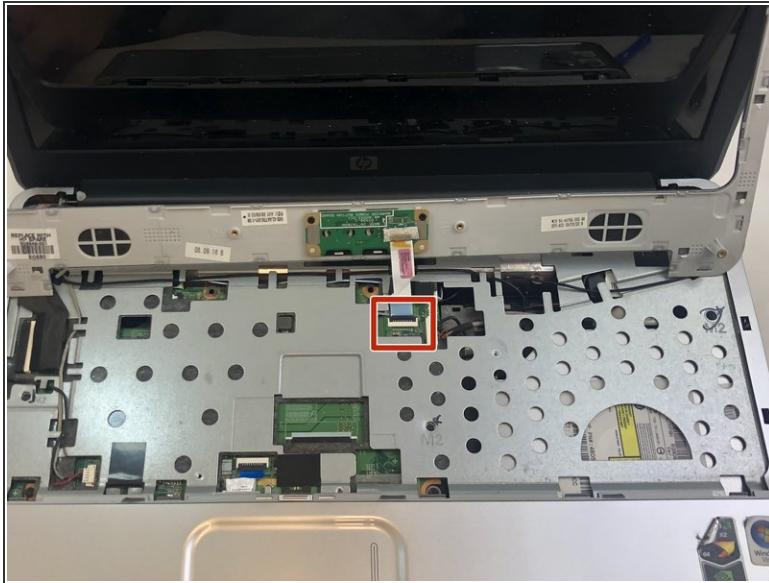


- Using your fingertips, detach the ribbon cable by gently lifting up the black tab located on the bottom end of the cable.
- Separate the cable and remove the cover.

Step 17

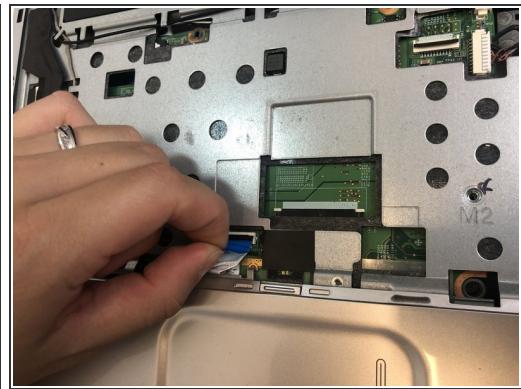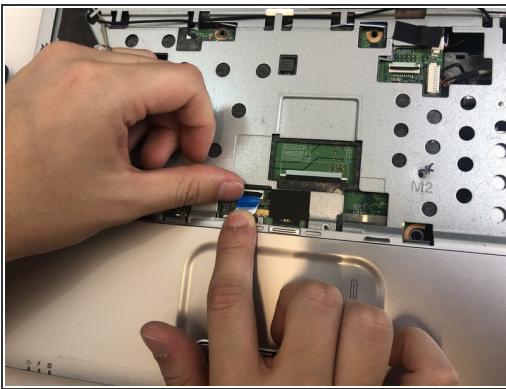

- Remove the mouse and touchpad cable by lifting the black tab and gently pulling the cable out.


Step 18

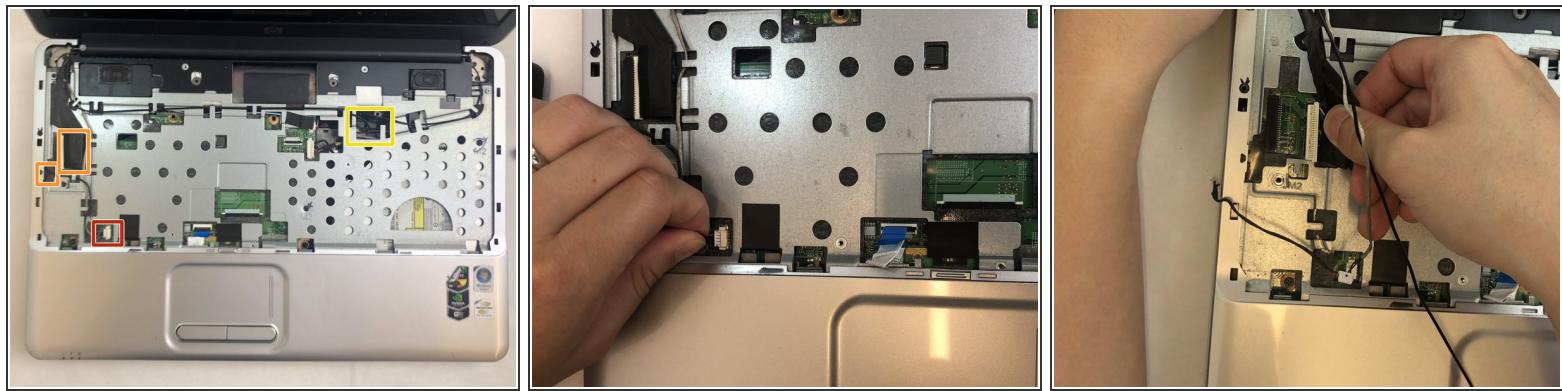

- Detach the white screen wiring on the bottom left side by gently pulling out.
- Detach two black screen cables on the middle left side by gently pulling out the cables.
- Pull out the black cable on the upper right side of the laptop.


 Use gentle pressure while removing the wires.

Step 19

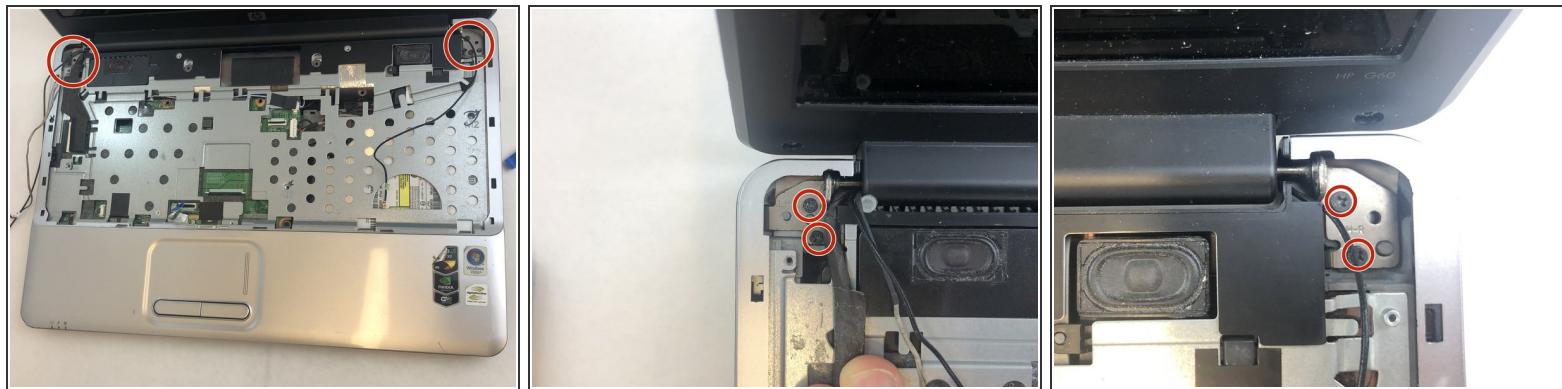

- Using the Phillips #0 screwdriver, remove the four 4.0 mm screws on both hinges of the laptop's screen.

Step 20

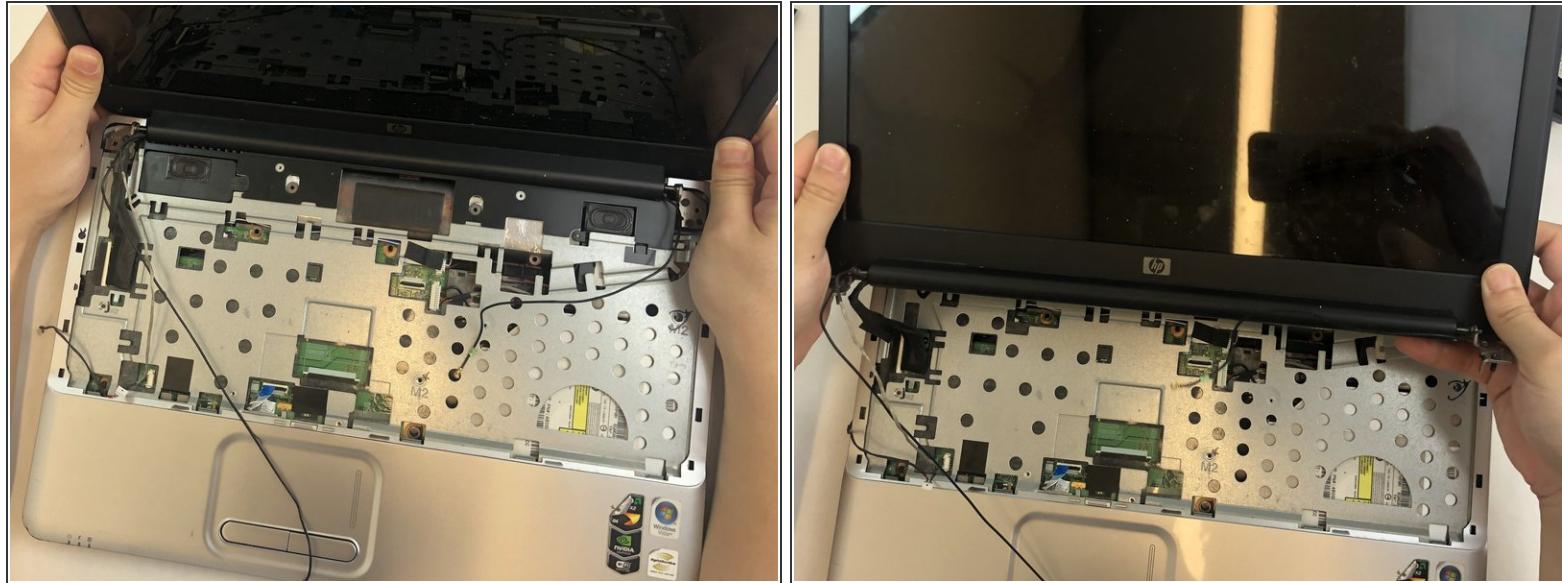

- Gently lift and detach the display assembly from the laptop's base.

Step 21 — LCD Screen




- Using an opening tool, gently remove the two screw covers from the bottom corners of the screen.

Step 22



- Using the Phillips #0 screwdriver, remove two 4.0mm screws from the LCD screen cover.


Step 23

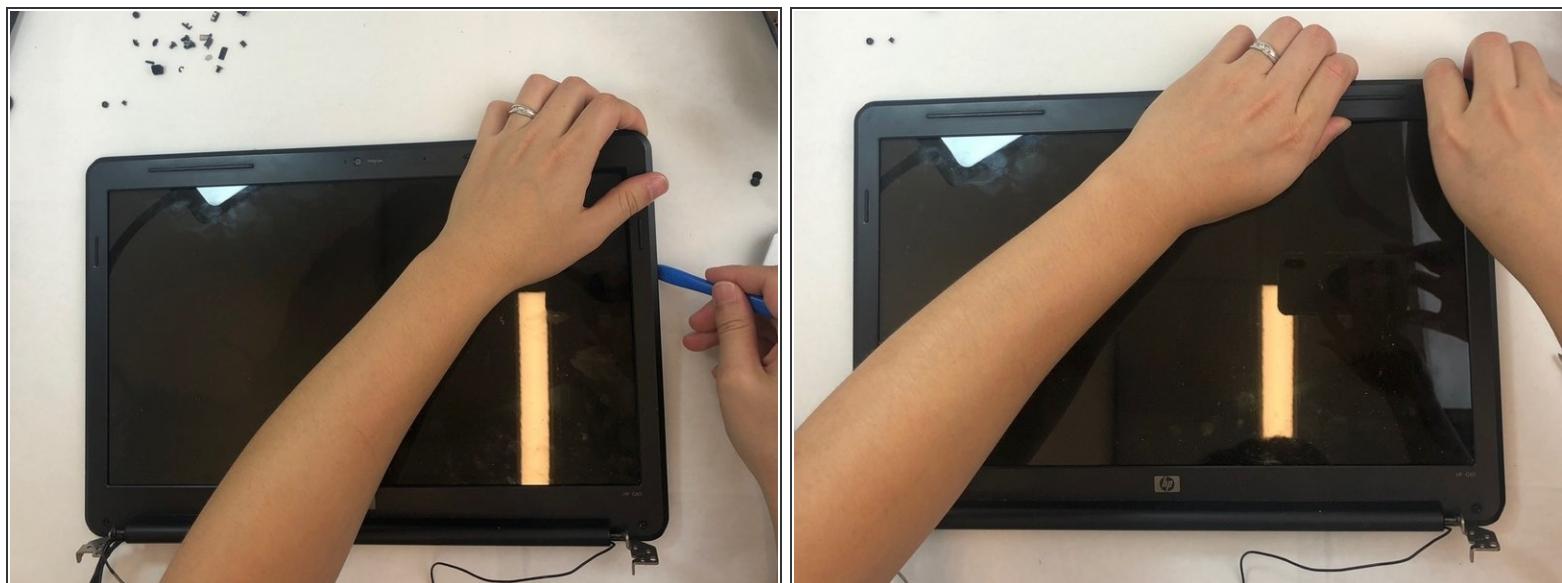

- Using an opening tool, gently lift the LCD screen cover and remove the cover.

⚠ Make sure not to use excessive pressure when detaching and removing the screen cover.


Step 24

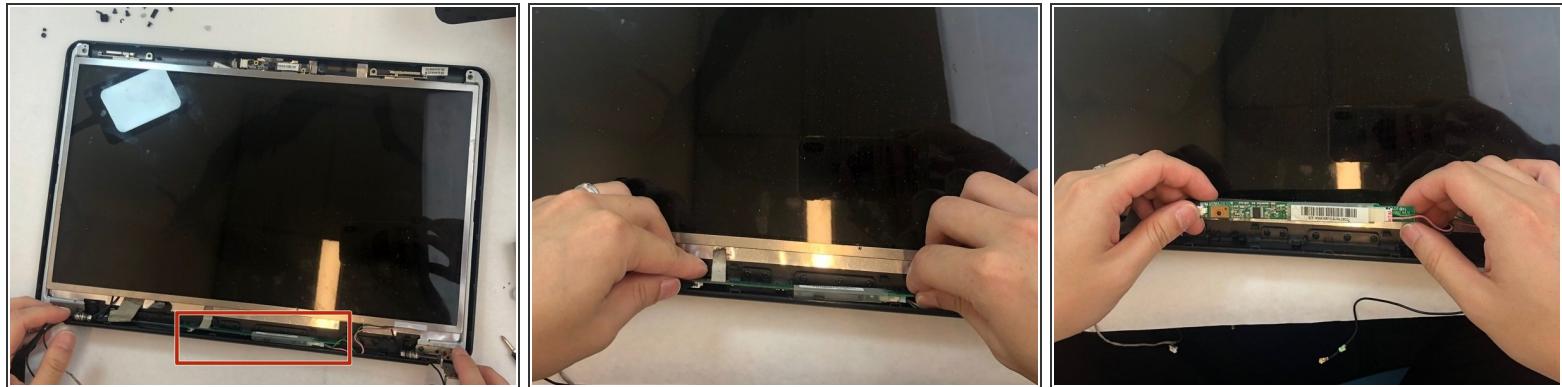

- Using your hand, grab the ends of the LCD chip and gently pull it out to detach it from the screen compartment.

 Be careful not to break the chip when pulling it out.

Step 25

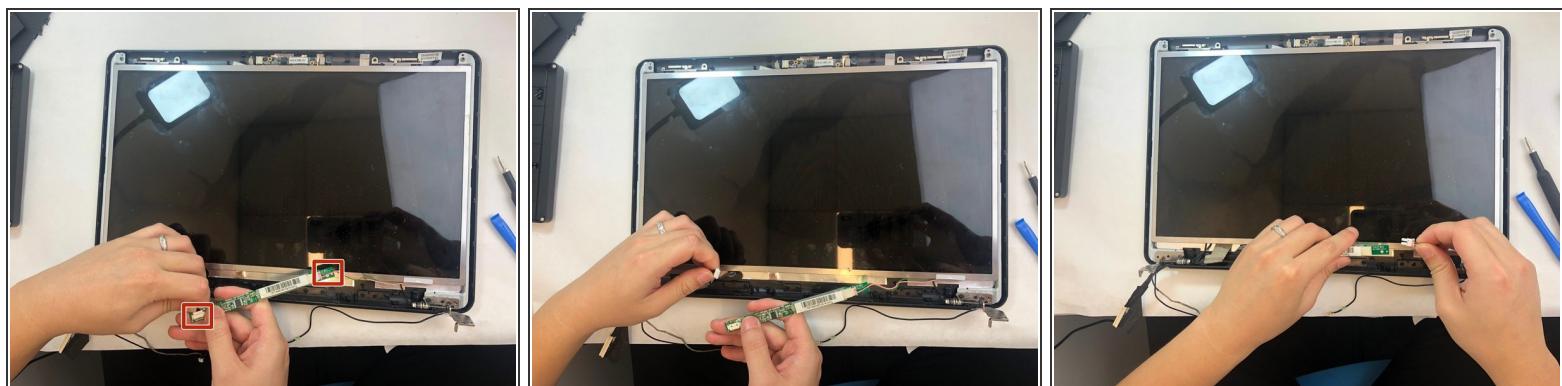


- Disconnect the two screen cables from the LCD chip.

Step 26




- Using the Phillips #0 screwdriver, remove the six 4.0mm screws from the LCD screen holder.
- Remove the two hinges on the bottom edge of the screen.

Step 27

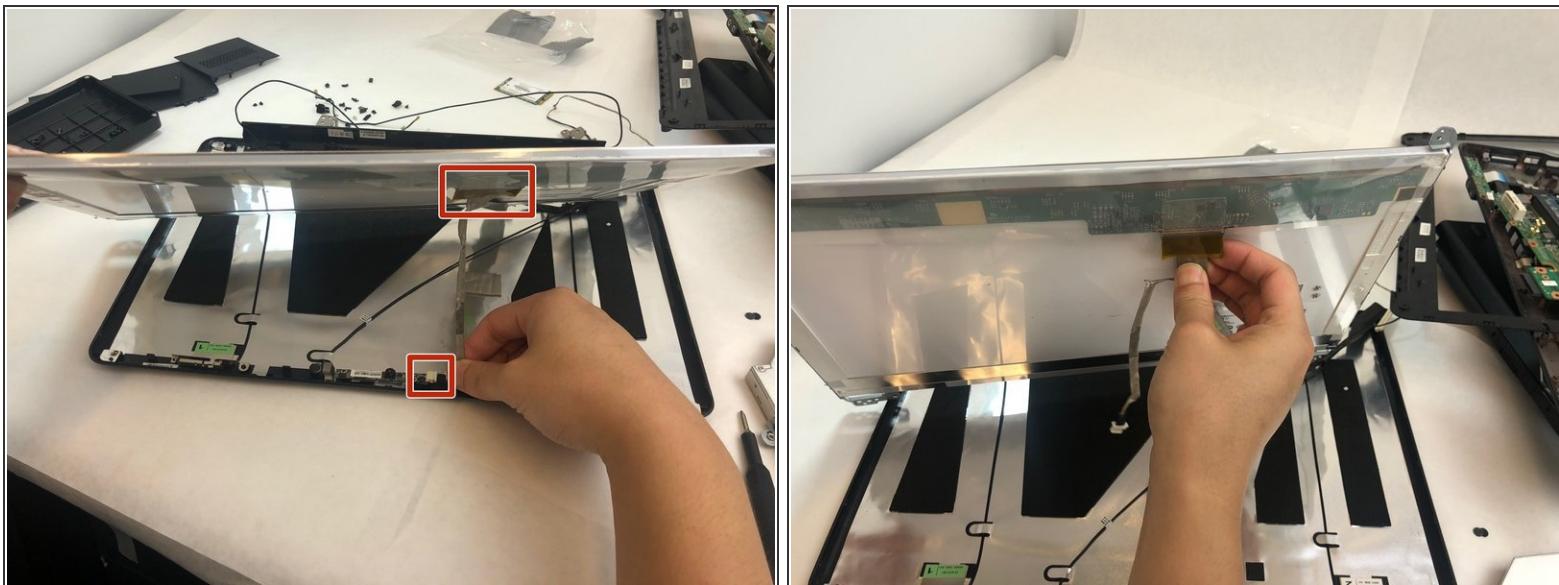

- Lift the screen and screen holder and remove the two cables that are connected to the screen.
- Lift the plastic tape covering the wiring and gently pull on the wire to detach it.
- Remove the screen holder and the LCD screen from the screen compartment of the laptop.

Step 28

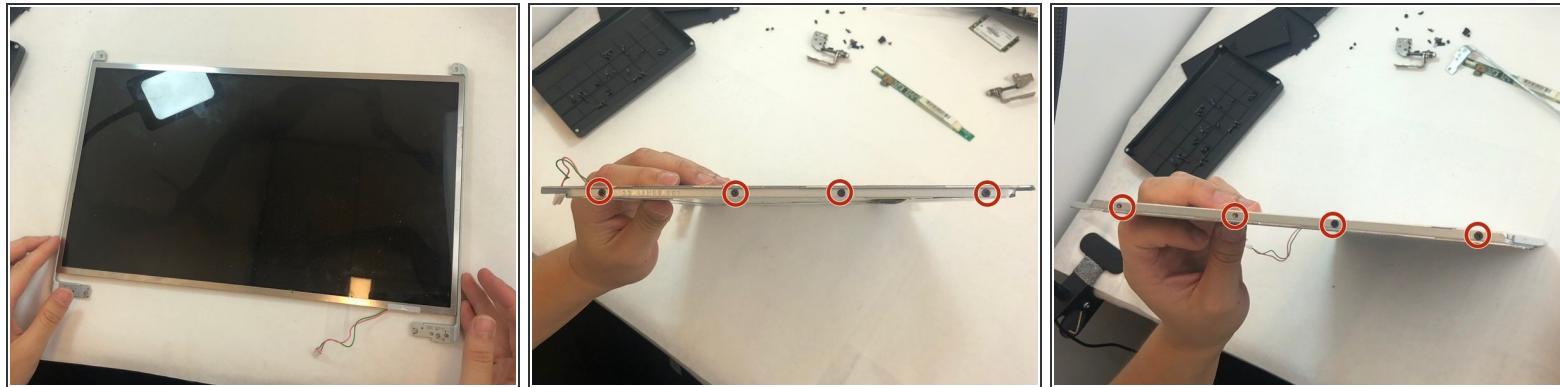

- Using the Phillips #0 screwdriver, remove the four 4.0mm screws on each side of the screen holder.
- Detach and remove the screen holder from the screen.

To reassemble your device, follow these instructions in reverse order.