


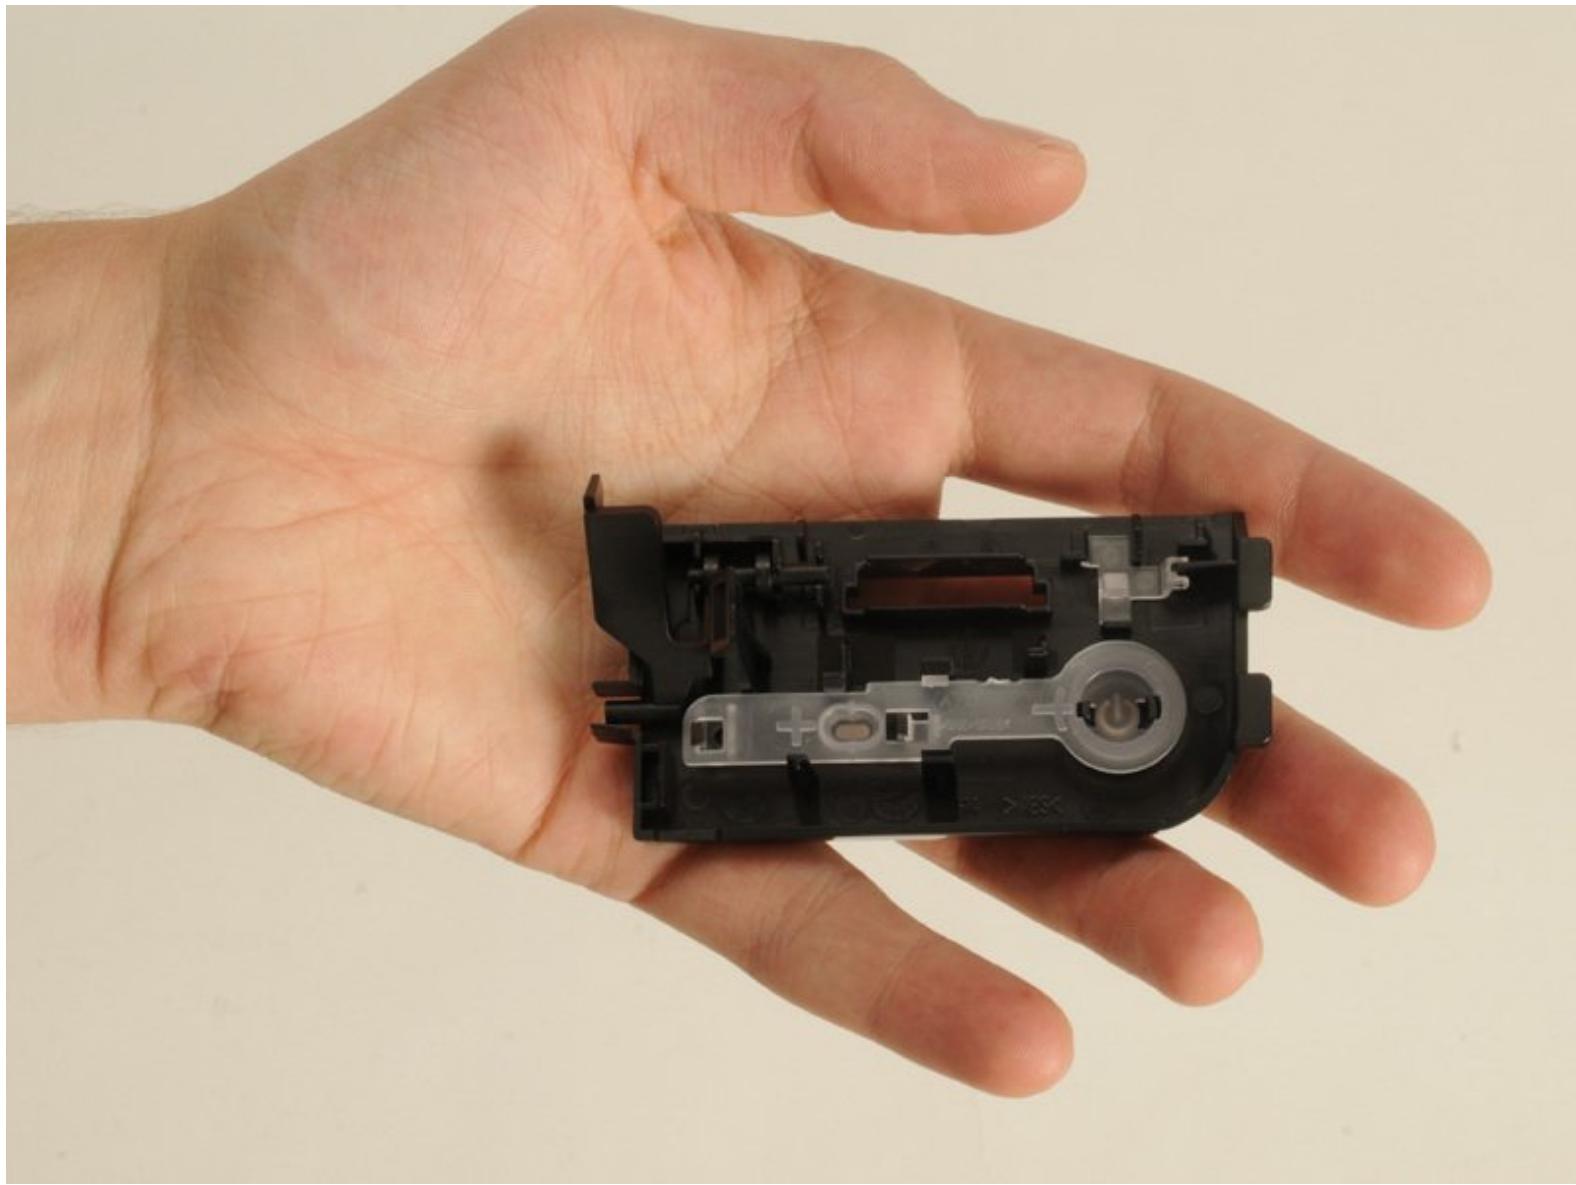

# HP Photosmart D110a Power Button Replacement

If your power button is malfunctioning, this guide will explain possible ways to repair it.

Written By: Tim Wise



 **TOOLS:**

- [T9 Torx Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Power Button



- Open the printer's mouth by pulling the two mouth pieces down.
- Lift the flap covering the scanner. When you are finished, the printer should appear as shown.

## Step 2



- Remove the flap for the scanner by pulling lightly on the clip that attaches it to the printer.

**⚠** The clip may be damaged by applying too much force.

## Step 3




- Remove the three screws from the top of the printer using a T9 screwdriver as shown.
- *i* The screws are located in the far-left, far-right, and near-right corners of the printer, with respect to the front view.

## Step 4



- Reach into the mouth of the printer and press the clip behind the power button to release the power button face.


## Step 5

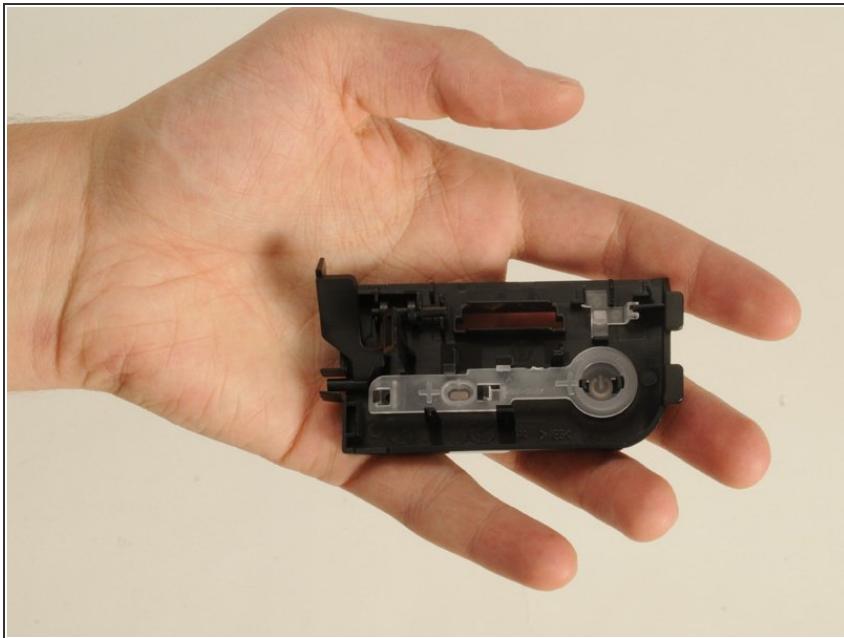

**i** A picture of the removed power button is provided to show the location of the clip that needs to be pressed.

- After pressing the clip, pull out the face of the power button by sliding it from the right to the left side.

## Step 6

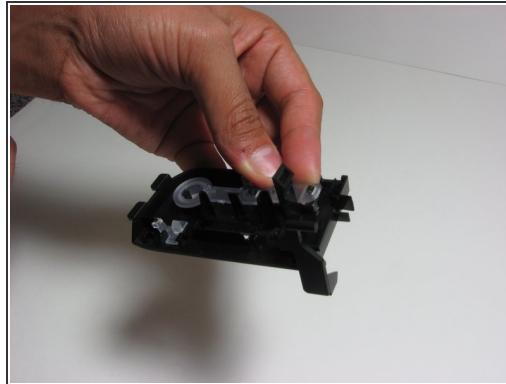

**i** The power button face has a plastic holder that attaches the power button and the wireless button to the face plate using two slots.

- Loosen the plastic holder by pulling the slots on the face plate away from the plastic holder.
- Remove the plastic holder from the face plate after the slots are loosened.

## Step 7



ⓘ The plastic holder secures the power button by two slots.

- Using a spudger, push the holders inward to detach the button from the plastic holder.

To reassemble your device, follow these instructions in reverse order.