



# HP Photosmart Premium e-All-in-One C310a Duplexer Replacement

This guide will aid you in the removal of the duplexer.

Written By: Andrew Schaub



## INTRODUCTION

This guide helps you remove the duplexer. This is a common area where paper jams occur.

## Step 1 — Duplexer



- Grab the duplexer from the backside and push to the left.

## Step 2



- Pull the duplexer away from the printer.

## Step 3



- The duplexer is now removed from the printer.

To reassemble your device, follow these instructions in reverse order.