



HP ProBook 450 G3 RAM Replacement

This guide will tell you how to replace the RAM for HP ProBook 450 G3.

Written By: Jingyuan Zhang




INTRODUCTION

This guide will tell you how to replace the RAM for HP ProBook 450 G3.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)


Step 1 — RAM

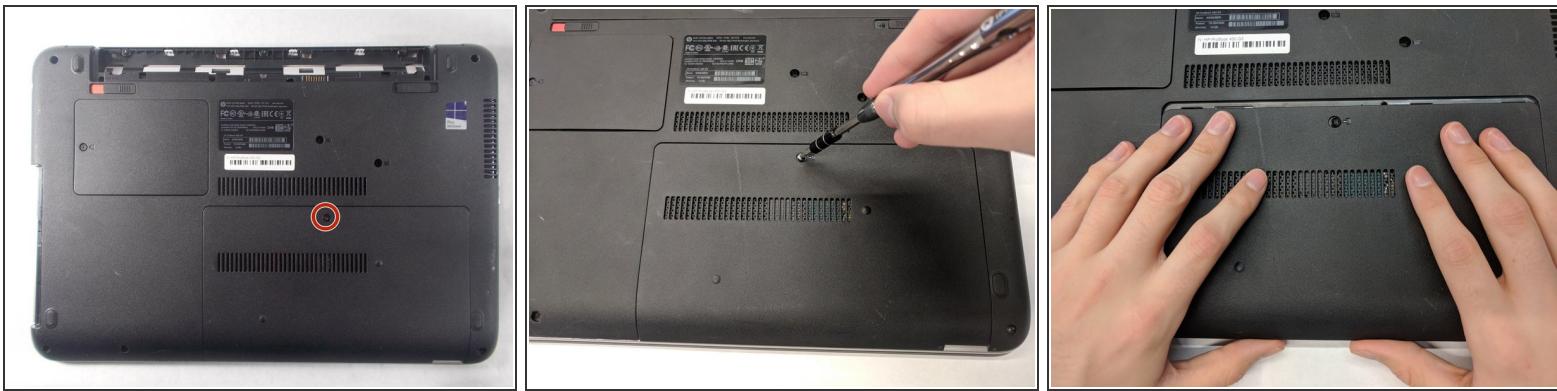

(i) The screw is not supposed to come out. It is there to hold the case down.

- Unscrew the 2.5 mm screw with PH00 screwdriver.
- Pull the cover off the computer using two hands.

Step 2

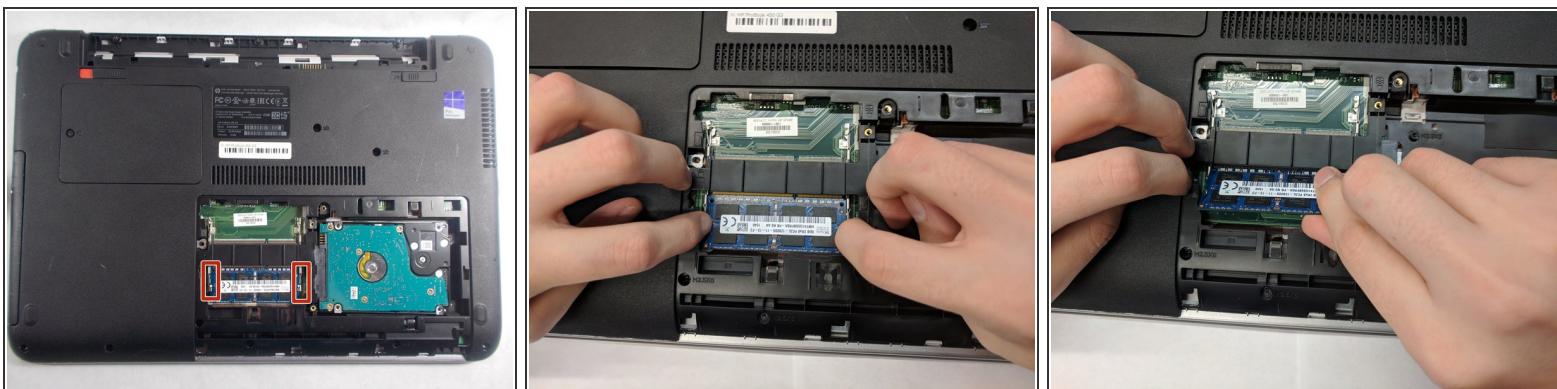

- Push the bars that hold the RAM in place down. The RAM should pop up.
- Carefully remove the RAM by pulling it out.

To reassemble your device, follow these instructions in reverse order.