



# HP ProBook 4520s Battery Replacement

This guide will show you how to remove and replace the battery unit.


Written By: Eric Fleming



## INTRODUCTION


If you have a faulty battery, replace it.

## Step 1 — Battery

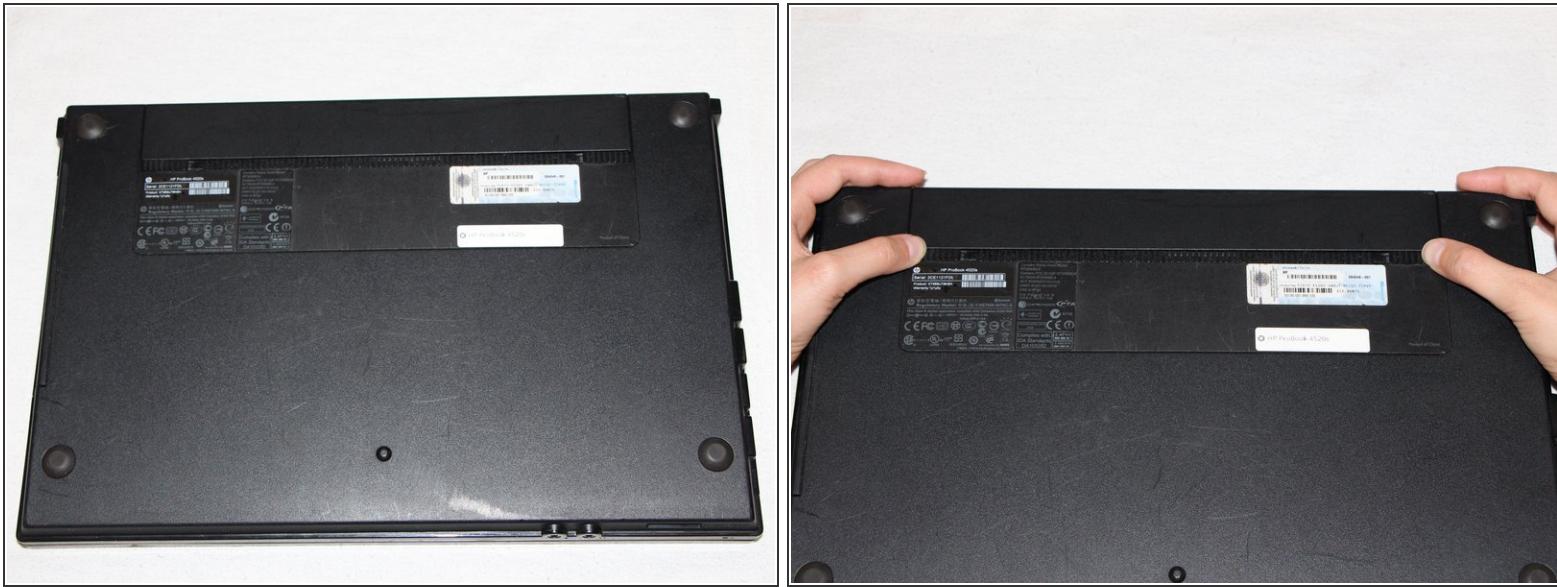

- Flip the 4520s upside-down with the front toward you.
- Push the two latches below the battery inwards at the same time.

## Step 2

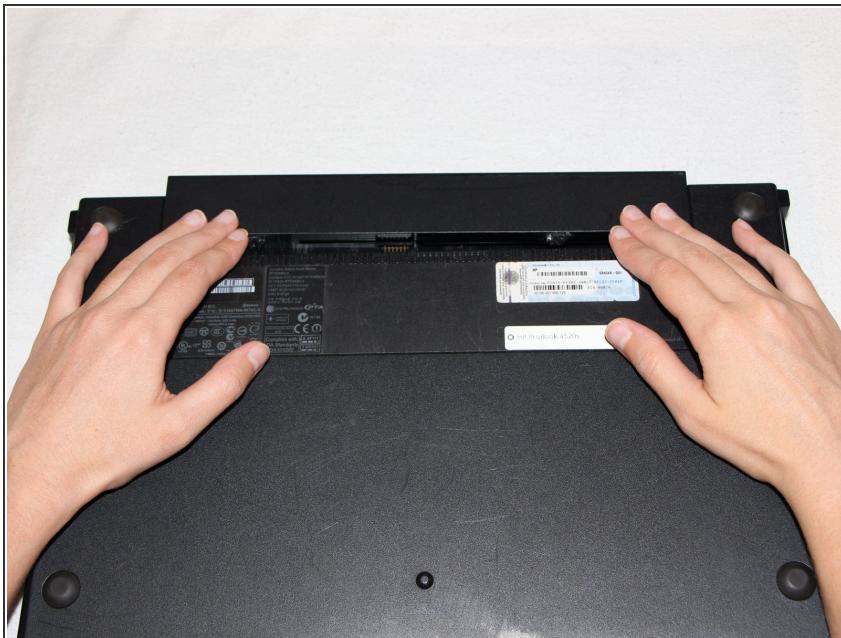

- Remove the battery by holding the latches and sliding the battery away from you.

To reassemble your device, follow these instructions in reverse order.