



HP ProBook 4520s Switch Cover Replacement

"Prerequisite Only" This guide provides information on how to remove the switch cover of the HP ProBook 4520s.

Written By: Robert Spencer Harrison



INTRODUCTION


"Prerequisite Only"

Replace the HP ProBook 4520s switch cover as a prerequisite for other guides.

TOOLS:


- [Metal Spudger \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery

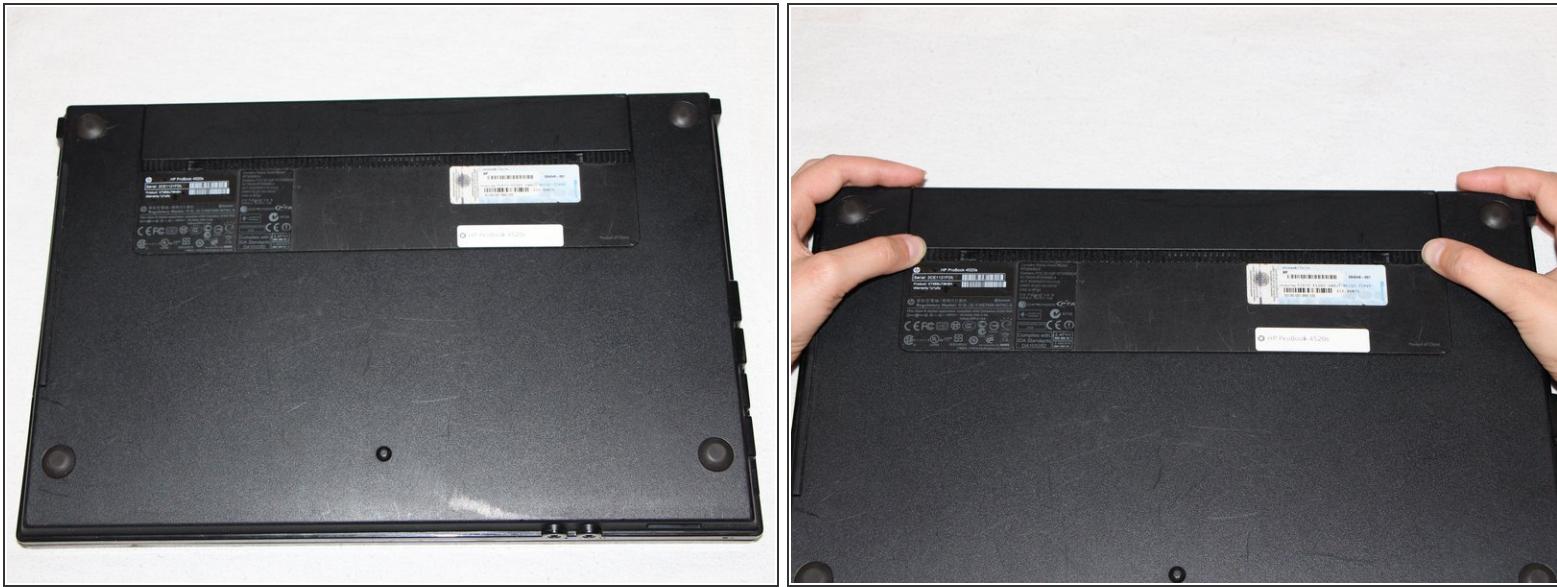


- Flip the 4520s upside-down with the front toward you.
- Push the two latches below the battery inwards at the same time.

Step 2

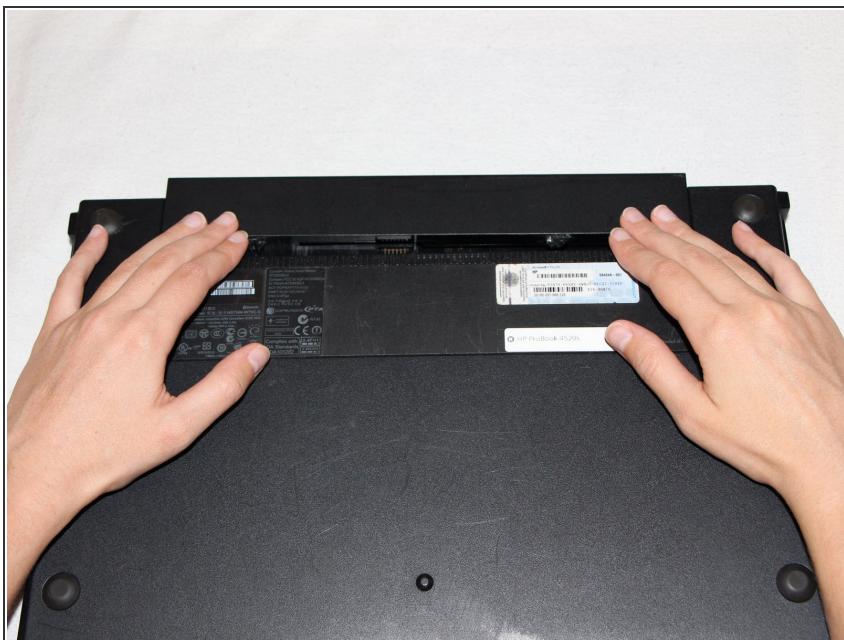


- Remove the battery by holding the latches and sliding the battery away from you.

Step 3 — Switch Cover

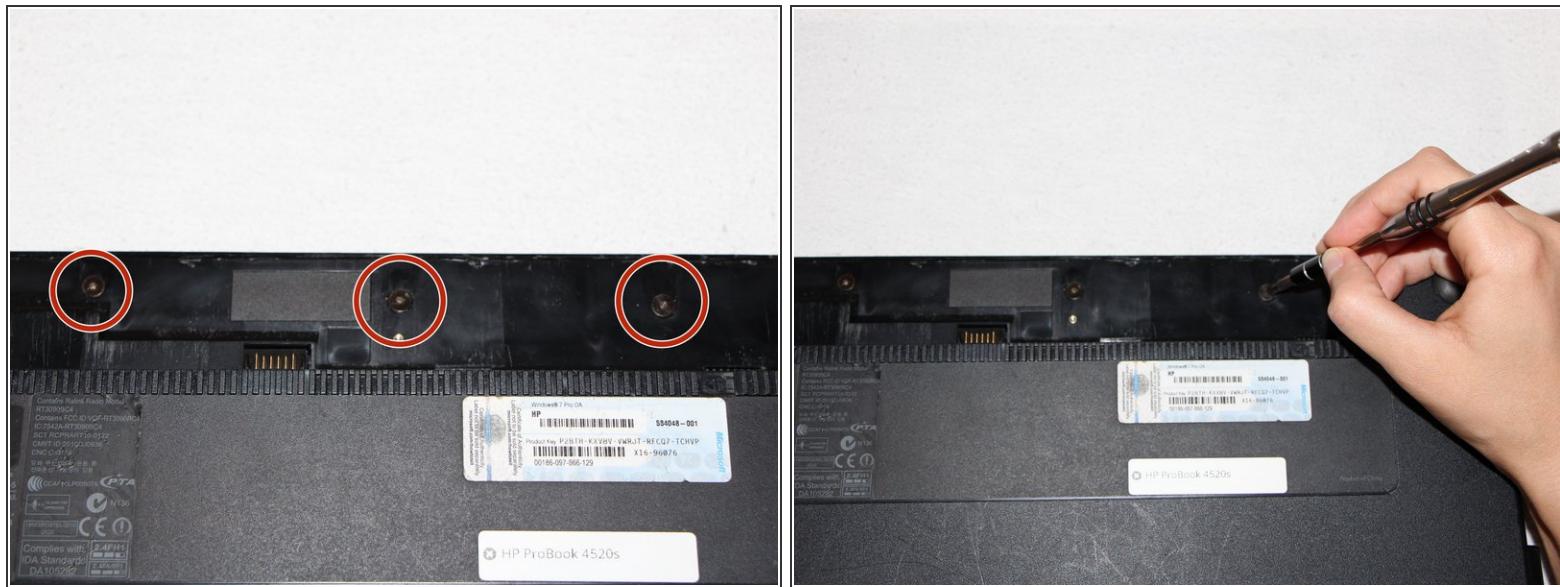

- Use a Phillips #1 screwdriver to remove three 2mm screws where the battery was located.

Step 4

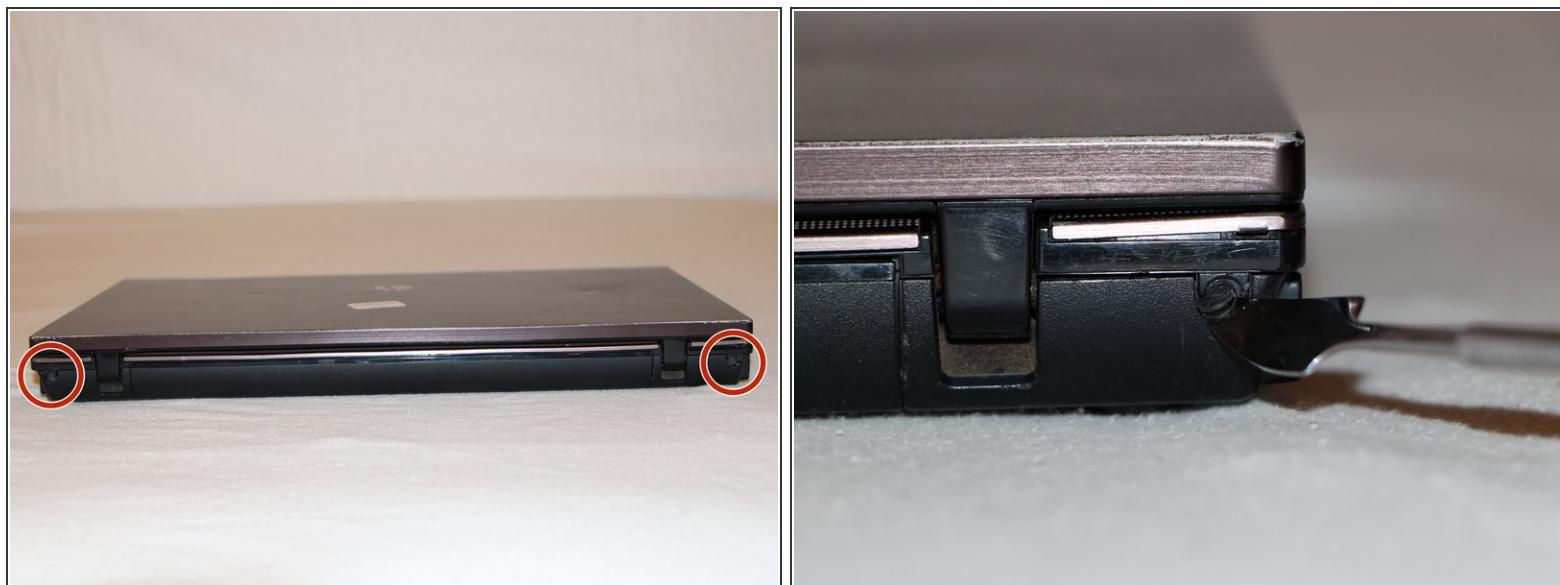

- Flip the 4520s over and rotate it so the back is facing you.
- Use a metal spudger to peel off two rubber caps located on either side of the battery port.

Step 5



- Use a Phillips #1 screwdriver to remove the 3mm screws behind the caps.

Step 6



- Rotate the 4520s and then open it with the screen facing you.
- The switch cover is located above the keyboard. Push the switch cover away from you until it comes loose from the 4520s.
- Lift the switch cover away from the 4520s and set it aside.

To reassemble your device, follow these instructions in reverse order.