



HP ProBook 455 G1 DVD/CD Drive Replacement

This guide will assist you in safely and properly removing the DVD/CD drive in your HP ProBook 455 G1.

Written By: Jennifer Sexton



This document was generated on 2019-09-17 08:41:31 AM (MST).

INTRODUCTION

Your computer's DVD/CD drive may become damaged after prolonged use or age. One of the ways you can fix this is by replacing the drive itself.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Battery



- Turn the computer upside down on a flat side, so that you are seeing the underside of the laptop.

 Before removing the battery, make sure that the computer is turned off and that the power cord is not plugged into the computer.

Step 2



- Slide the two battery release latches towards the center of the laptop to release the battery.

Step 3




- Tilt the battery upward.
- Remove it from the laptop.

Step 4 — Service Panel




- Slide the two release latches that were mentioned in the battery removal process to release the service panel.

Step 5

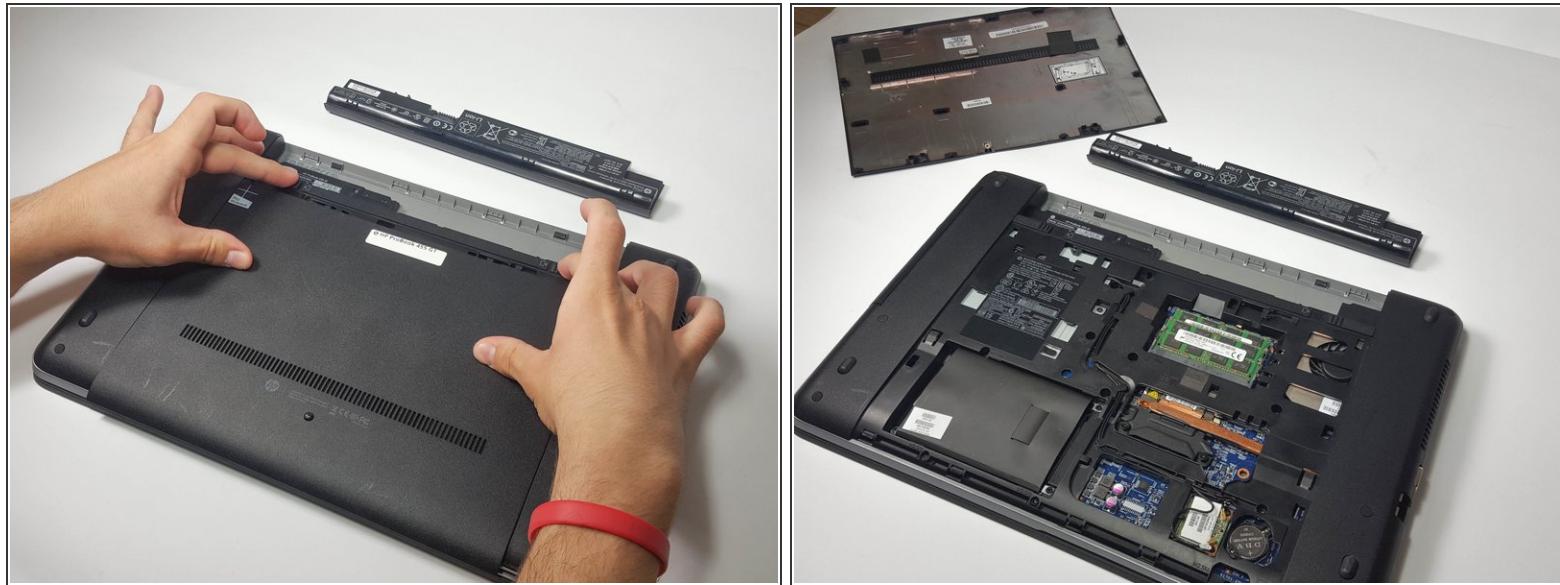

- Slide the service panel toward you using your thumbs.
- Lift it to remove the panel and reveal inner components of the computer.

Step 6 — DVD/CD Drive

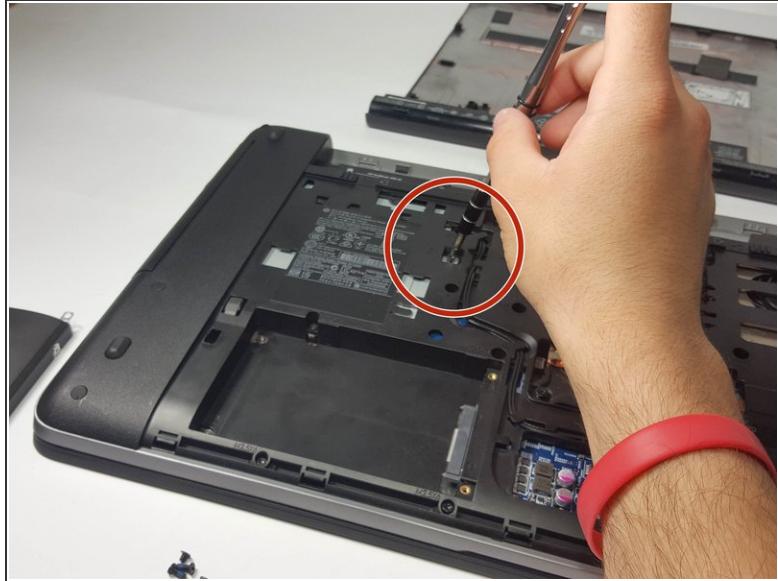

- Using a Phillips P0 Screwdriver, remove the 6 millimeter screw that secures the DVD/CD drive to the computer.
- It will be located in the upper left section of the computer, housed in a small square hole in the computer frame.
- The Phillips head screwdriver is the screwdriver with a "+" shaped tip. P0 refers to the name/size of this particular Phillips head screwdriver.

Step 7



- Using the screwdriver, gently push the silver tab that the screw secured to the left to release the DVD/CD drive from the computer.

Step 8



- The DVD/CD drive will be extended from the side of the laptop. Slowly remove it from the computer.

To reassemble your device, follow these instructions in reverse order.