



HP Probook 4425s Battery Replacement

How to replace a HP Probook 4425s battery.

Written By: Madyson James



INTRODUCTION

In this guide, you will be shown how to successfully remove the battery from the computer, in order to replace it as necessary.

Step 1 — Battery




- Turn off the laptop.
- Close the laptop.

Step 2



- Turn over the laptop, and make sure the battery bay is toward you.

Step 3

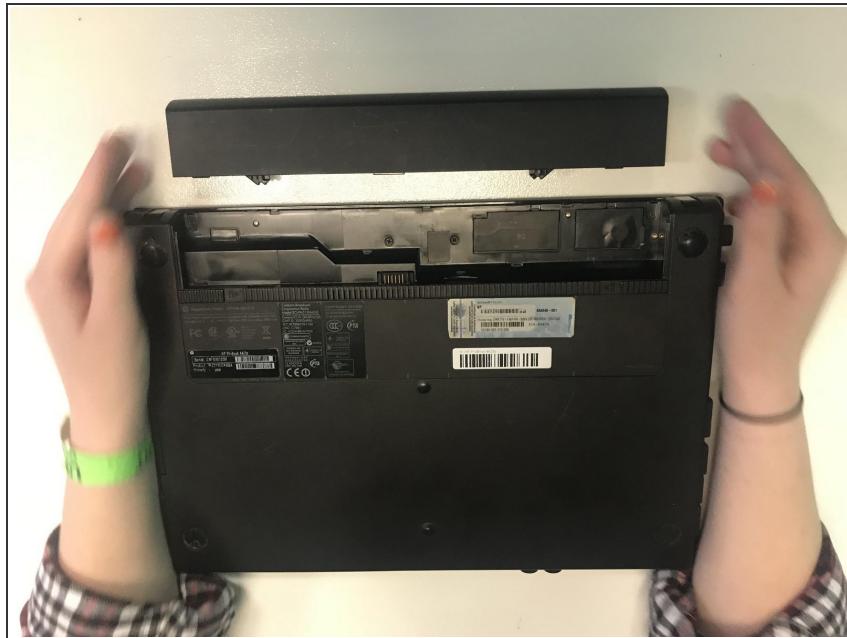

- On either side of the battery bay, there are two latches that you need to slide.

Step 4



- Once those latches are slid, you may take out the battery.

To reassemble your device, follow these instructions in reverse order.