



HP Probook 4425s Keyboard Replacement

How to replace an HP Probook 4425s keyboard.

Written By: Madyson James



 **TOOLS:**

- Phillips #0 Screwdriver (1)

Step 1 — Keyboard





- Turn off the laptop.
- Flip over the laptop.

Step 2





- Take out the battery.

Step 3

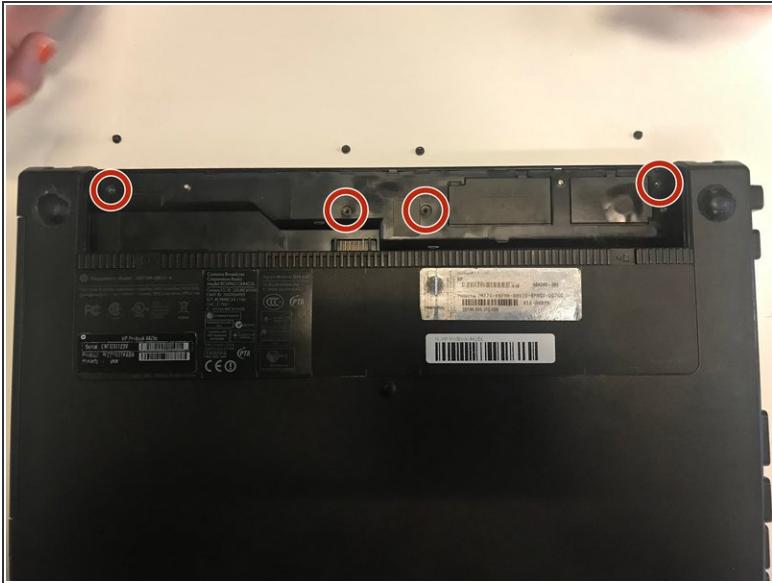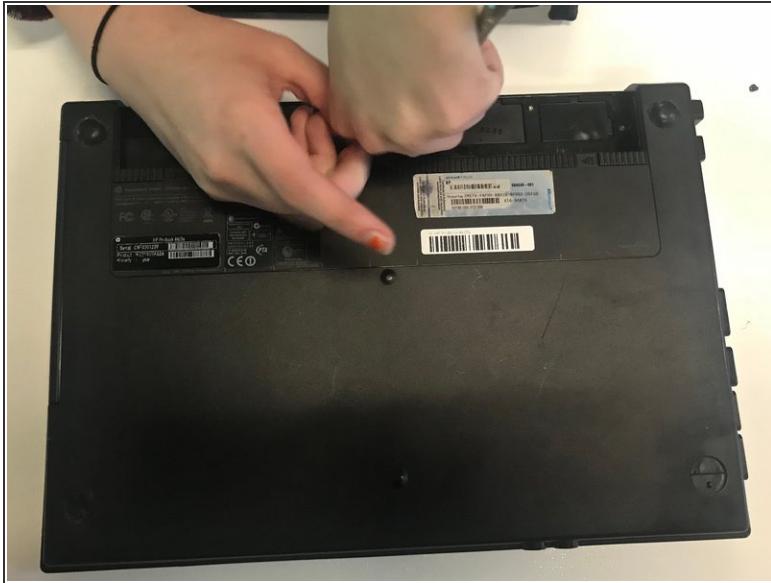

- Remove the four 3 mm Phillips head screws that secure the keyboard in place.

Step 4

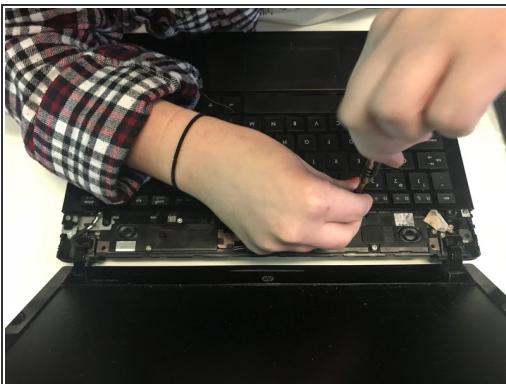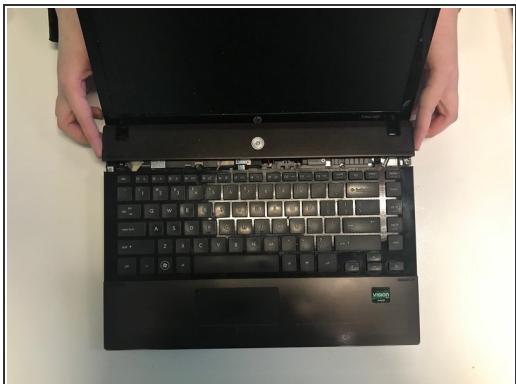

- Flip over and open the laptop.
- Remove the now loosened cover by grabbing both sides and sliding up.
- Remove the four 3mm Phillips head black screws directly above the keyboard.

Step 5



- Carefully remove the keyboard by sliding it up towards the screen of the computer in order to release the keyboard ribbon cable.

To reassemble your device, follow these instructions in reverse order.