




HP Slate 7 Plus 4200US Front Facing Webcam Replacement

Use this guide to replace the front-facing camera on the HP Slate 7 Plus.

Written By: Jessica Andrade

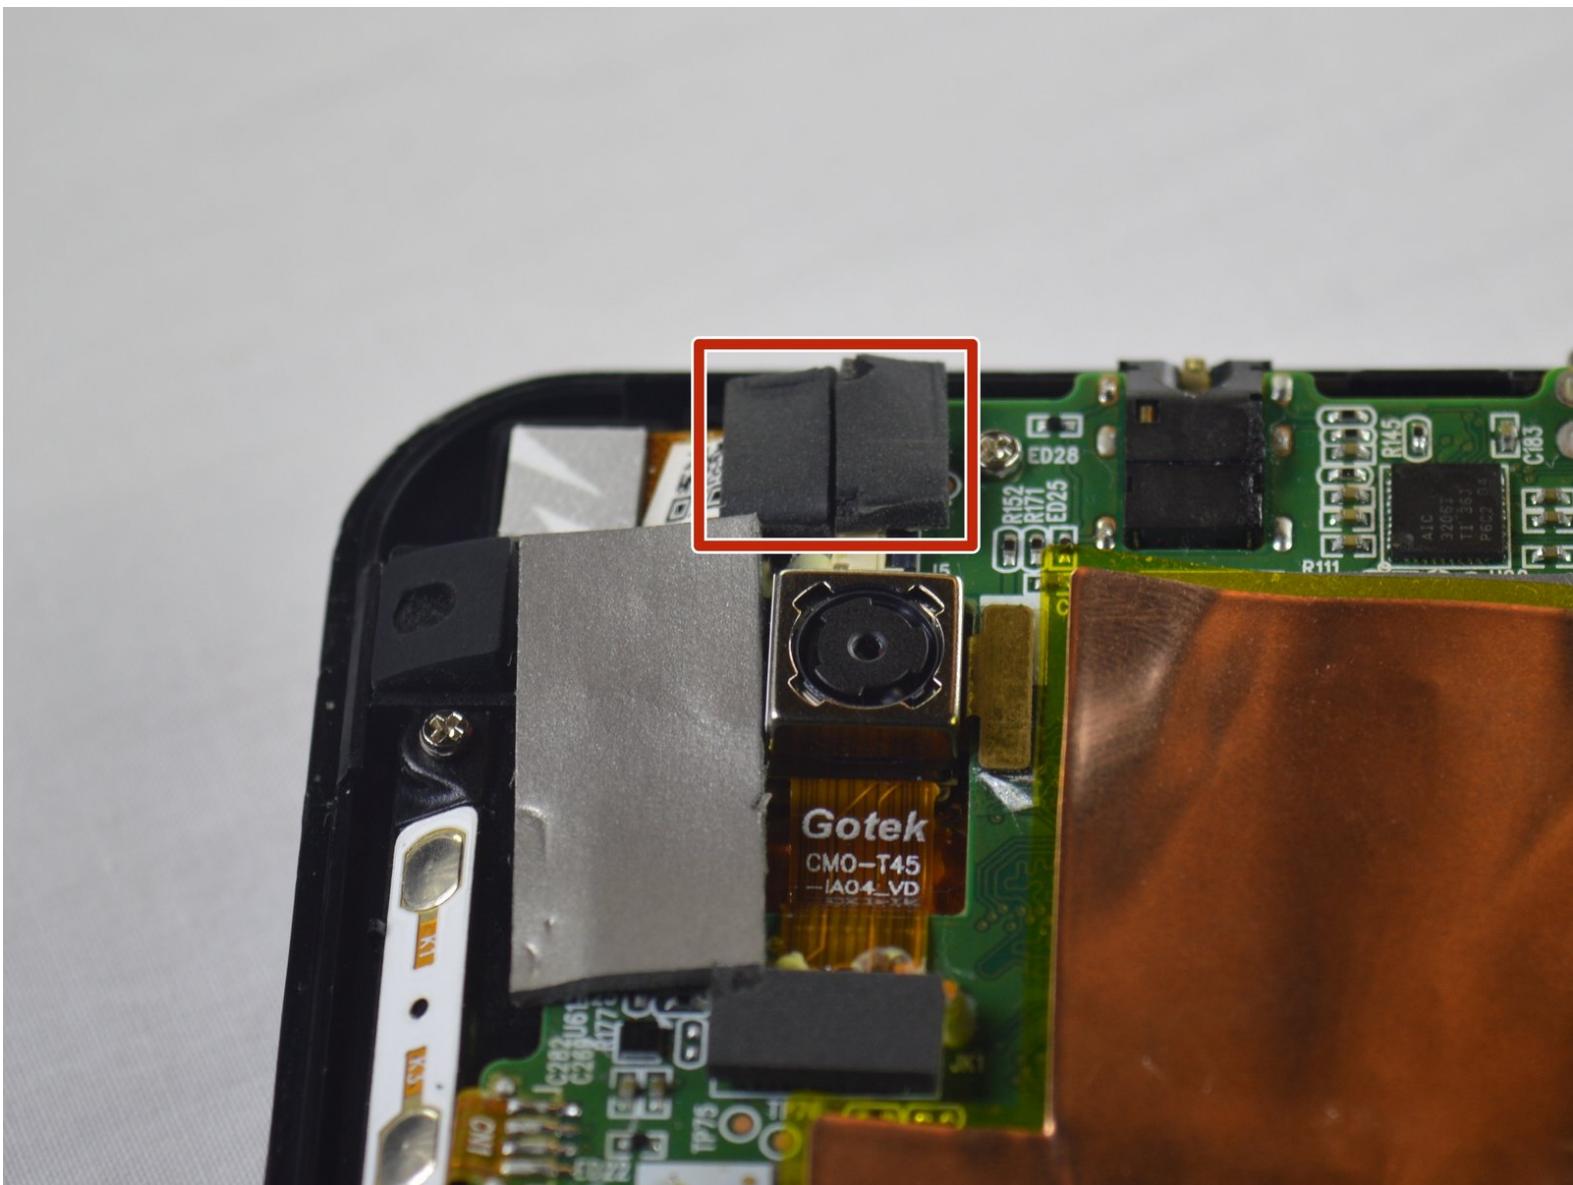

 **TOOLS:**



- [Spudger \(1\)](#)
- [Soldering Iron \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Tablet Cover



- Turn off the tablet and disconnect the power and all external devices from the tablet.
- Position the tablet with the display panel down and the right side toward you.
- Carefully insert a plastic opening tool between the tablet cover and display panel assembly, separating the two components. The first insertion point should be between the power button and the volume buttons.

Step 2

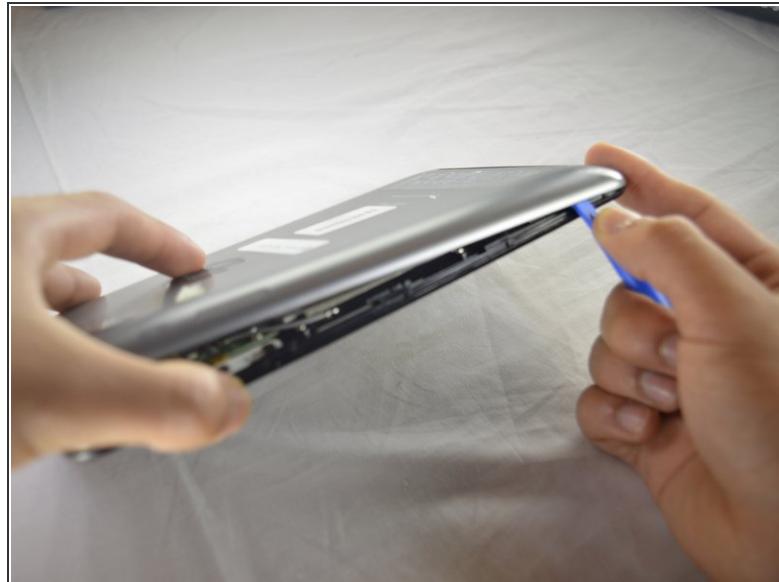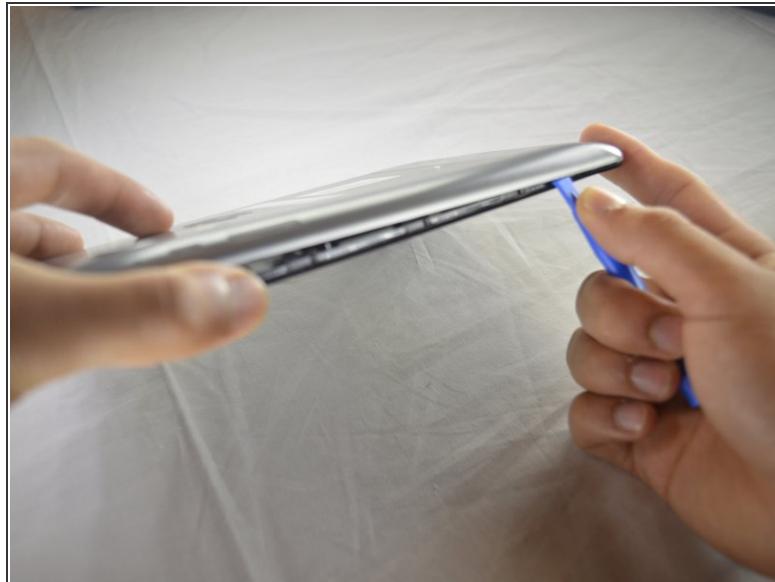


- Slide the tool around the perimeter of the tablet until the edge of the cover is completely separated from the display panel assembly.

Step 3




- Pry open the back cover to take it off.

Step 4 — Battery

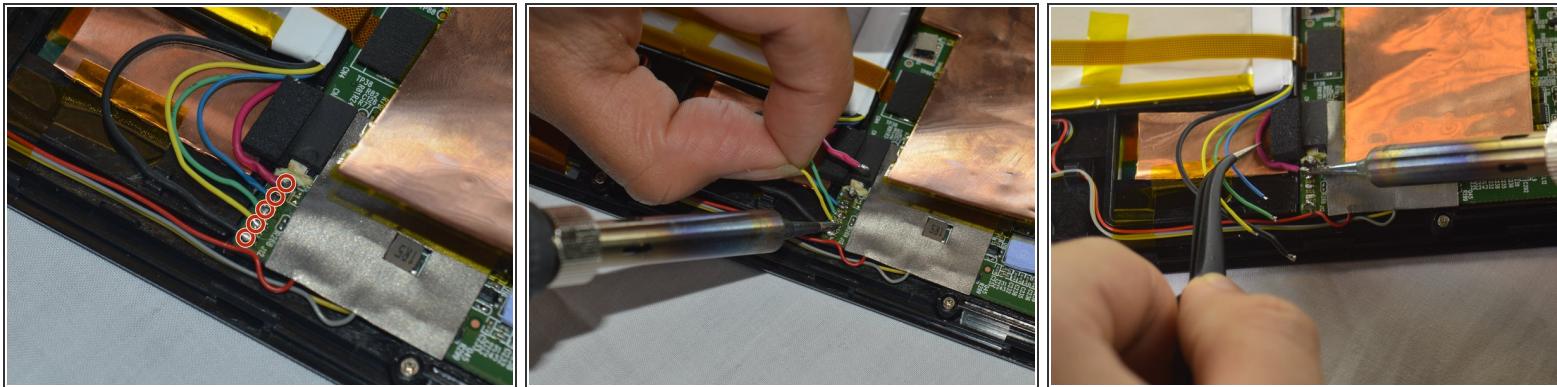

- Disconnect the battery cables from the system board by desoldering them. See [iFixit guide on how to solder](#).
- ⓘ The battery cables are soldered to the system in the following sequence, top to bottom: red, blue, green, yellow, black.


Step 5

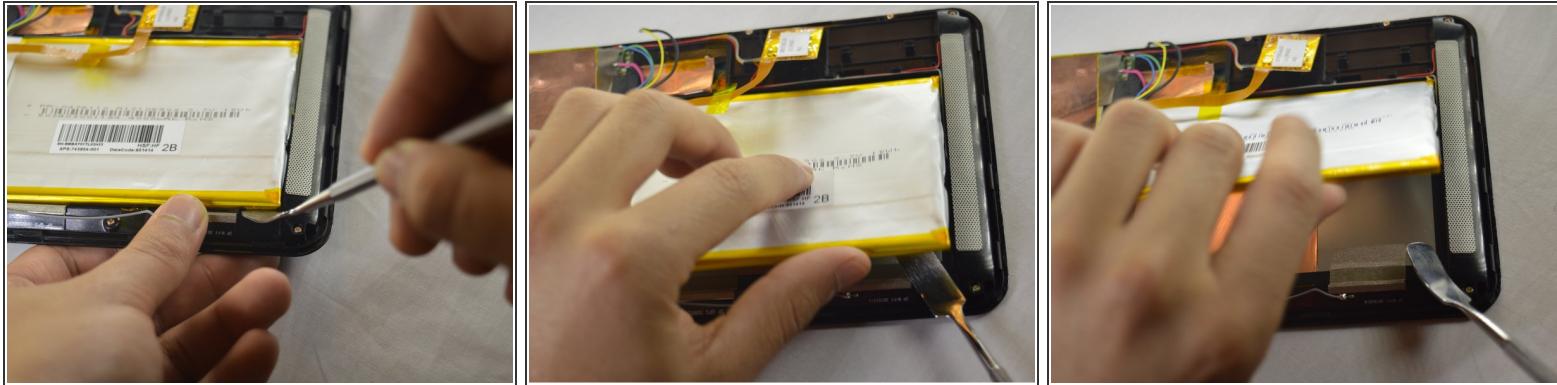

- Insert a nylon spudger between the battery and the display panel assembly. Carefully pry the battery up and remove it from its place.
- The battery is attached to the display panel assembly with double-sided adhesive. Make sure to firmly pull the battery.



⚠ The regular black nylon spudger should be used whenever possible, especially around batteries.

Step 6 — Front Facing Webcam

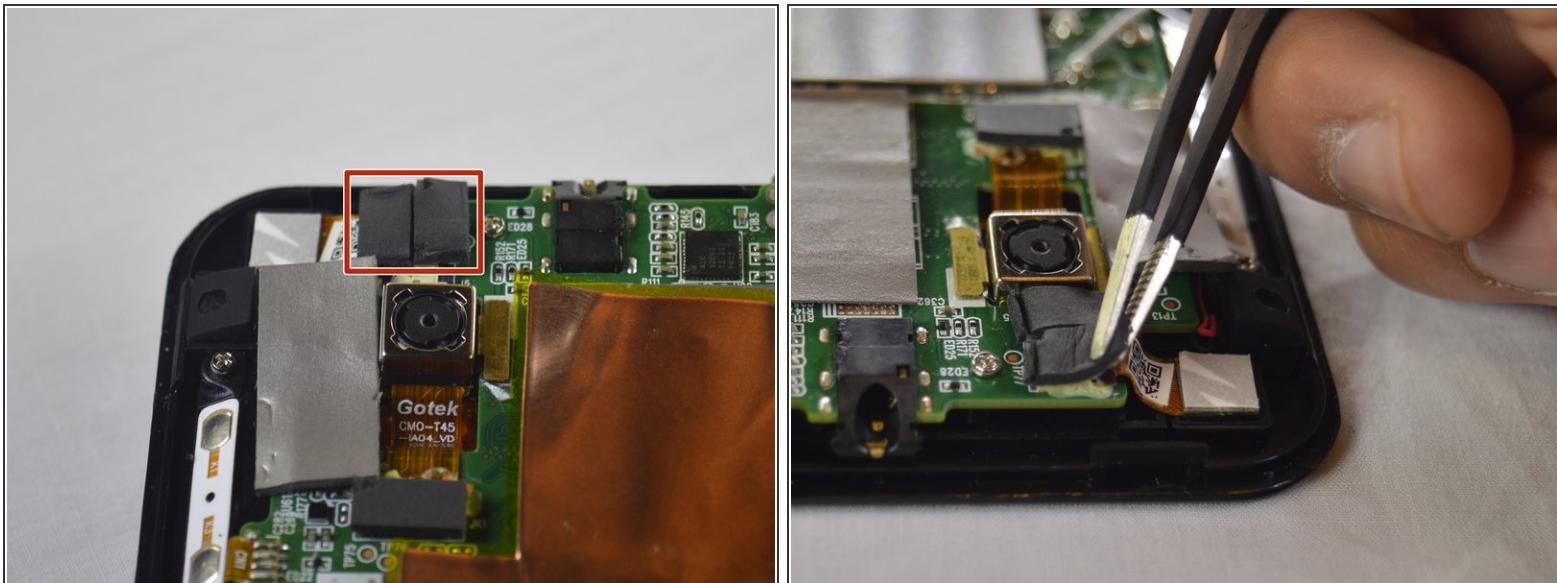

- Use tweezers to remove the black foam stickers from the front facing camera to expose the wiring.

Step 7

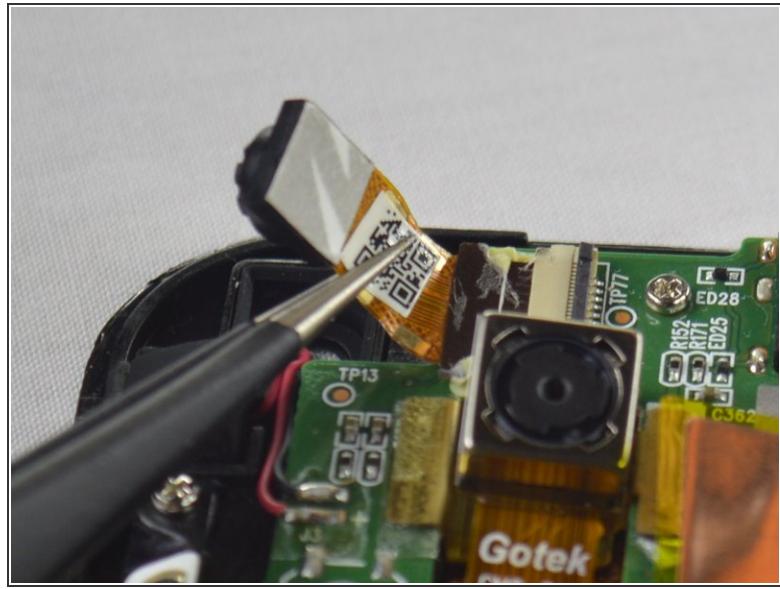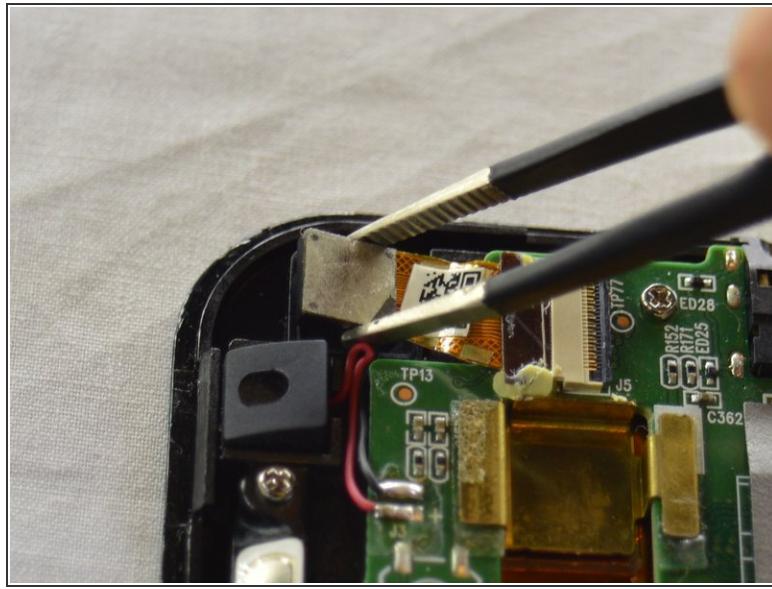

- Lift the camera out from system board and firmly pull the wire out from the connector.

To reassemble your device, follow these instructions in reverse order.