



HP Sprocket 2-in-1 Outer Casing Replacement

How to replace the HP Sprocket 2-in-1 outer casing.

Written By: Kevin Steward



INTRODUCTION

This guide is necessary for all replacement guides for the HP Sprocket 2-in-1. All the images and directions use the iFixit Pro Tool Tech Kit. It is not necessary to use the kit but it is recommended. Be sure to prepare all tools and the device in a well-lit environment.

TOOLS:

- [Jimmy](#) (1)
- [J00 JIS Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Outer Casing



- Remove the back cover and any printer paper inside the device.

Step 2



- Using the Jimmy, slowly pry open the outer edge of the remaining white plastic on the back.
- Remove the plastic from the device once it lifts out freely.


Step 3



- Remove two 2.5mm JIS #00 located on the small circuit board in view.
- Use the Jimmy to remove the board after the screws have been removed.


 Be careful not to crease or damage the ribbon cable.

Step 4

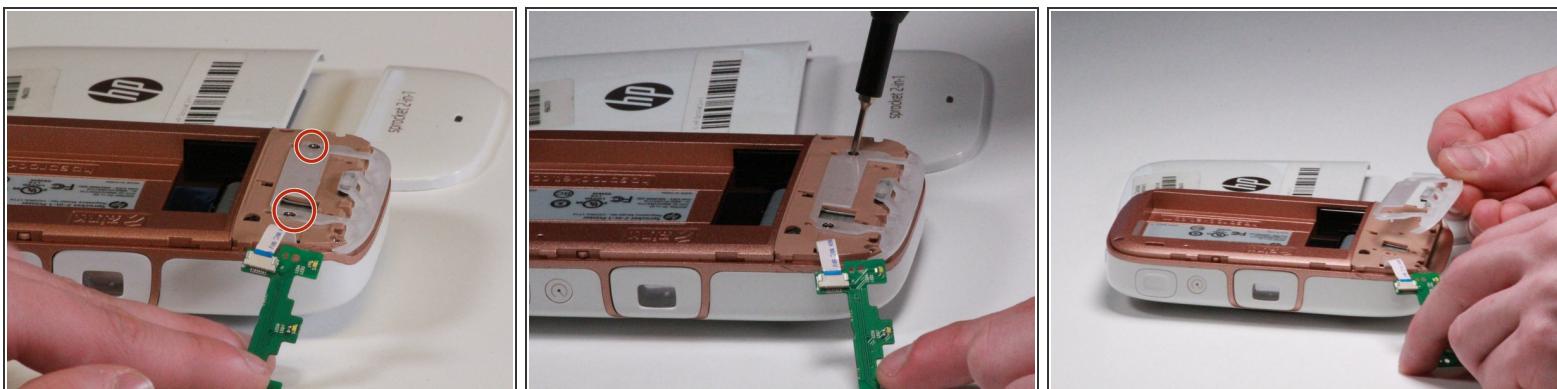

- Remove two 2.5mm JIS #00 screws from the translucent plastic bracket.
 - One will be located beneath the ribbon cable.
- Remove the translucent plastic bracket by hand.

Step 5

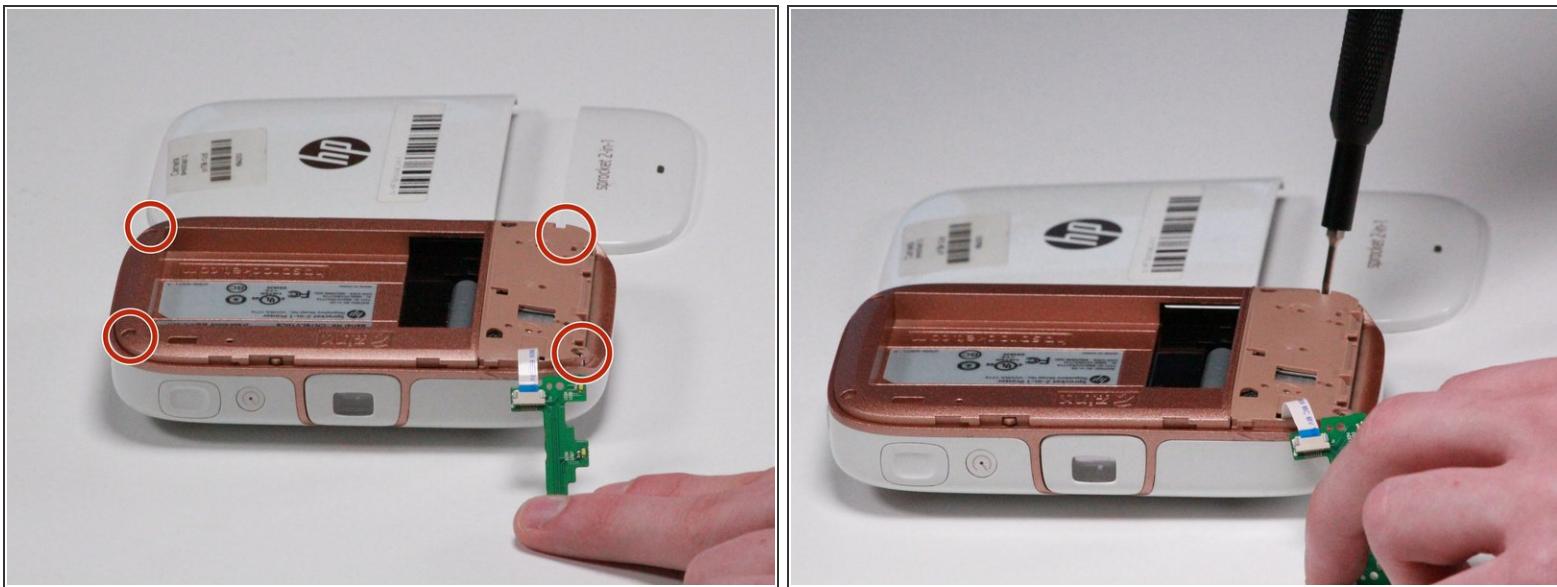

- Remove four 2.5mm JIS #00 screws from the beige casing.

Step 6




- Use the iFixit opening tool to slowly work between the white and beige casing around the device.
- Flip the device over and separate the white casing from the rest of the device.

⚠ Be careful not to break the plastic while removing the case.

⚠ Gently remove the white casing as there is a ribbon cable connecting the two pieces.

Step 7

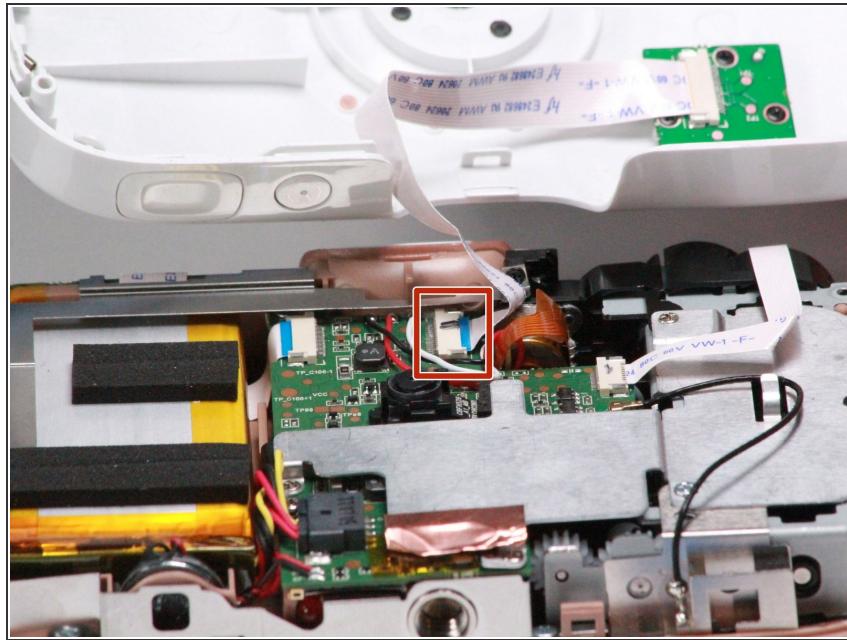

- Carefully remove the ribbon cable that connects the flash to the outer casing.

To reassemble your device, follow these instructions in reverse order.