


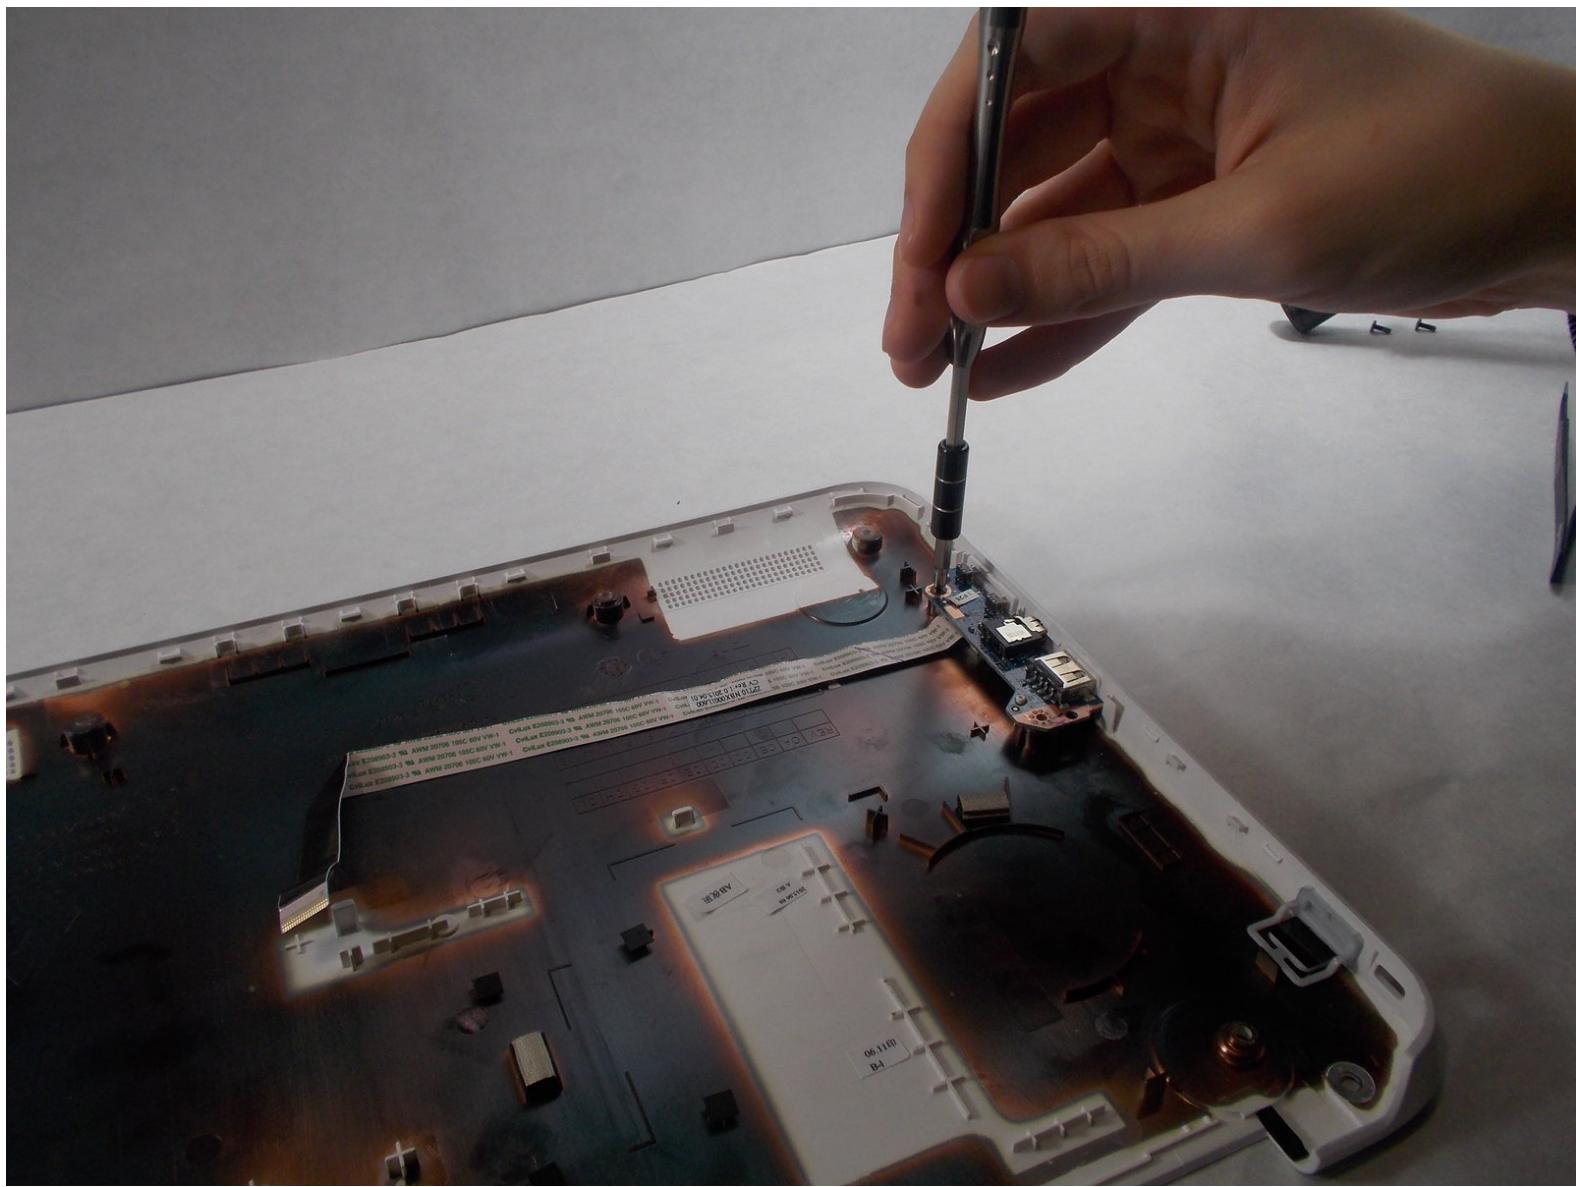

HP Stream 11 x360 -p015wm Audio Jack Replacement

How to replace a HP Stream 11 x360 -p015wm audio jack.

Written By: DaisyHaskell




INTRODUCTION

If your audio jack has become unstable, replacing it with this guide will help. You will need a Phillips #0 screwdriver head.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Audio Jack

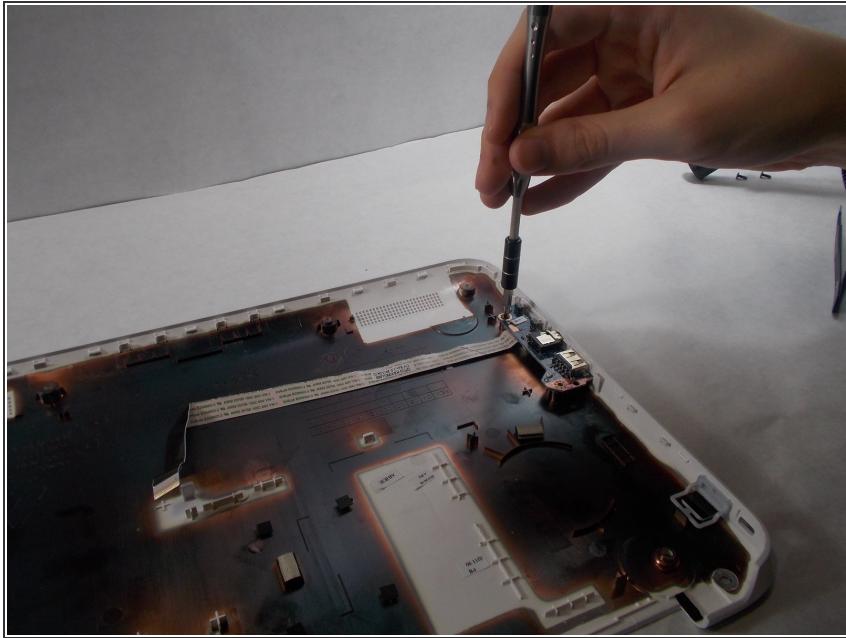

- Grab the rear lid of the laptop and orient the inside towards yourself.
- Remove both #00 screws that are found on opposite ends of audio jack.

Step 2

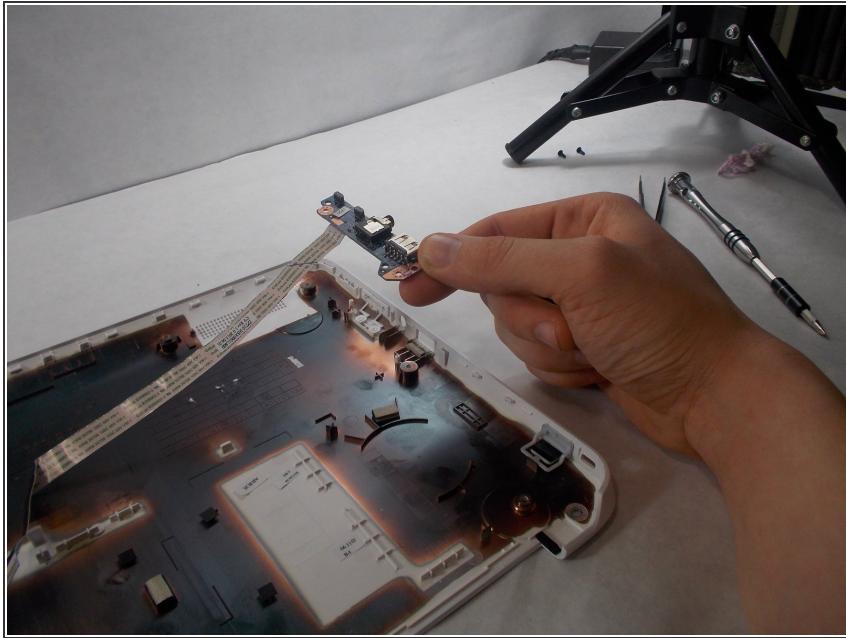

- Remove audio jack by hand.

To reassemble your device, follow these instructions in reverse order.