




# HP Stream 13-c010nr Display Replacement

Follow this guide to replace the screen on your HP Stream 13-c010nr laptop.

Written By: Keegan Lapham

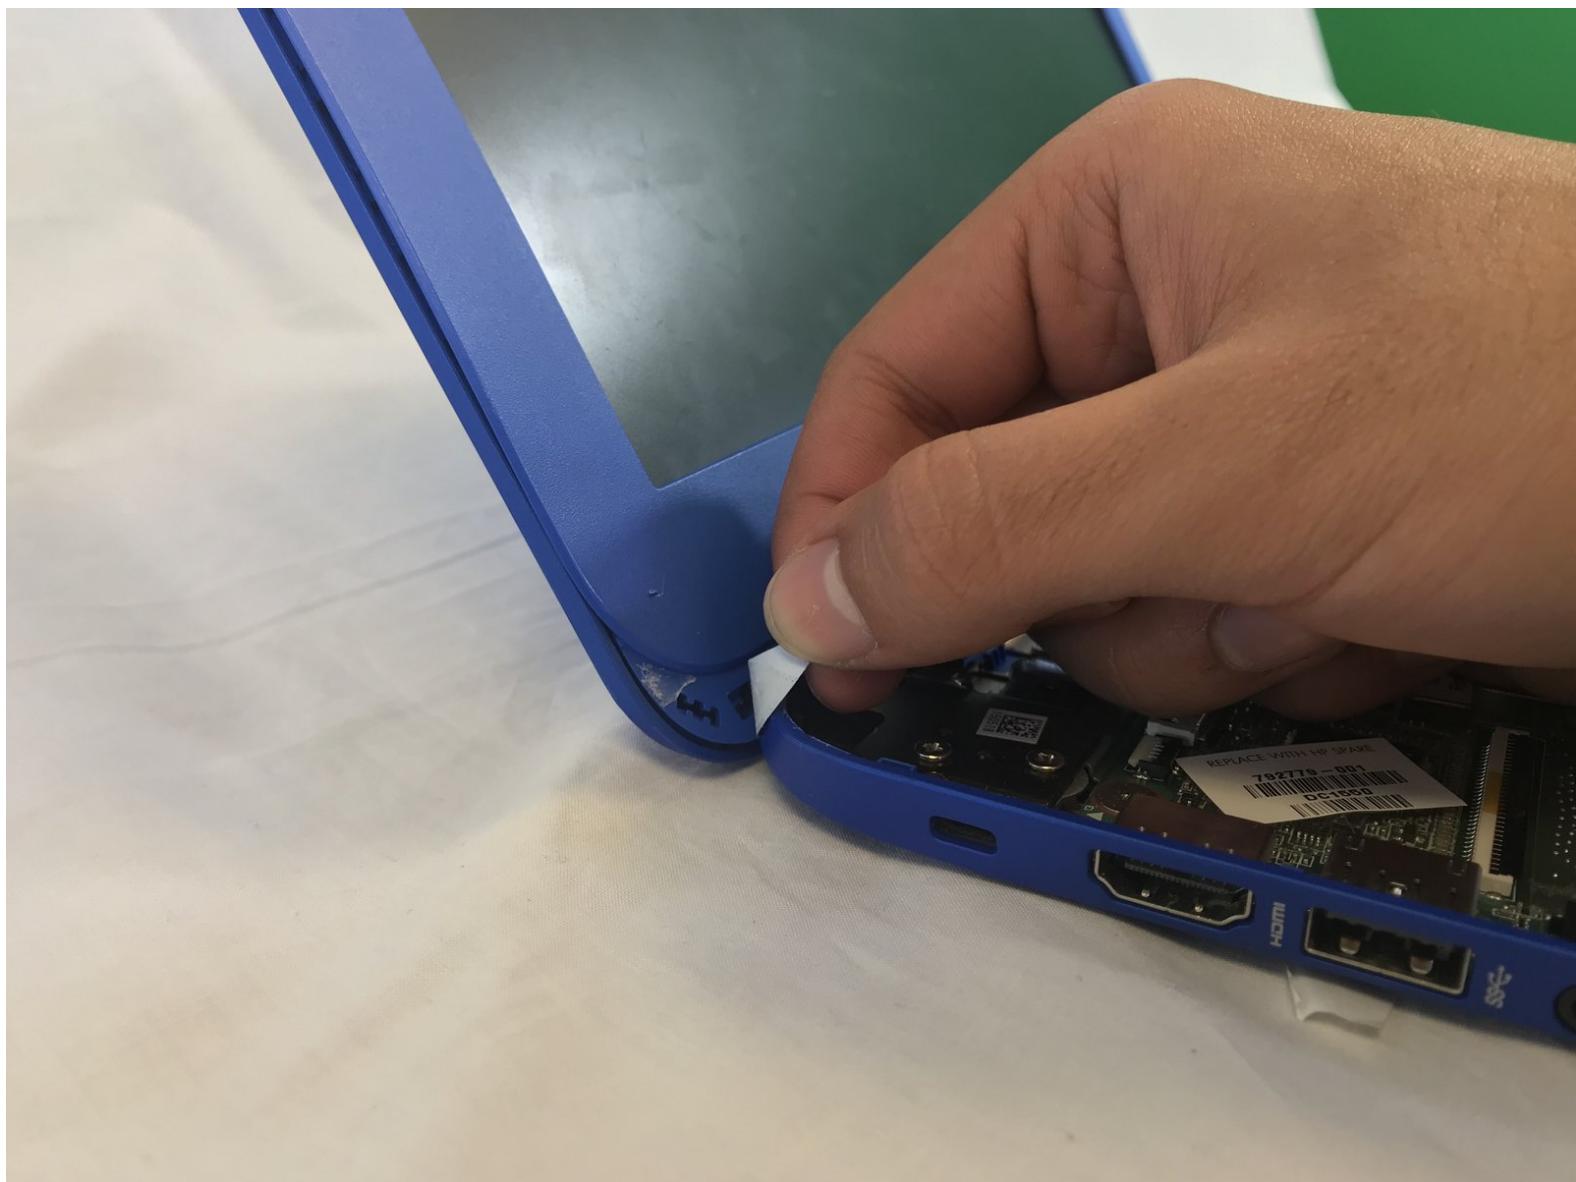

## INTRODUCTION

This guide will show how to replace the display on the HP Stream 13-c010nr. If your screen is cracked or damaged, you can follow this guide to repair it.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Precision Tweezers Set](#) (1)

## Step 1 — HP Stream 13-c010nr Disassembly




- Remove the five rubber feet from the bottom of the laptop with a plastic opening tool.

## Step 2



- Remove the thirteen 5mm Phillips #0 screws from the bottom case.


## Step 3

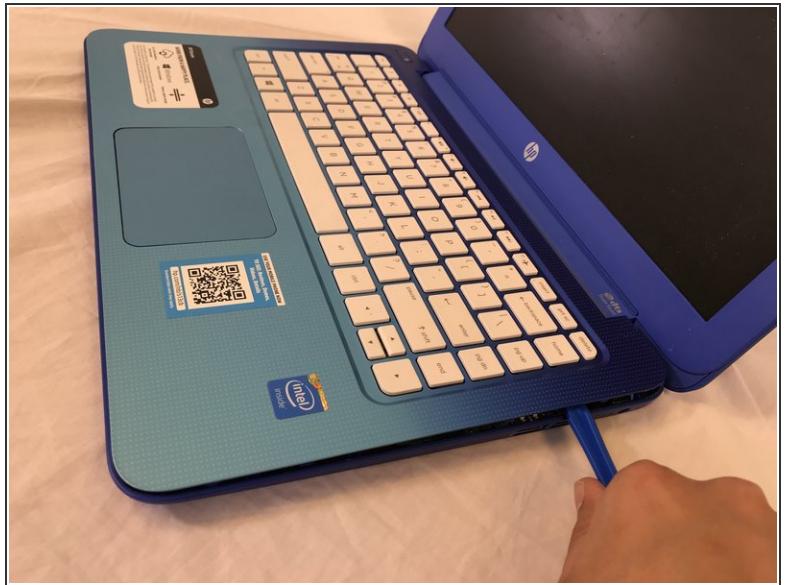

- Flip the laptop over and open it up.
- Wedge a plastic opening tool between the keyboard and bottom case, pry upwards to separate the two pieces.
- Lift up the keyboard.


ⓘ Ribbon cables still connect the two pieces.

## Step 4

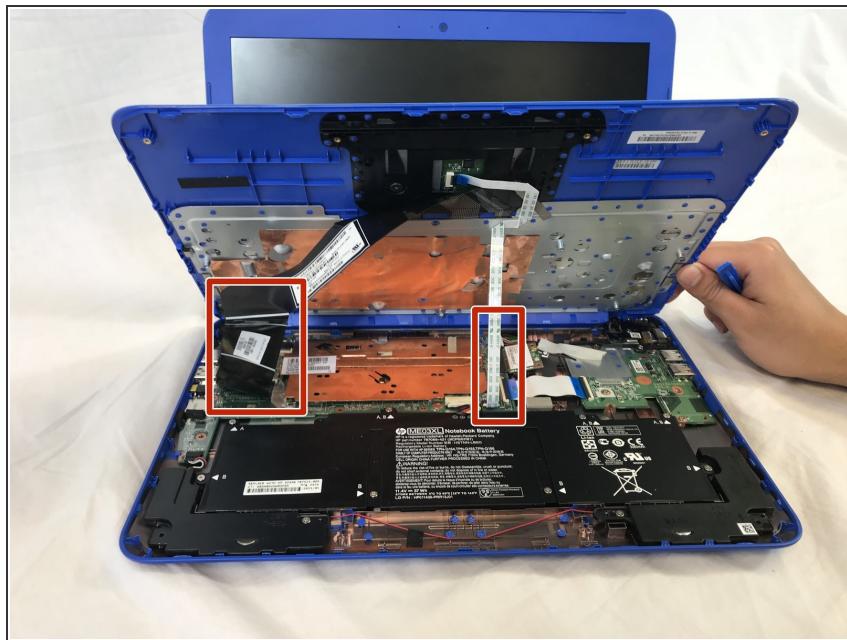


- Use a spudger to flip up the retaining flaps on the keyboard ribbon cable [ZIF](#) sockets.
- Pull up the ribbon cables from their sockets.

## Step 5 — Display

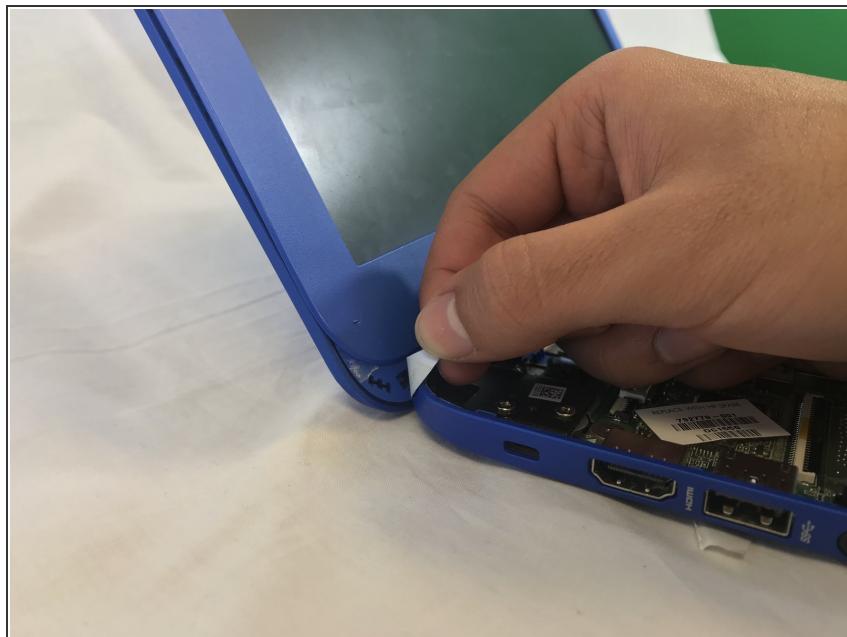

- Remove the screw covers from the bottom corner edges of the screen.

## Step 6

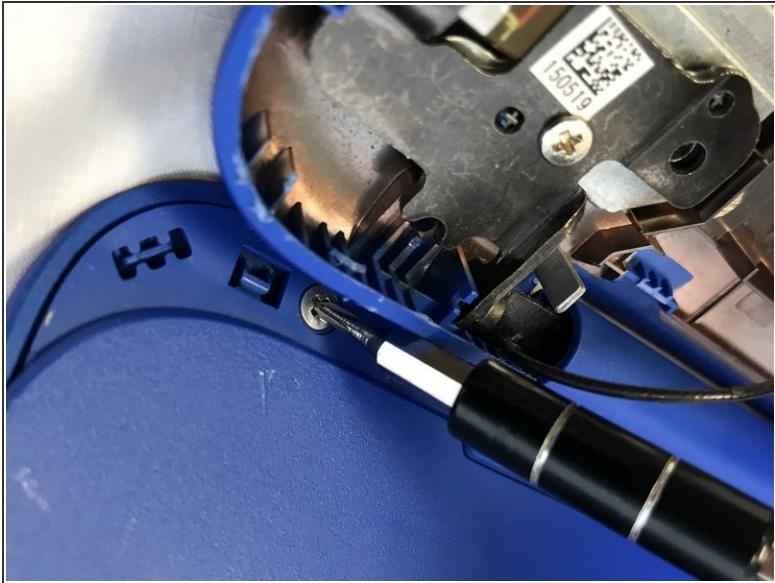

- Remove the two 5mm Phillips #0 screws from the screen bezel.

## Step 7



- Wedge the plastic opening tool between the frame of the screen and the casing of the laptop.
- Pry upwards on the plastic opening tool to separate the bezel from the display.

## Step 8



- Remove the four 3mm Phillips #0 screws from the screen.

## Step 9



- Use a spudger to flip up the retaining flap on the screen ribbon cable ZIF socket.
- Pull the ribbon cable out of the ZIF socket.
- Remove the screen.

To reassemble your device, follow these instructions in reverse order.