



HP Stream x360 11-p015wm Speaker Replacement

How to replace an HP Stream x360 11-p015wm speaker.

Written By: DaisyHaskell





INTRODUCTION

If you're looking to fix the speaker on your HP Stream 11 x360-p015wm laptop, then boy are you in the right place. This guide will take you step-by-step through how to get right to your speaker and take it out! Then, follow the steps in reverse order to put it back together!

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [JIS #1](#) (1)

Step 1 — Back Cover

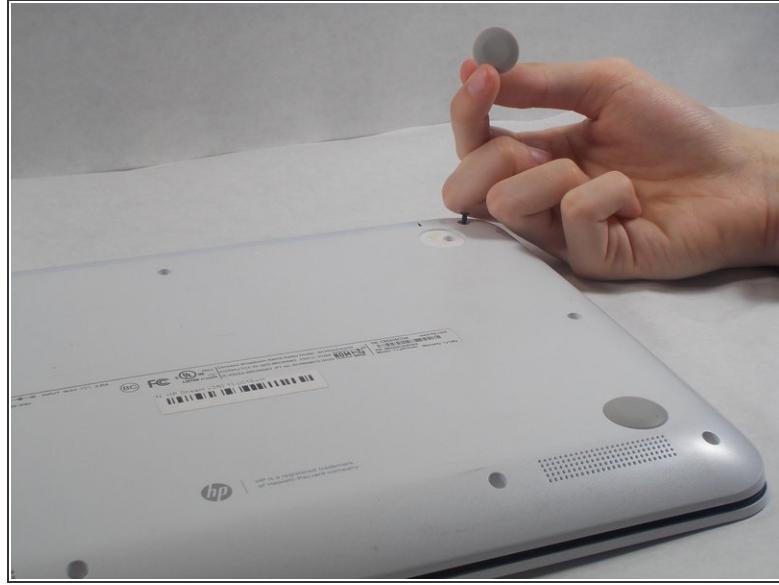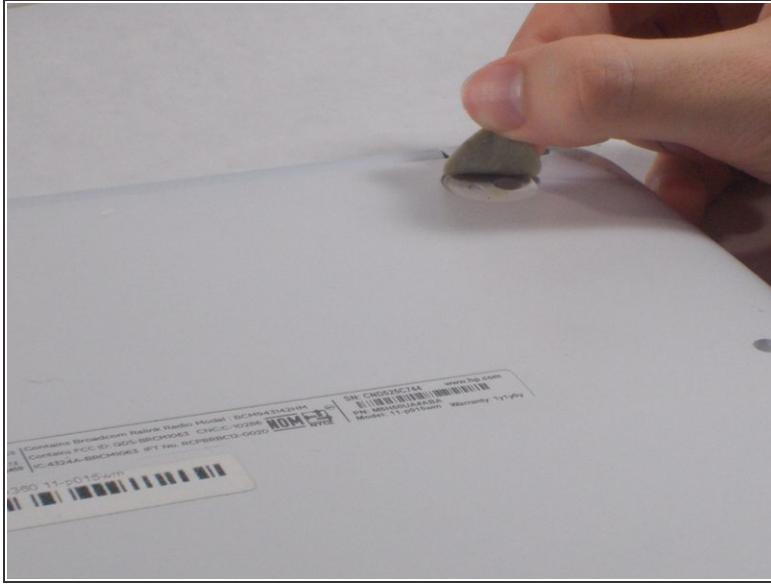

- Orient the laptop to have the back cover facing upwards.
- Remove the four rubber pads located in each corner.

Step 2

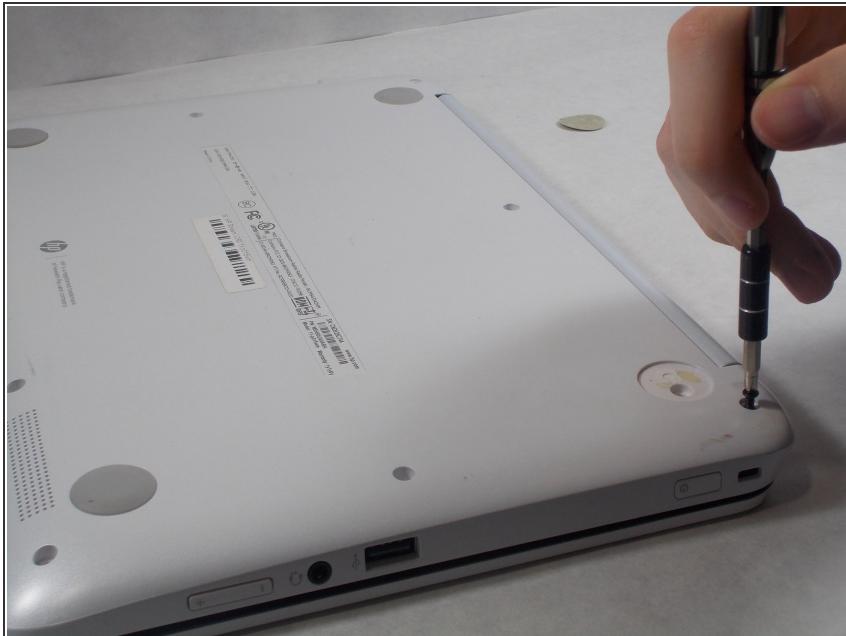

(i) Tool required: [JIS #1 Screwdriver](#)

- Using the screwdriver, remove all of the exposed screws.


Step 3



(i) Tool required: [iFixit opening tool](#)

- Open the laptop and orient the keyboard facing upward.
- Slowly wedge the opening tool into the gap between the keyboard and the back cover.
- After loosening the back cover, close the laptop and orient the back cover facing upward. Open the cover.

Step 4

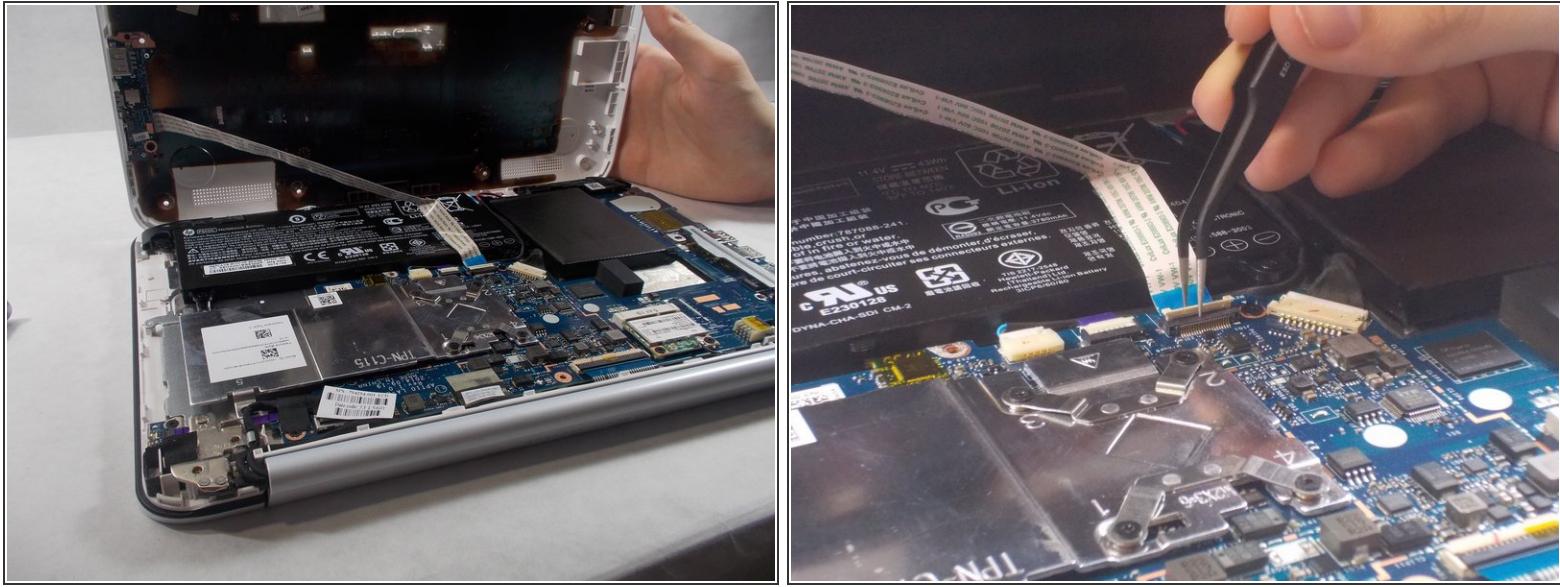


- ➡ This is a good time to clean any accumulated dust or debris. Use [this link](#) on tips for cleaning.
- ⓘ Tool required: [Tweezers](#)
- Carefully use tweezers to remove the audio jack connector from the motherboard.

Step 5 — Speaker




- Locate your speaker on the left and right ends of the front rear side of your laptop.

Step 6

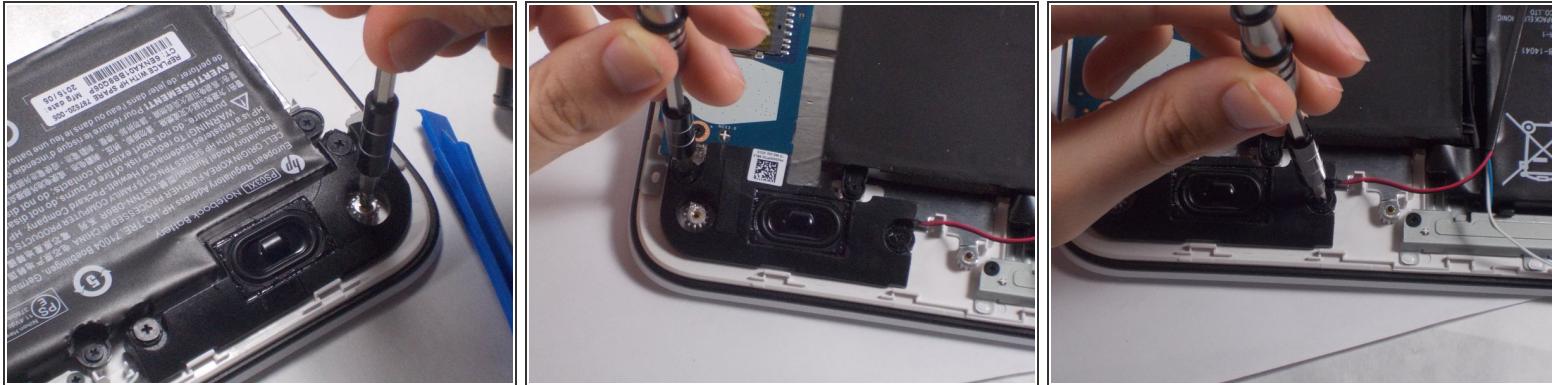


- Use JIS J1 screwdriver to remove exposed screws on one or both of the speakers.

Step 7

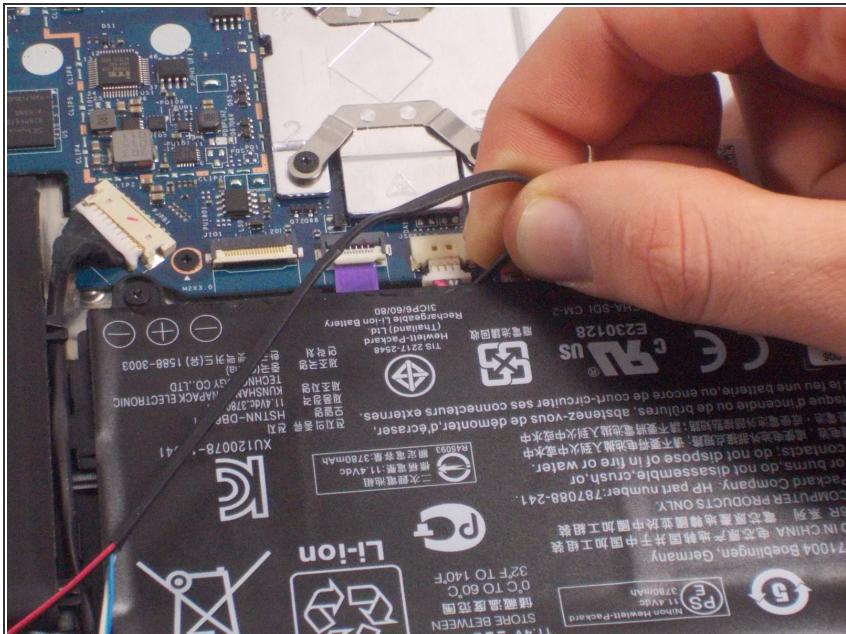

- Unplug the speaker wire connected to the laptop.

Step 8

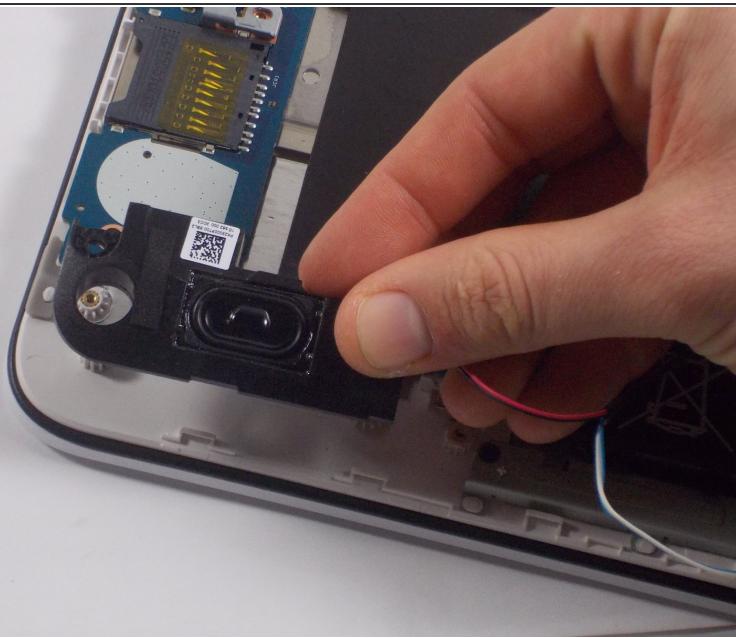

- Carefully remove the speaker from the laptop.

To reassemble your device, follow these instructions in reverse order.