


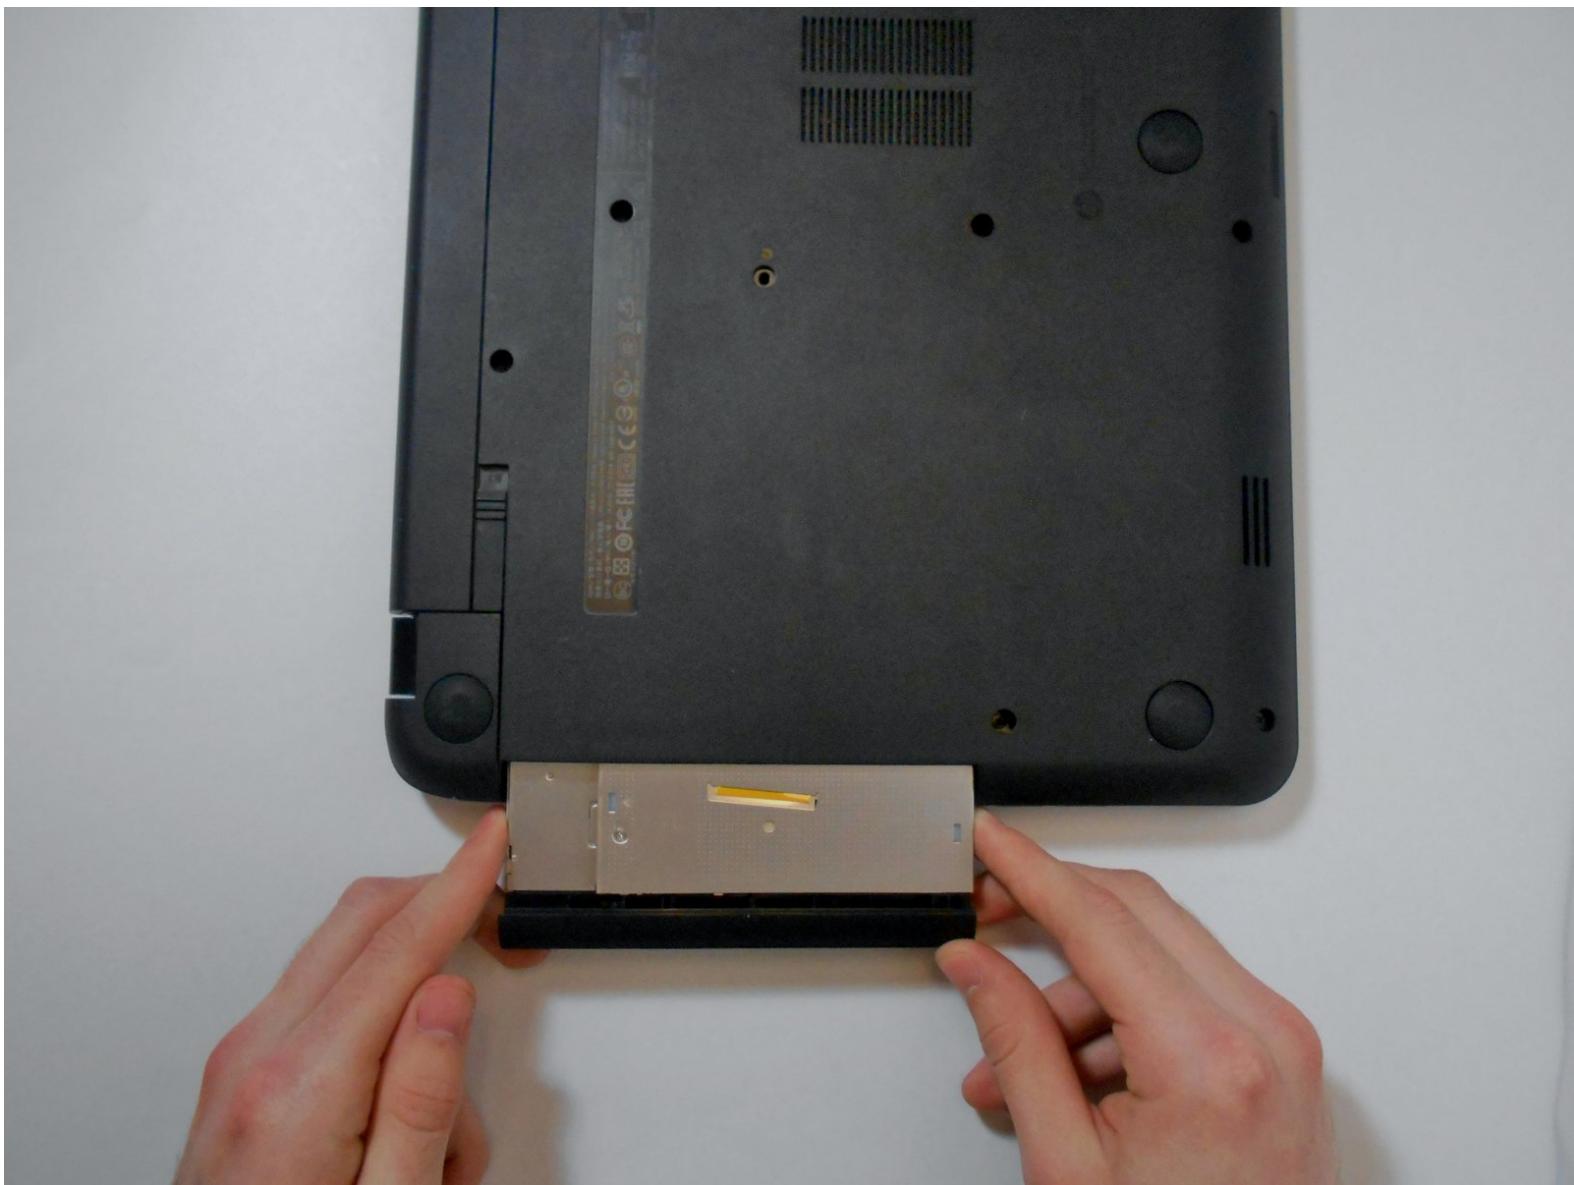

HP TouchSmart 15-r015dx DVD±RW Drive Replacement

This guide will show you how to replace your DVD±RW Drive for your HP TouchSmart 15-r015dx.

Written By: Jacob Kleinsorge



INTRODUCTION

The HP TouchSmart 15-r015dx has one DVD±RW Drive on the right side of the laptop.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — DVD±RW Drive



- Turn off your laptop.
- ⚠ Ensure your laptop is off. Removing the DVD±RW Drive while it is on may harm your laptop.
- Flip upside down in order to access the DVD±RW Drive.

Step 2



- There is 1 (one) screw holding the DVD±RW Drive in place.
- Use your screwdriver to remove the screw.

 Be careful not to lose the screw.

This document was generated on 2019-09-23 09:02:53 AM (MST).

Step 3



- The DVD±RW Drive is here.
- Remove the DVD±RW Drive by gently pulling it straight out.

To reassemble your device, follow these instructions in reverse order.