




HP TouchSmart 15-r015dx RAM Replacement

This guide will show you how to replace your HP TouchSmart 15 RAM.

Written By: Jacob Kleinsorge

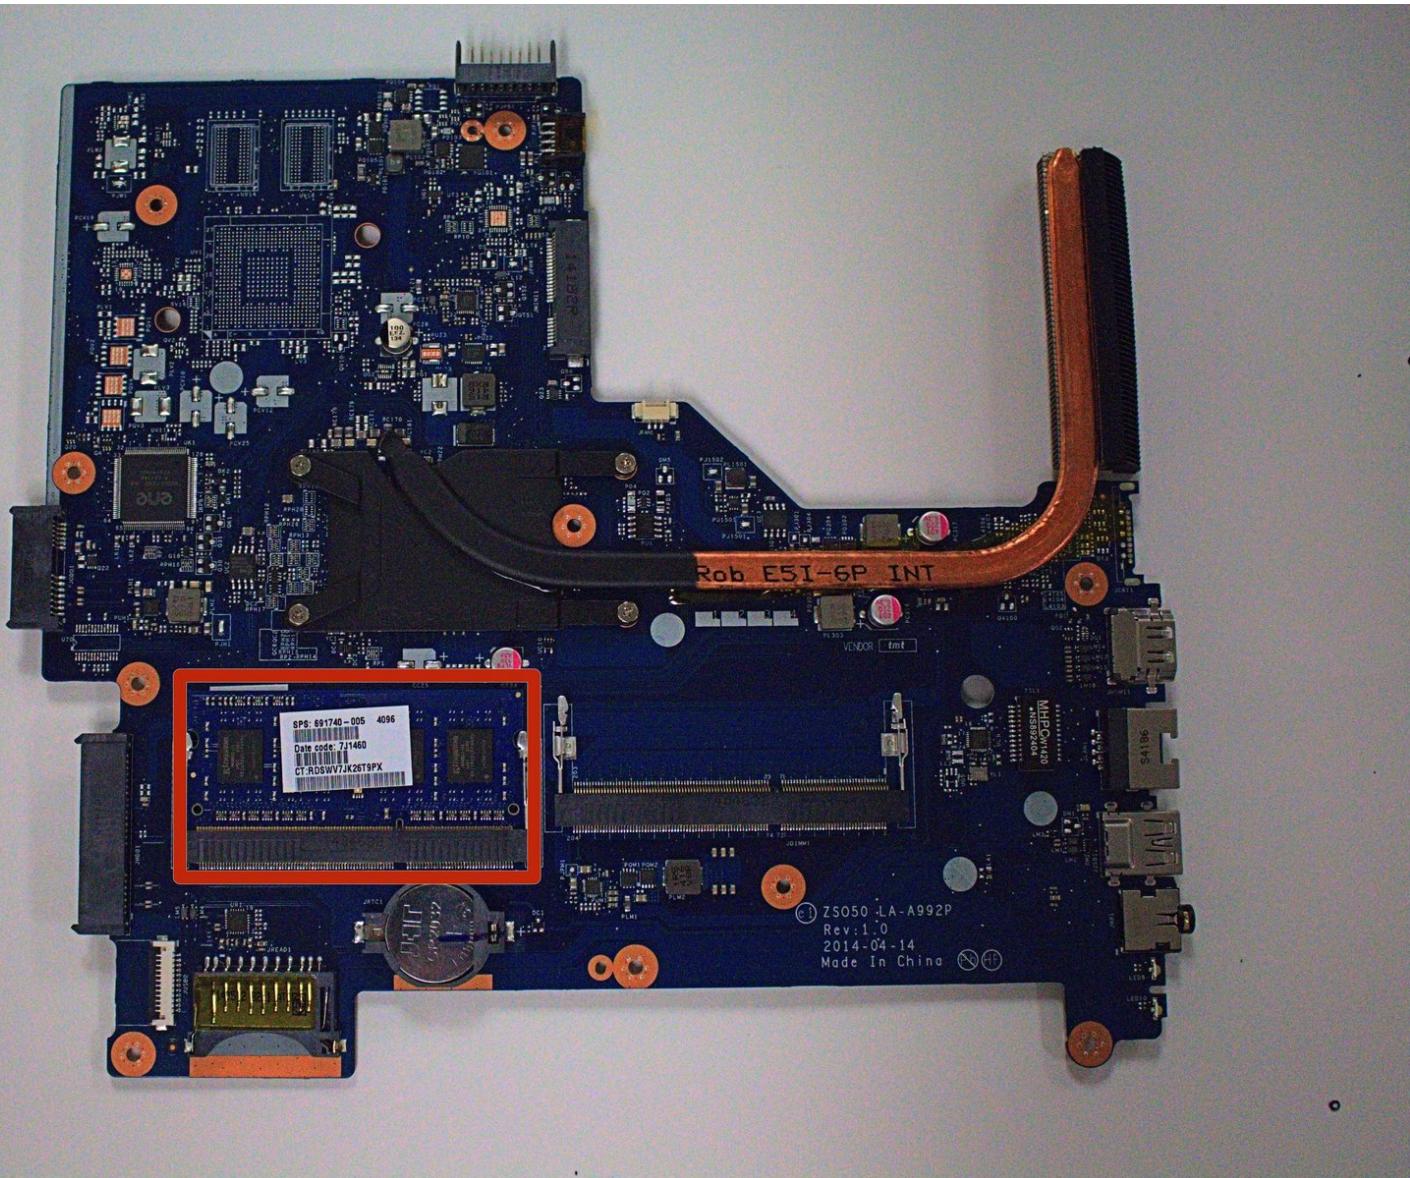

INTRODUCTION

The HP TouchSmart 15-r015dx has 4 GB of RAM.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Turn off your laptop.
- ⚠ Ensure your laptop is off. Removing the battery while it is on may harm your laptop.
- Flip upside down in order to access the battery.

Step 2



- There are two battery release switches located under the battery.
- Slide both switches inward to release the battery.

Step 3



- Remove the battery.

i The release switches may need to be pushed inward while removing the battery.

Step 4 — DVD±RW Drive



- Turn off your laptop.

⚠ Ensure your laptop is off. Removing the DVD±RW Drive while it is on may harm your laptop.


- Flip upside down in order to access the DVD±RW Drive.

Step 5



- There is 1 (one) screw holding the DVD±RW Drive in place.
- Use your screwdriver to remove the screw.
- *i* Be careful not to lose the screw.

Step 6

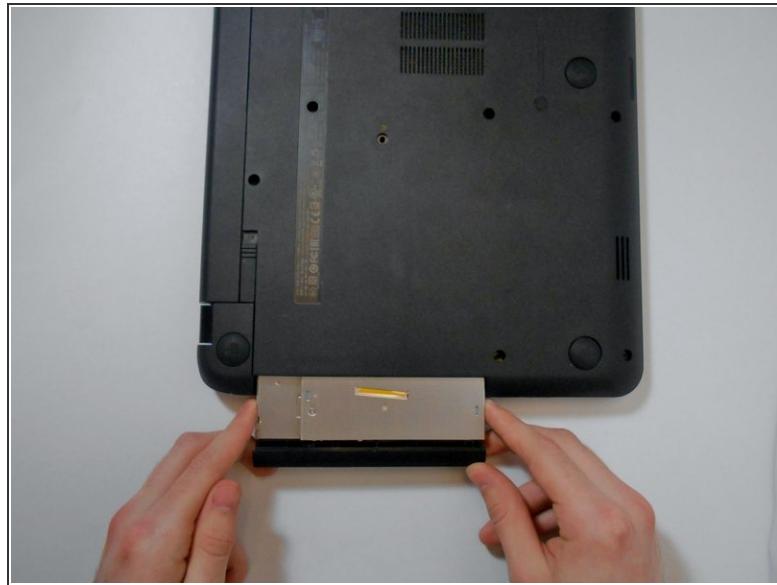

- The DVD±RW Drive is here.
- Remove the DVD±RW Drive by gently pulling it straight out.

Step 7 — Keyboard




- Turn off your laptop.
- ⚠** Ensure your laptop is off. Removing the keyboard while it is on may harm your laptop.
- Flip upside down in order to release the keyboard.

Step 8



- Remove the two Phillips screws securing the keyboard.
- *(i)* One of the screws lies on/under the label.


Step 9

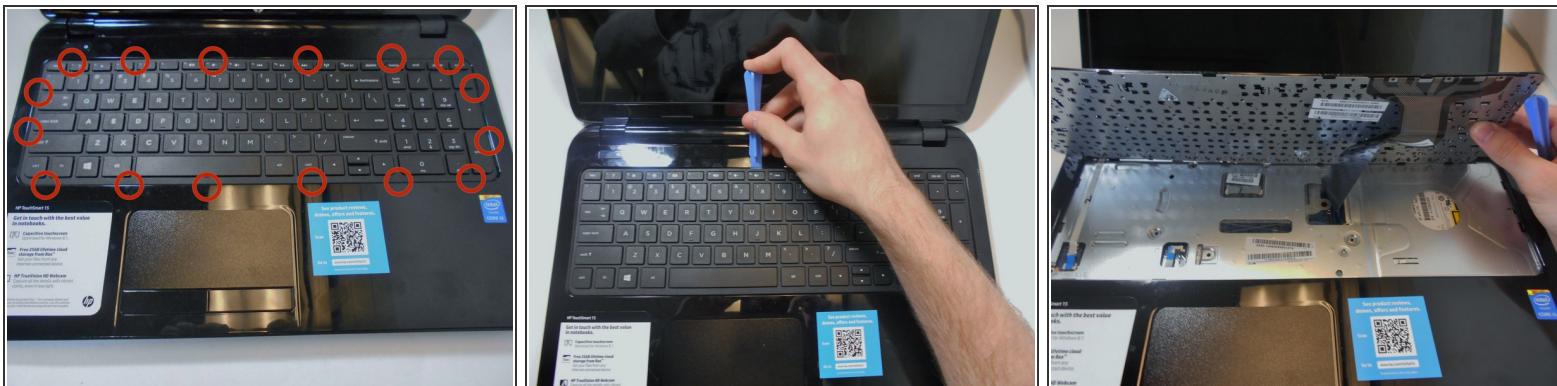

- Flip the laptop back over and pull the screen up.
- There are 16 (sixteen) latches holding the keyboard in place.
- Gently pry the keyboard up using your plastic opening tool.

⚠ Don't pull the keyboard up more than 2-3 inches as there is a film-material connecting the keyboard to the laptop.

Step 10

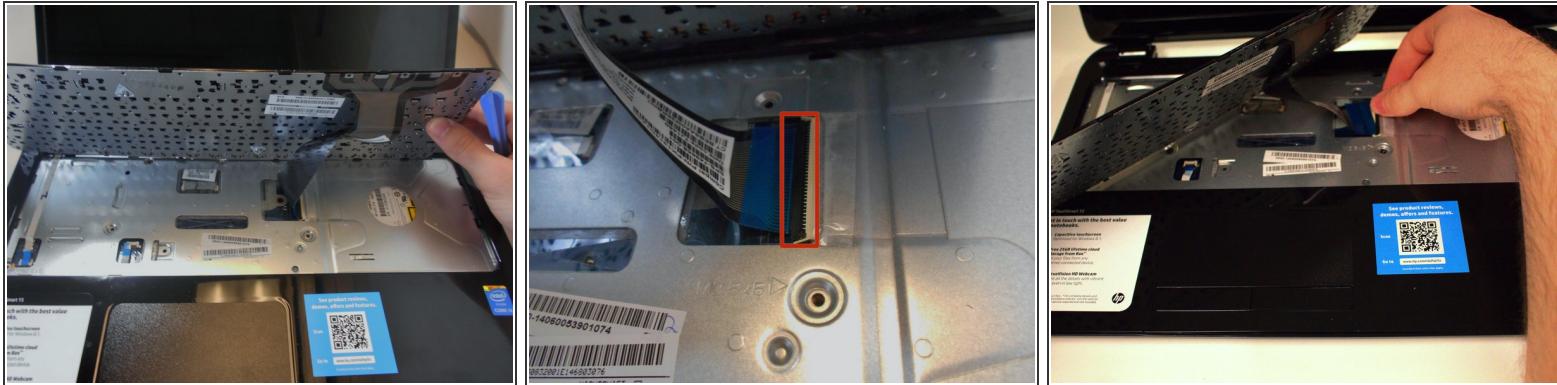

- There is a film-material connecting the laptop to the keyboard.
- There is a small black latch holding the film-material in place.
- Flip the black latch up to release the film-material.
- Once flipped up, simply pull the film-material out from the laptop to release the keyboard.


Step 11 — Hard Drive



- Close and flip your laptop over to access the screws.

⚠ Ensure your laptop is off and the battery removed. Removing the hard drive with the laptop on will harm your computer.

Step 12

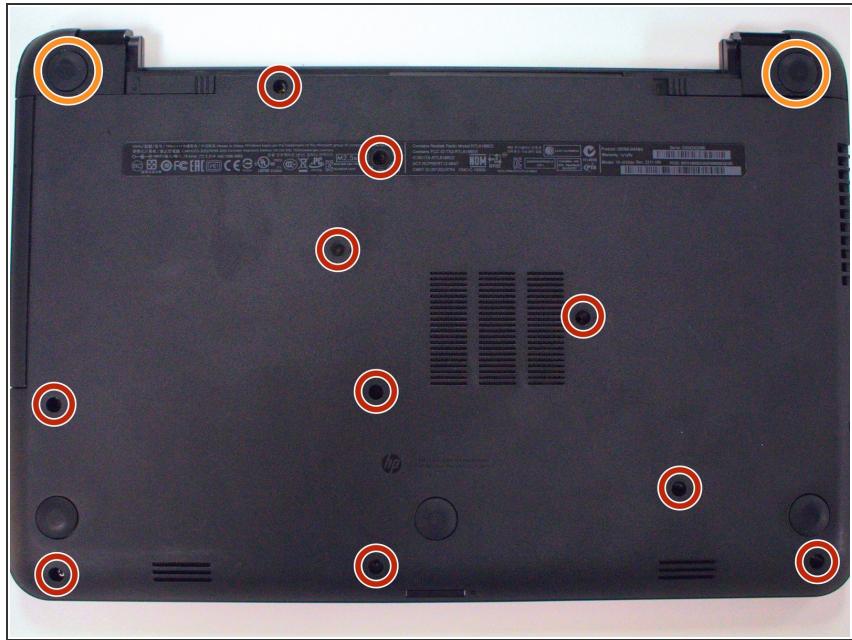


- Unscrew all the screws.
- There are 2 screws underneath the covers that need to be unscrewed.
- *i* Our DVD±RW Drive is still inside, but yours should already be removed.

Step 13



- Flip your laptop over and open it.
- There are 4 screws needing to be unscrewed.
- There are 2 wires that need to be unplugged before removing the base of the laptop.
- *y* There are 2 more screws where the DVD±RW Drive was.

Step 14

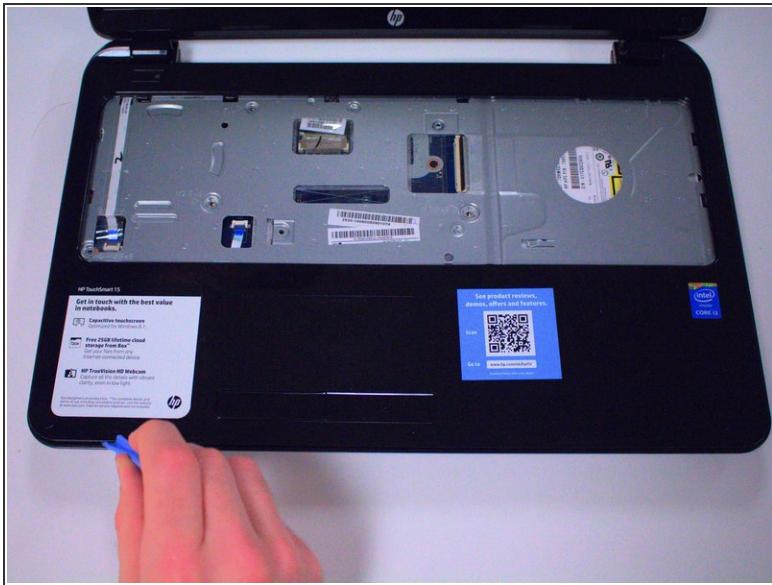


- Use your plastic opening tool to pry the base of the laptop off.

Step 15




- There are 2 screws holding the hard drive in place.
- Use your screwdriver to unscrew the screws.
- Remove the hard drive by pulling it to the right like shown.

Step 16 — Motherboard

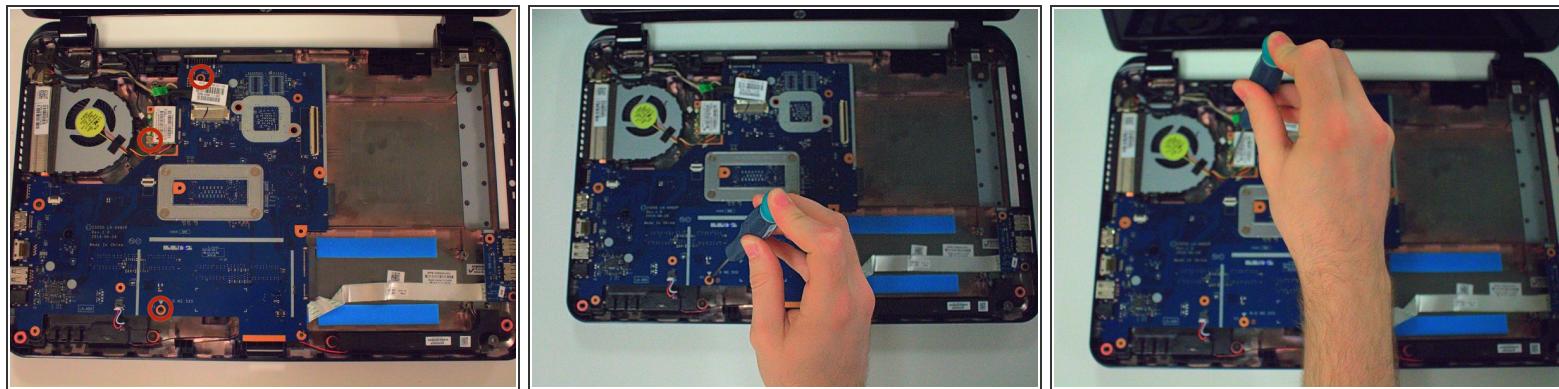


- There are 3 screws holding the motherboard in place.
- Unscrew the screws to release the motherboard.

Step 17

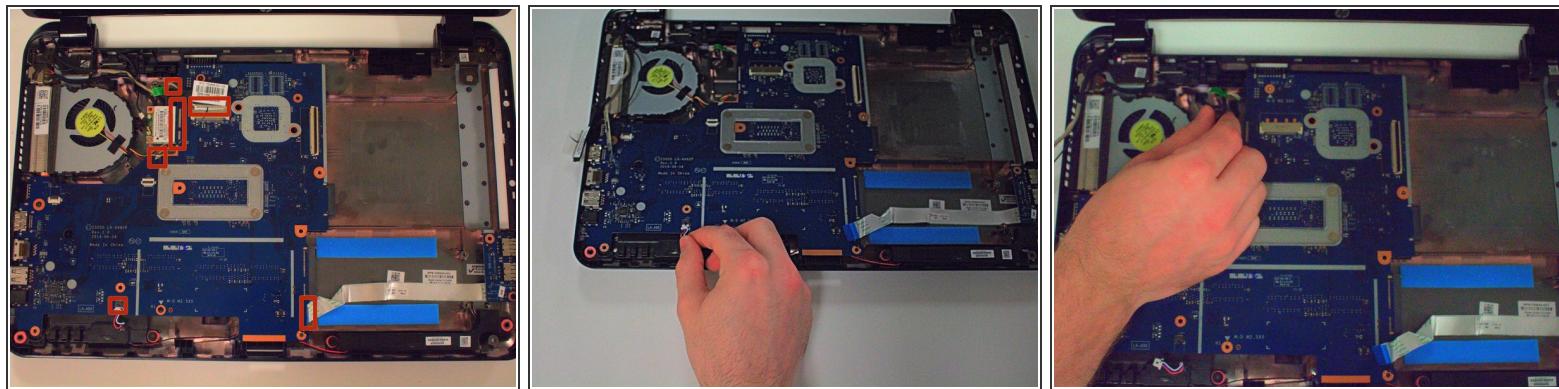


- There are several wires that need to be disconnected from the motherboard.
- Remove the wires carefully.

Step 18

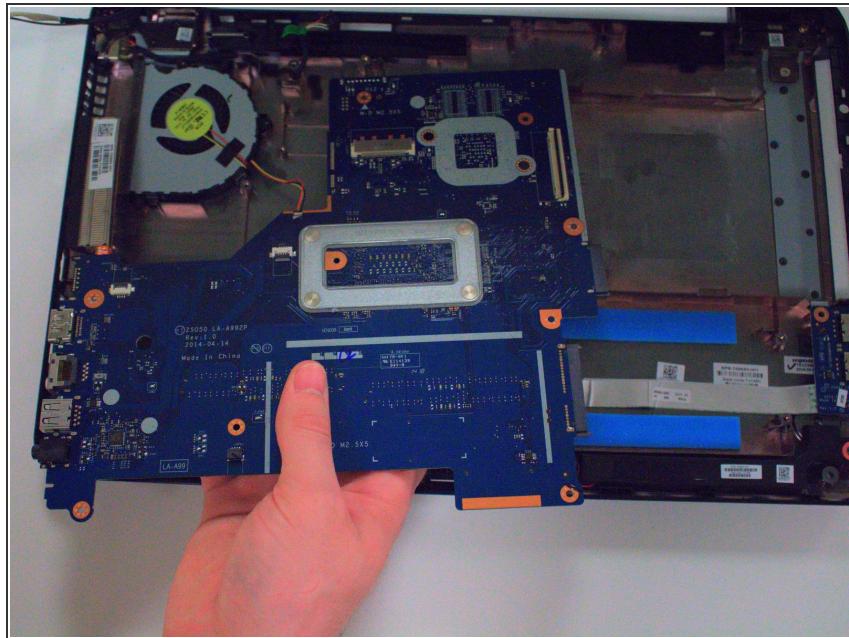



- After removing all the wires, pull the motherboard out.

Step 19 — RAM

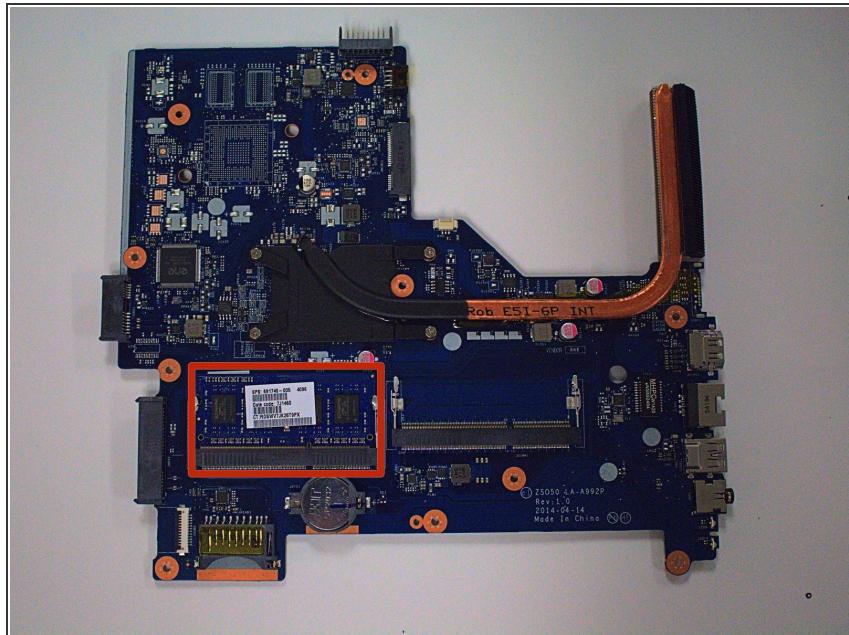

- Put the motherboard on a hard, flat surface to avoid damaging it.
- The RAM is marked in red.

Step 20

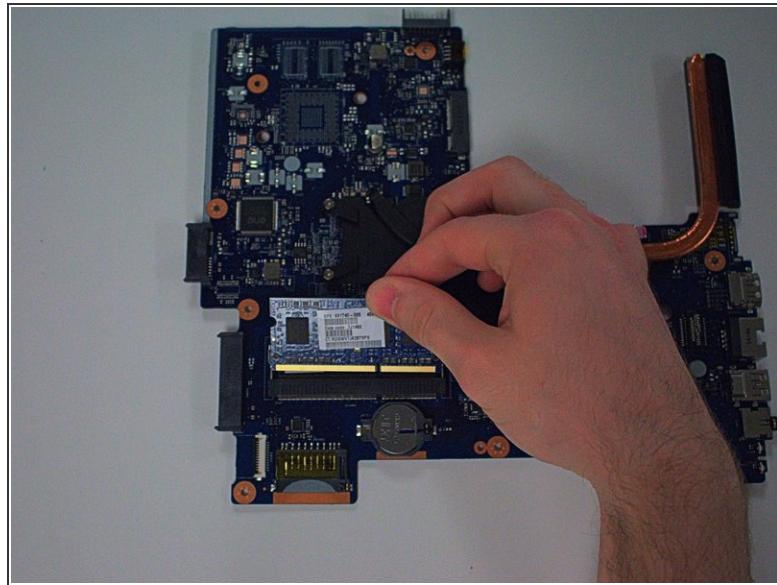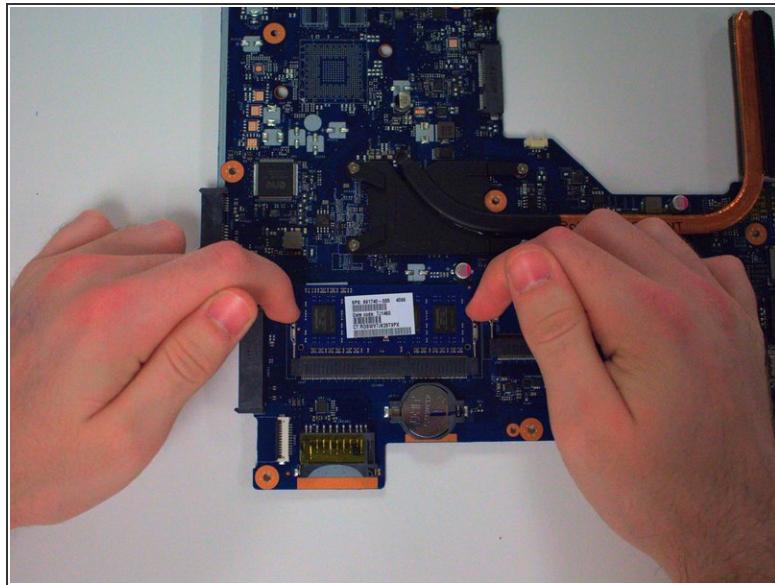

- There are two switches holding the RAM in place that need to be moved.
- After the switches are released, simply pull the RAM up as shown.

To reassemble your device, follow these instructions in reverse order.