



HP ZBOOK 15 G5 LCD Replacement

For crack or non responsive LCD displays

Written By: Ved Pitre




Step 1 — Opening the Bottom Panel




- Find the bottom panel locking mechanism
- Move the switch to the right to unlock and slide it in a downwards fashion

Step 2 — Removing the Battery

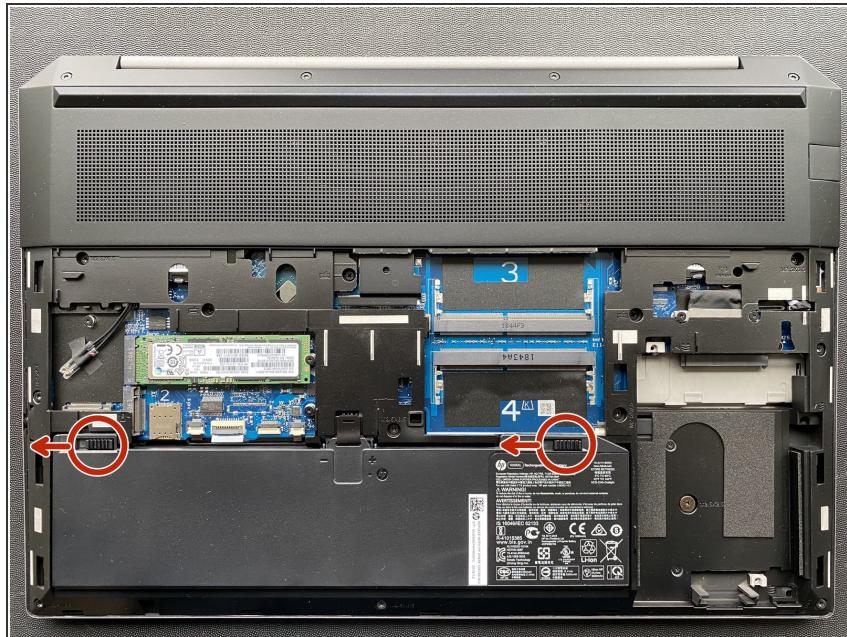


- Slide the battery latches to the right to loosen the battery
- Remove the battery and place it to the side

Step 3 — Removing the Bottom Case

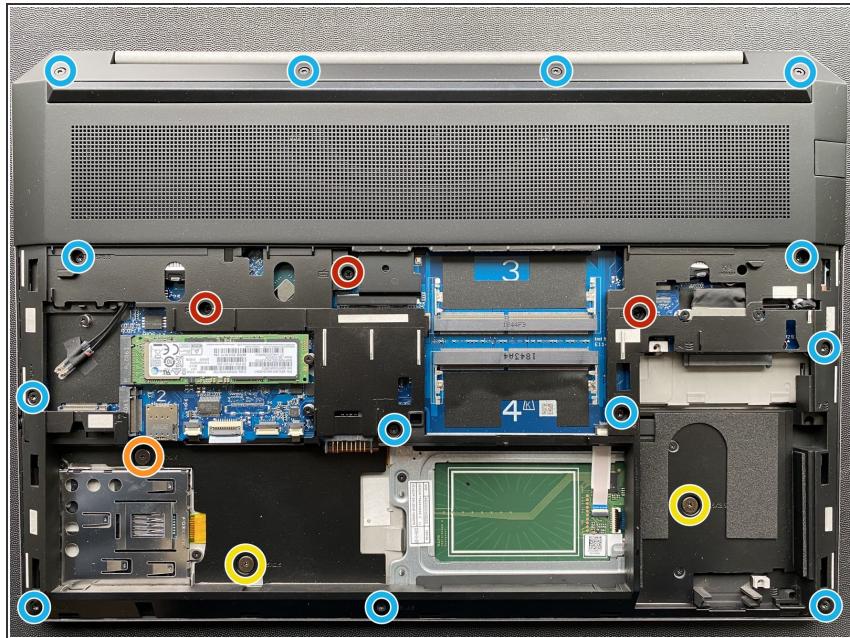

- Remove the keyboard screws
- Remove these screws with a T8 screwdriver
- Remove these screws with a philips screwdriver
- Once they are removed, carefully lift up the bottom case

Step 4 — Removing SSD and LCD Connector Cover

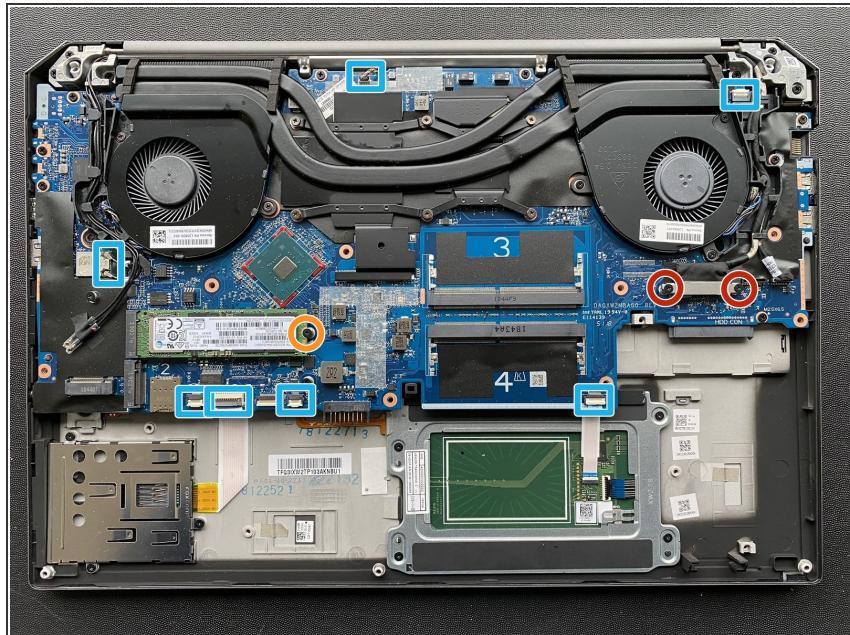

- Unscrew SSD screw and slide the SSD out
- Remove these screws and place the LCD connector cover to the side
- Disconnect all of the motherboard connectors

Step 5 — Removing the LCD



- Unscrew the 6 LCD screws to the top left and right
- Once removed, carefully remove the LCD

Tip: Remove two screws from each side and then place the laptop on its side. Unscrew the final two and separate the LCD and Top Case

Step 6



- Screw the new LCD in and make sure to connect all of the LCD connectors
- Screw the bottom case back onto the laptop
- Connect the battery and put the battery cover back into place

Once the repair had been done. Call the user and let them know their laptop is ready for pick-up