



HP ZBook 15 Battery Replacement

This guide will show you how to remove the battery from the laptop.

Written By: Grant Terris



INTRODUCTION

This replacement guide will demonstrate how to take the battery out of the laptop. The battery must be removed before any other work can be done to the laptop. This guide is useful if [the battery doesn't last long](#) or [the computer won't charge](#) and a new battery is necessary.

Step 1 — Battery



- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.