


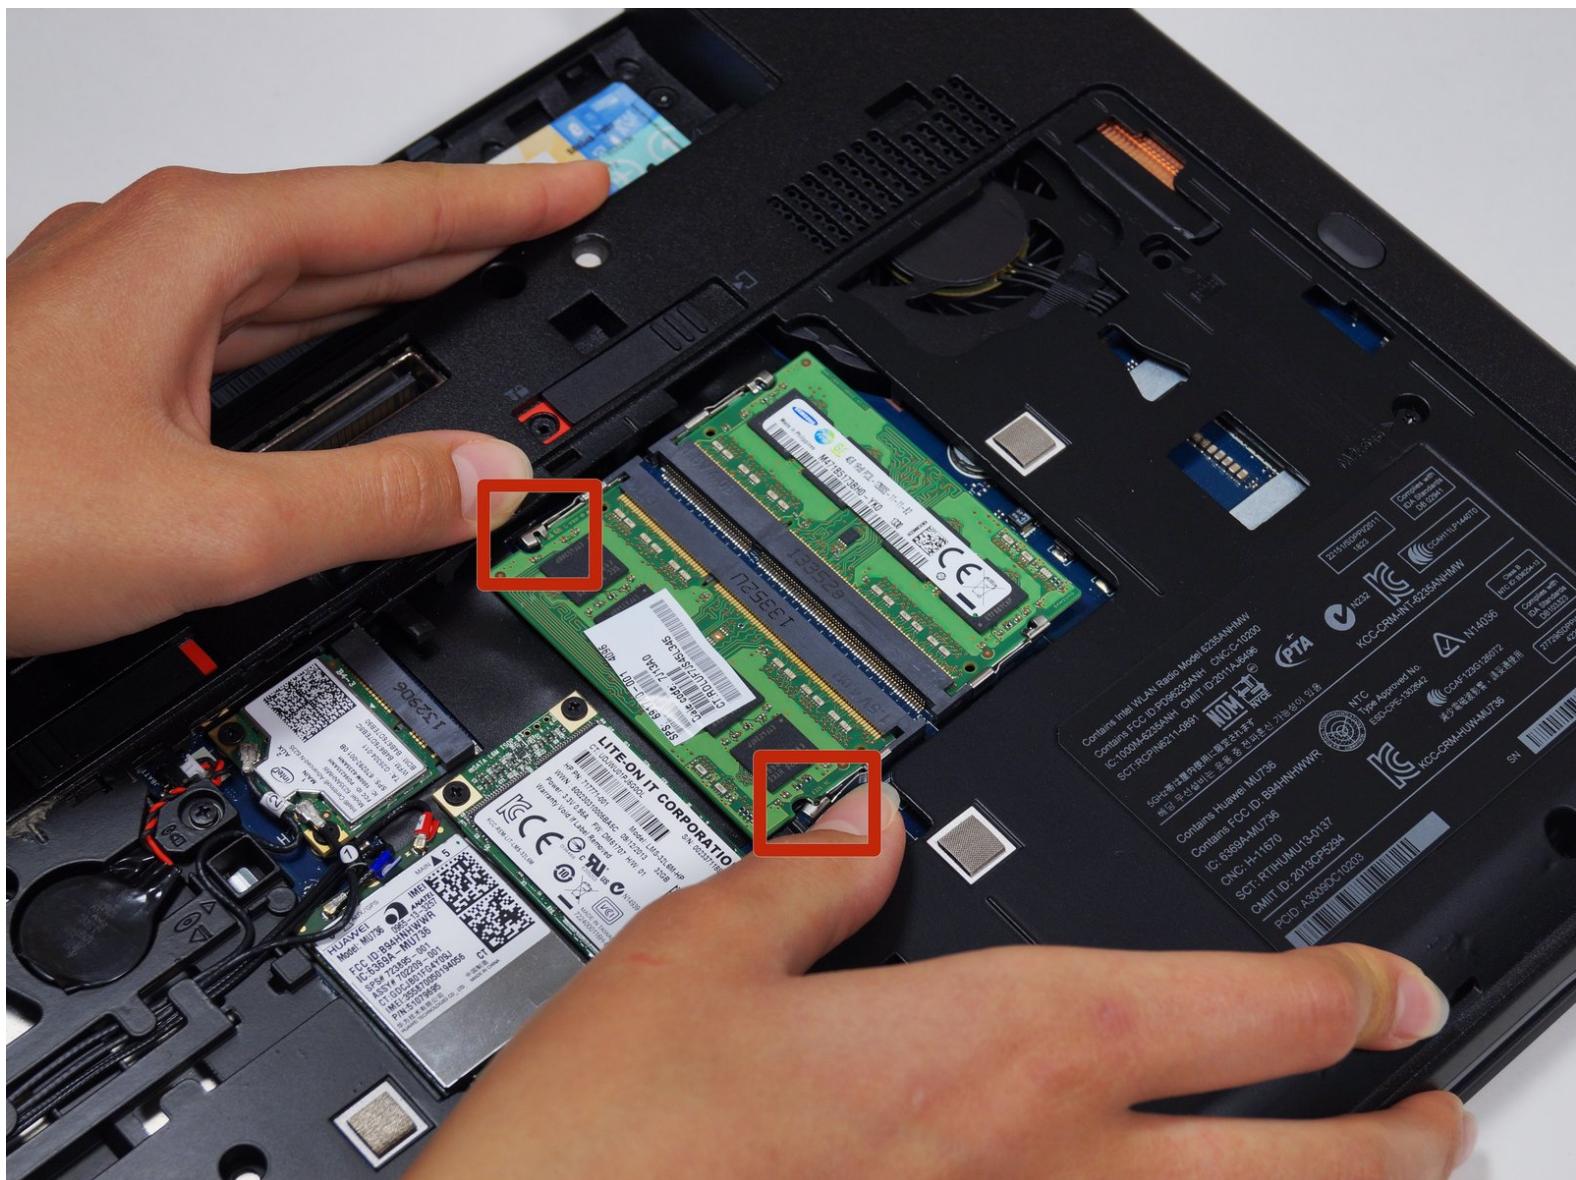

HP ZBook 15 RAM Replacement

This guide will demonstrate how to remove the RAM cards from the laptop.

Written By: Grant Terris



INTRODUCTION

If your computer is running slower than usual, you may be overreaching its RAM capabilities. [Here](#) is some more information about what may be slowing down your computer. If you decide you need to replace or upgrade your RAM cards, follow this replacement guide!

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery




- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Back Cover



- Slide the right lever firmly to the right.
- Slide the cover towards yourself to remove it.

Step 3 — RAM

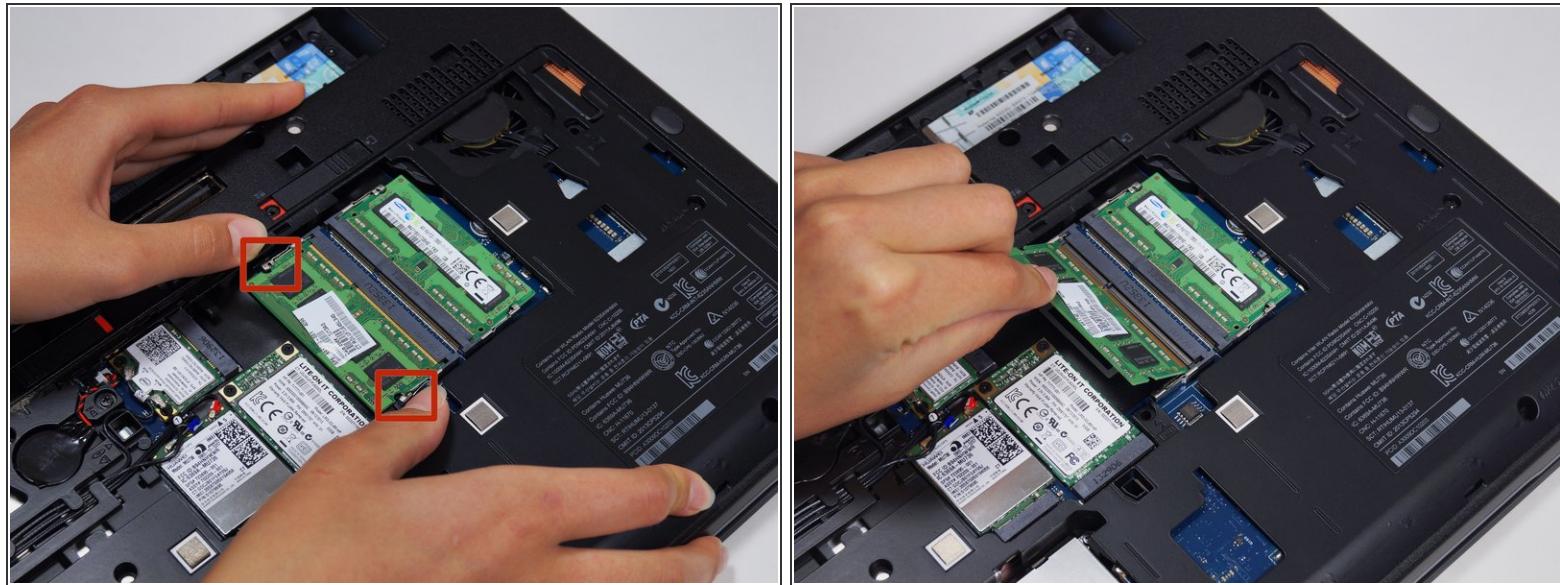

(i) Make sure the laptop is oriented bottom-up.

- Pull the clips away from the RAM card and the module will pop out.
- Lift the module out and repeat for the other RAM card.

Step 4



- Flip the laptop over and remove the other two modules.

To reassemble your device, follow these instructions in reverse order.