



# HP dv5-1125nr RAM Replacement

This guide will show you how to access the RAM.

Written By: Nick Loey



## INTRODUCTION

Many laptop issues trace back to a faulty RAM card. Luckily your memory is fairly easy to replace, just follow this guide!

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



- **Ensure your computer is shut down.**  
Removing the battery while the laptop is still on may corrupt your files. Remove any power adapters and cords connected to the laptop body.
- **Slide the switch to the left until the release clicks.**

## Step 2




- **Remove the battery.**
- **The release switch may need to be held down while removing the battery.**

## Step 3 — RAM



- Remove the one 4mm Phillips screw from the RAM cover using a Phillips #00 screwdriver.

## Step 4

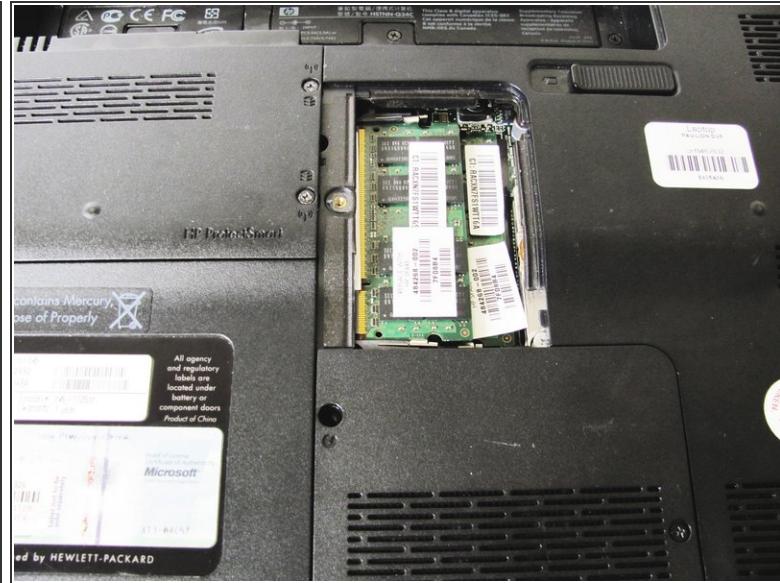

- Remove the RAM cover to reveal the module's underneath.

## Step 5



**⚠** Make sure to ground yourself before touching the RAM modules; they are very sensitive to static electricity.

- Push the two metal tabs on the side of the RAM module outwards, towards the battery and CMOS compartments (up and down).
- Once the module is released, gently pull the module upwards.
- Repeat for the RAM module underneath the first one.

To reassemble your device, follow these instructions in reverse order.