



# HP iPAQ H2200 Battery Replacement

Written By: Tyler Andrews



## INTRODUCTION

The purpose of this guide is to instruct the reader on how to remove and replace the battery of the HP iPAQ H2200 device.

## Step 1 — Battery



- Press and slide the battery cover tab to remove battery cover.

## Step 2



- Pull on the black tab to lift the battery out of the battery compartment.

To reassemble your device, follow these instructions in reverse order.