



HP iPAQ HW6515 Flash LED Bulb Replacement

This guide will give instructions on how to install an LED bulb for the camera's flash.

Written By: Steven Vo



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)

Step 1 — Battery



- Flip the HP iPAQ HW6515 over with the screen facing down.
- Take the back cover off by pressing on the small silver button while pulling back then up on the case.
- Place the back of the case aside for now.

Step 2



- Remove the battery by pulling up on the black tab.

Step 3 — Flash LED Bulb



- Unscrew the four screws using the T6 hexagonal star screwdriver.
- Unscrew the middle screw using the Phillips 00 screwdriver.


(i) "Warranty VOID if broken" sticker might be covering the middle screw, if this is the case, peel it off to reveal the screw.

Step 4




- Use the plastic opening tool to pry apart the covers along the bottom of the phone.
- Slide the plastic opening tool along the seam until the two halves of the case separate.

Step 5

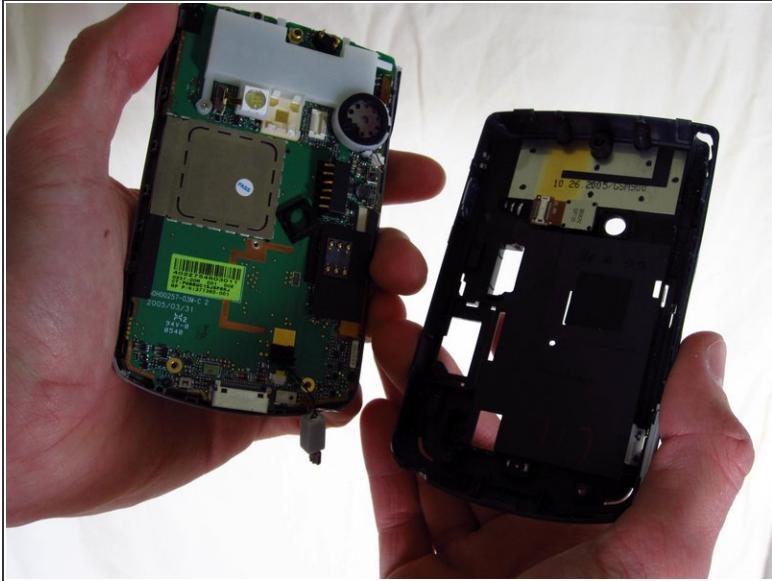

⚠ Unplug the sensor wire that connects the two halves of the case before pulling the two halves apart. Not doing so will damage the sensor wire.

Step 6

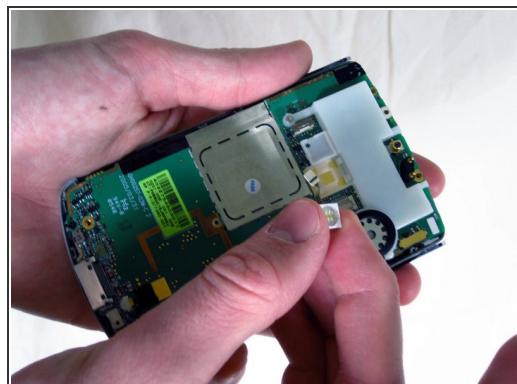

- Gently pull off the black rubber square covering the LED light.
- The LED is now exposed.
- Wedge the plastic opening tool under the LED to pop it out and expose its wire.
- Using your index finger and thumb, unplug the wire from the phone and remove the LED.

To reassemble your device, follow these instructions in reverse order.