



HP iPAQ h4155 Battery Replacement

This guide will demonstrate how to replace the HP iPAQ h4155 battery.

Written By: John Pagliero



INTRODUCTION

This guide will illustrate how to correctly remove and replace the battery of the iPAQ h4155.

Step 1 — Battery



- Slide the silver release tab up and simultaneously lift the cover up from the left side.

Step 2



- Push the tab from left to right to remove the cover.

Step 3



- Now lift the battery up and away from the device to remove it.

To reassemble your device, follow these instructions in reverse order.