




HP x2 10-p010wm Speaker Replacement

How to replace speakers on the HP x2 10-p010wm.

Written By: Nathan Ojala

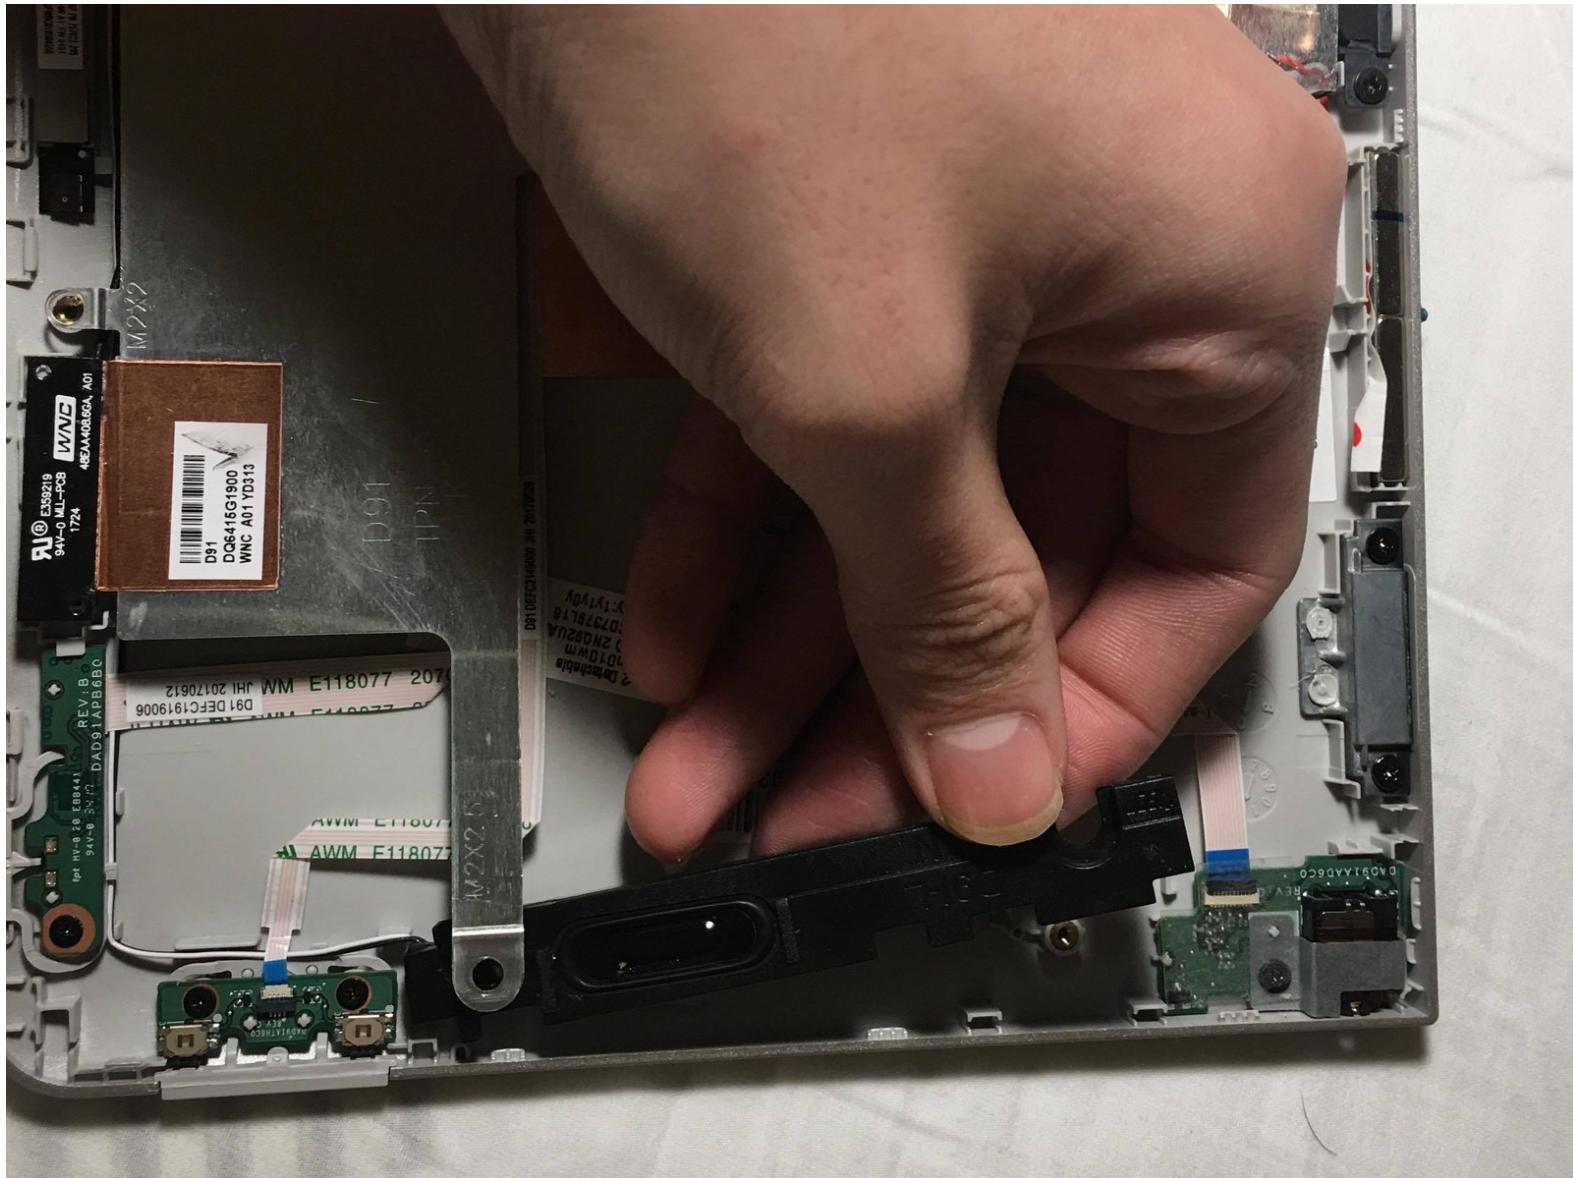

INTRODUCTION

Model Number : HP x2 10-p010wm


If sound is not coming out of your device or the sound is distorted, it is a sign that you need to replace your speakers

This guide will show you how to take apart the screen in order to access to its speakers. But we recommend you to check our [troubleshooting page](#).

TOOLS:


- Metal Spudger (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery

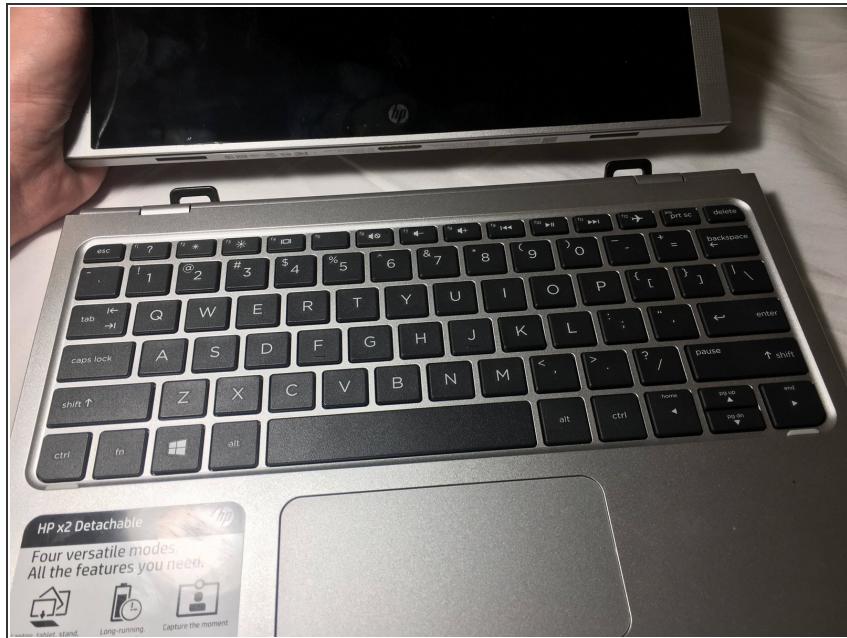


- Pull the screen away from the keyboard.

Step 2

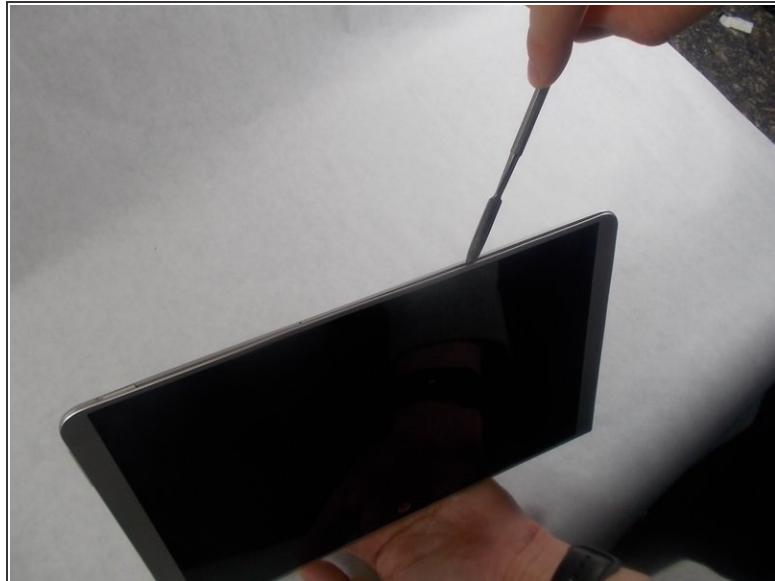

- Insert a spudger into the space between the screen and computer and gently pry the two pieces apart. Continue this around the whole screen.

Step 3

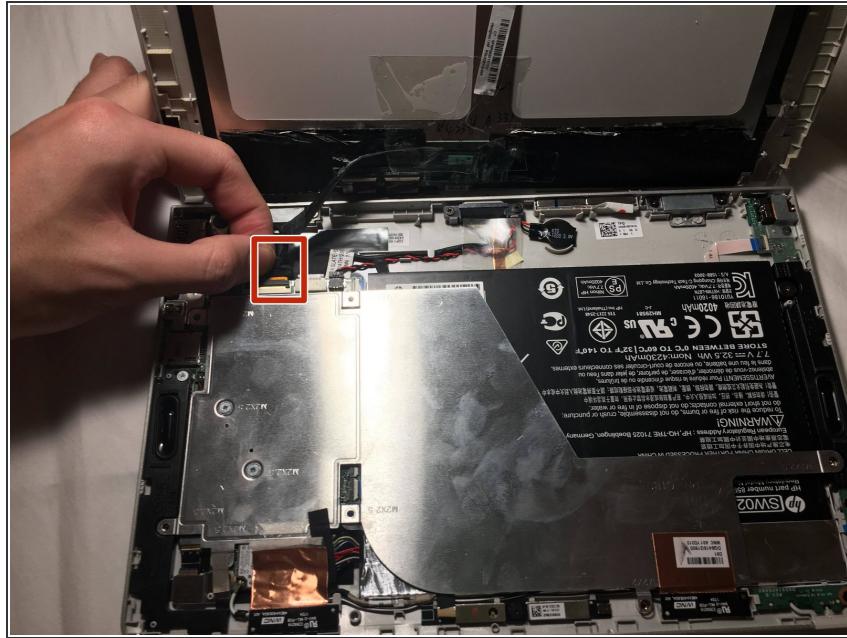

- Slowly disconnect the thin wire attaching the screen to the rest of the computer by holding one end and sliding it down.


 Do not pull up too hard; slowly slide it towards the screen.

Step 4



- Remove the eight 4mm Phillips #00 screws from the metal plate.

Step 5

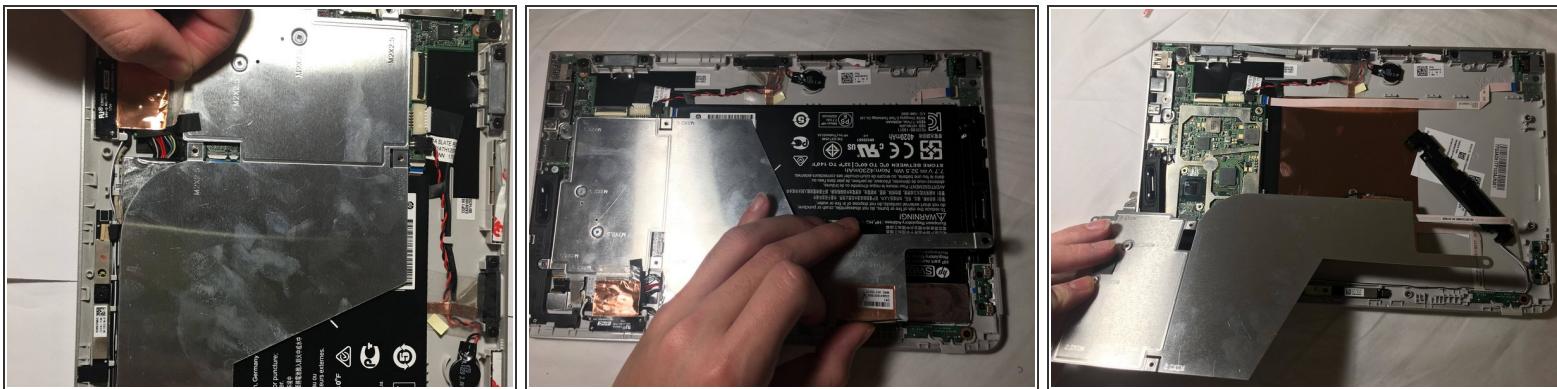


- Slowly peel up any tape securing the wire to the metal cover.
- Remove the metal cover to access the battery.

Step 6



- Remove the 4mm screw on the side.

Step 7

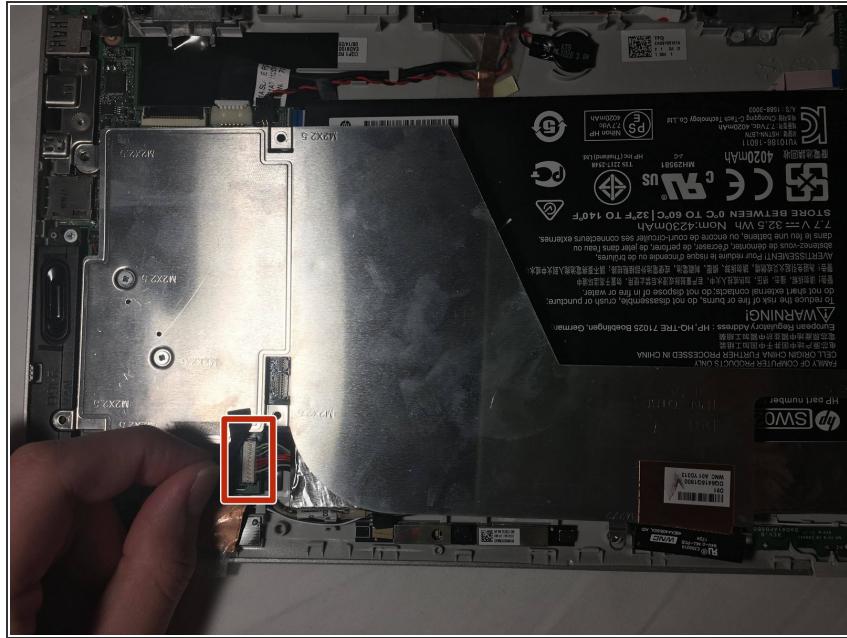



- Remove the black tape.
- Pull the battery connector towards the battery to disconnect it from its socket.

Step 8



- Remove the battery.

Step 9 — Speaker

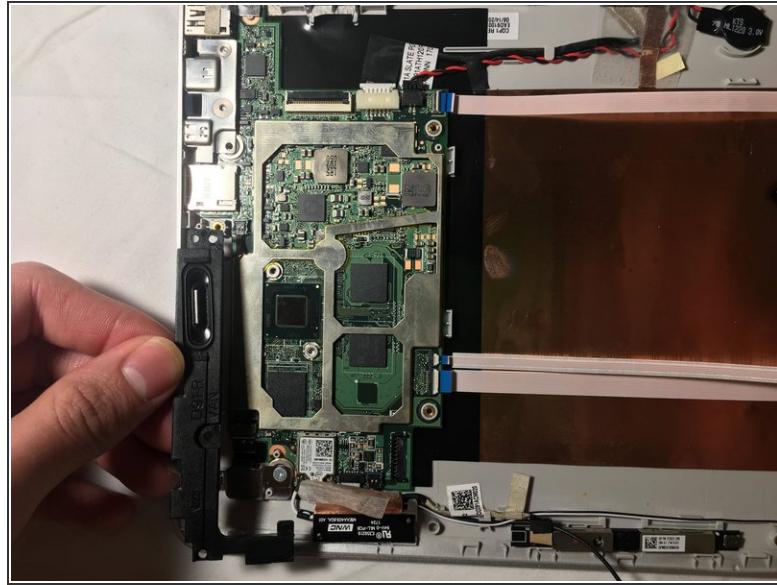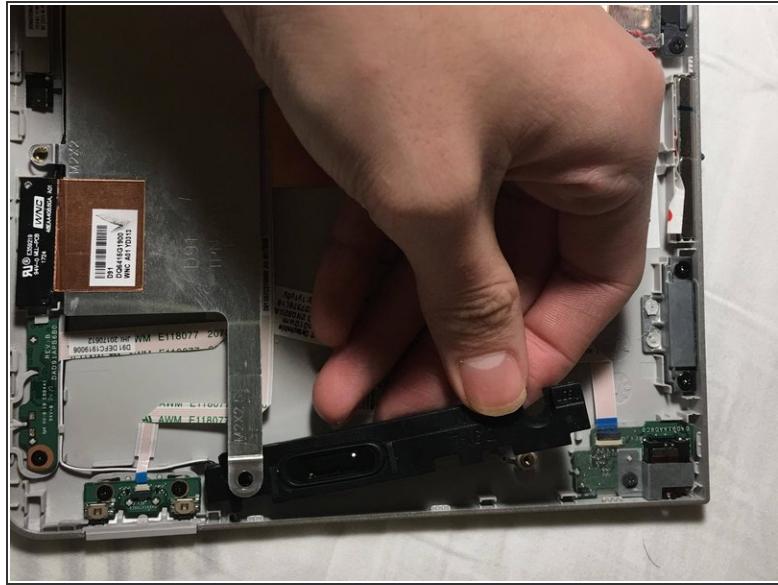

- Remove speakers on both sides.

To reassemble your device, follow these instructions in reverse order.